

Bioclass iC 66

Biomass boiler

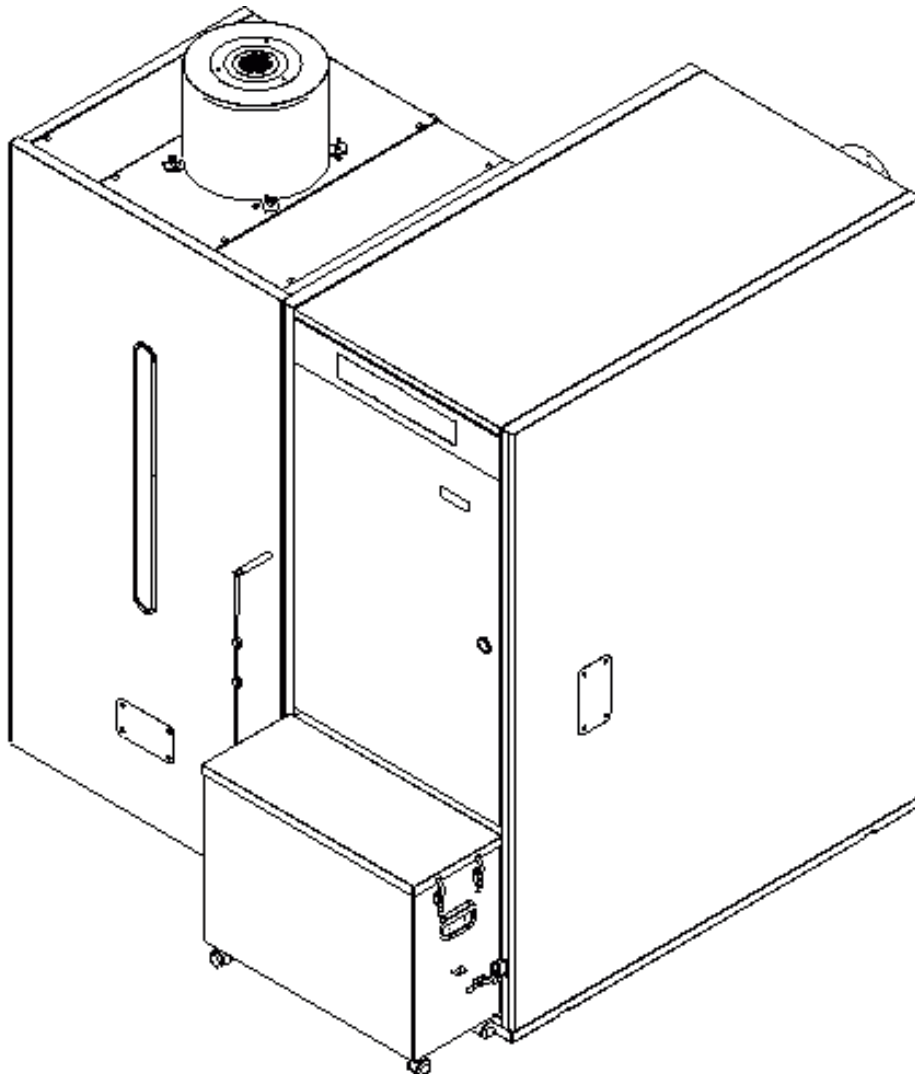

Thank you for choosing a **DOMUSA TEKNIK** heating boiler. Within the product range offered by **DOMUSA TEKNIK** you have chosen **BioClass iC 66** model. With a suitable hydraulic installation and with a correct fuel, this boiler will provide the ideal level of comfort for your home.

This manual forms an essential part of the product and it must be given to the user. We recommend you read the warnings and recommendations in the manual carefully, as they contain important information on the safety, use and maintenance of the installation.

These boilers must be installed by qualified personnel only, in accordance with the legislation in force and following the manufacturer's instructions.

Commissioning of these boilers and any maintenance operations must only be carried out by **DOMUSA TEKNIK's** Authorised Technical Assistance Services.

Incorrect installation of these boilers could result in damage to people, animals or property, and the manufacturer will hold no liability in such cases.


DOMUSA TEKNIK informs all parties concerned that, in compliance with section 1 of the first additional provision of Law 11/1997, the responsibility for delivering packaging waste or used packaging for its proper environmental management will be that of the final owner of the product. At the end of its useful life, the product must be taken to a selected collection point for electrical and electronic equipment or must be returned to the distributor at the time of purchasing a new equivalent appliance. For more detailed information on the collection schemes available, contact either the collection facilities of the local authority or the distributor where the purchase was made

ÍNDICE

1 LIST OF COMPONENTS	6
2 INSTALLATIONS INSTRUCTIONS	8
2.1 LOCATION	8
2.2 HYDRAULIC INSTALLATION.....	9
2.3 INSTALLING A SANIT HOT WATER TANK (OPTIONAL).....	10
2.4 FUEL.....	11
2.5 INSTALLING THE HOPPER.....	12
2.6 INSTALLATION OF A ROOM TEMPERATURE SENSOR OR THERMOSTAT	13
2.7 ELECTRICAL CONNECTION	14
2.8 COMBUSTION PRODUCT REMOVAL.....	14
2.9 PRESSURE DROP CURVES.....	15
2.10 INSTALLATION WITH A BT BUFFER TANK (OPTIONAL).....	15
2.11 INSTALLATION WITH A BT-DUO BUFFER TANK (OPTIONAL)	20
2.12 INSTALLATION WITH WIRELESS CONFORT IC AND/OR PROBE IC DEVICES (OPTIONAL).....	21
3 COMMISSIONING OF THE BOILER	25
3.1 PRIOR WARNINGS	25
3.2 FILLING THE INSTALLATION	25
3.3 INITIAL CALIBRATION OF THE FEED AUGER	25
3.4 COMMISSIONING.....	25
3.5 INSTALLATION DELIVERY	26
4 DIGITAL DISPLAY	27
5 OPERATION.....	30
5.1 "ONLY HEATING" OPERATION	30
5.2 OPERATING WITH A SANIT DHW TANK (OPTION)	30
5.3 BOILER TEMPERATURE SET POINT SELECTION.....	31
5.4 DHW TEMPERATURE SET POINT SELECTION (WITH DHW TANK INSTALLED ONLY).....	31
5.5 SELECTING THE SET POINT TEMPERATURE OF THE BUFFER TANK (ONLY WITH BUFFER TANK).....	32
5.6 FUNCIONAMIENTO SEGÚN LAS CONDICIONES CLIMÁTICAS EXTERIORES OTC (OPCIONAL)	32
6 OPERATION WITH A BT BUFFER TANK (OPTIONAL)	33
6.1 OPERATION WITH A TEMPERATURE SENSOR IN THE BT BUFFER TANK (P.08 = 1 OR 2)	33
6.2 OPERATION WITH A CONTROL THERMOSTAT IN THE BT BUFFER TANK (P.08 = 3 OR 4).....	34
7 OPERATION WITH A BT-DUO BUFFER TANK (OPTIONAL)	35
8 "iCONNECT" CONNECTIVITY	36
8.1 REQUIREMENTS FOR CONNECTING TO iCONNECT.....	36
8.2 BOILER REGISTRATION IN iCONNECT.....	37
8.3 DESCRIPTION OF THE iCONNECT APPLICATION	38
8.4 iCONNECT App Map	38
9 OPERATING WITH LAGO FB OT+ REMOTE CONTROL (OPTIONAL).....	40
10 CONFORT IC WIRELESS DEVICES AND SONDA IC (OPCIONAL)	41
11 USER MENU.....	42
11.1 ASHTRAY STATUS	44
12 SETUP MENU	45
12.1 TIMERS PROGRAMMING PROCESS	46
12.2 HEATING TIME SCHEDULES.....	48
12.3 BOILER TIMER PROGRAMMING.....	48
12.4 PROGRAMMING THE FUEL SUCTION SYSTEM.....	48
12.5 DHW RECIRCULATION FUNCTION TIMER PROGRAMMING (DHW TANK OPTION ONLY)	48
12.6 TIME SETTING	49
12.7 EMPTY ASH BOX NOTICE.....	49
12.8 MANUAL SETTING OF FEED AUGER CALIBRATION	50
1.1 REGISTRATION OF THE BOILER IN iCONNECT	50
1.2 SCREEN CONTRAST SETTING.....	50
13 CALIBRATION MENU	51
13.1 FEED AUGER FILLING	52
13.2 FEED AUGER CALIBRATION	53
13.3 MANUAL SETTING OF FEED AUGER CALIBRATION	54
13.4 MANUAL ASH CLEANING ACTIVATION	54


13.5	MANUAL CIRCULATION PUMPS ACTIVATION.....	54
13.6	PAIRING AND UN-PAIRING OF WIRELESS TEMPERATURE CONTROL DEVICES.....	55
14	TECHNICAL MENU.....	57
14.1	ENTRY AND SET THE ACCESS CODE ("COD", P.25)	61
15	BOILER'S SETUP PARAMETERS	61
15.1	BOILER MODEL (P.01).....	61
15.2	BOILER HEAT OUTPUT (P.02, P.03)	61
15.3	GENERAL FAN SPEED FACTOR (P.04).....	61
15.4	FUEL FOR IGNITION (P.05)	61
15.5	FUEL CONSUMPTION (P.06).....	61
15.6	MANAGING BT AND BT-DUO BUFFER TANKS (P.08, P.28, P.50)	62
15.7	AUXILIARY PARAMETER FOR FUEL SELECTION (P.26)	62
15.8	BOILER MINIMUM TEMPERATURE MODE (P.13, P.14)	62
16	HEATING CIRCUIT'S SETUP PARAMETERS.....	63
16.1	HEATING PUMP POST-CIRCULATION TIME (P.15)	63
16.2	BOILER'S PUMP OPERATING MODE (P.18)	63
16.3	MINIMUM BOILER WATER PRESSURE (P.19)	63
16.4	TYPE OF ROOM TEMPERATURE DEVICE (P.46, P.47, P.48)	63
16.5	ROOM TEMPERATURE HYSTERESIS (P.49).....	64
16.6	ROOM TEMPERATURE CORRECTION (P.51, P.52, P.53)	64
17	DHW CIRCUIT'S SETUP PARAMETERS	65
17.1	DHW INSTALLATION MODE (P.09).....	65
17.2	DHW PUMP POST-CIRCULATION TIME (P.16).....	65
17.3	LEGIONELLA PROTECTION FUNCTION (P.17).....	65
17.4	DHW RE-CIRCULATION FUNCTION (P.20 = 2)	65
18	ADDITIONAL FUNCTIONS.....	66
18.1	TIME OF THE FUEL SUCTION SYSTEM CYCLE (P.22)	66
18.2	RESET DEFAULT VALUES (P.24)	66
18.3	PUMPS ANTI-LOCK FUNCTION	66
18.4	ANTI-FROST FUNCTION	66
18.5	BOILER PRESSURE SENSOR FUNCTION	66
18.6	CONNECTING THE LAGO FB OT+ REMOTE CONTROL	66
18.7	ROOM THERMOSTAT CONNECTION	67
18.8	CONNECTING THE ROOM SENSOR.....	67
18.9	CONNECTING THE CONFORT IC WIRELESS REMOTE CONTROL	67
18.10	CONNECTING THE SONDA IC WIRELESS TEMPERATURE SENSOR.....	68
19	MULTI-FUNCTIONAL RELAY (P.20).....	69
19.1	BOILER ALARMS EXTERNAL SIGNAL (P.20 = 1)	69
19.2	DHW RE-CIRCULATION FUNCTION (P.20 = 2)	69
19.3	AUTOMATIC WATER FILLING FUNCTION (P.20 = 3).....	69
20	SAFETY LOCK-OUTS.....	70
20.1	TEMPERATURE SAFETY LOCK.....	70
20.2	FUEL ENTRANCE TUBE OVERHEAT SAFETY CUT-OUT.....	71
20.3	LOW PRESSURE LOCK-OUT	71
21	SHUTTING DOWN THE BOILER.....	71
22	EMPTYING THE BOILER	71
23	BOILER MAINTENANCE	72
23.1	FREQUENCY OF MAINTENANCE OF THE BOILER AND CHIMNEY	72
23.2	BURNER CLEANING PROCEDURE	73
23.3	HEAT EXCHANGER CLEANING PROCEDURE.....	75
23.4	DRAINING THE CONDENSATE WATER.....	76
23.5	BOILER WATER CHARACTERISTICS.....	76
24	DIAGRAMS AND MEASUREMENTS	77
25	CONNECTIONS DIAGRAM	78
25.1	BOILER.....	78
25.2	BURNER.....	80
25.3	ELECTRICAL DIAGRAM.....	81
26	TECHNICAL DATA	82
27	ALARM CODES	84

1 LIST OF COMPONENTS

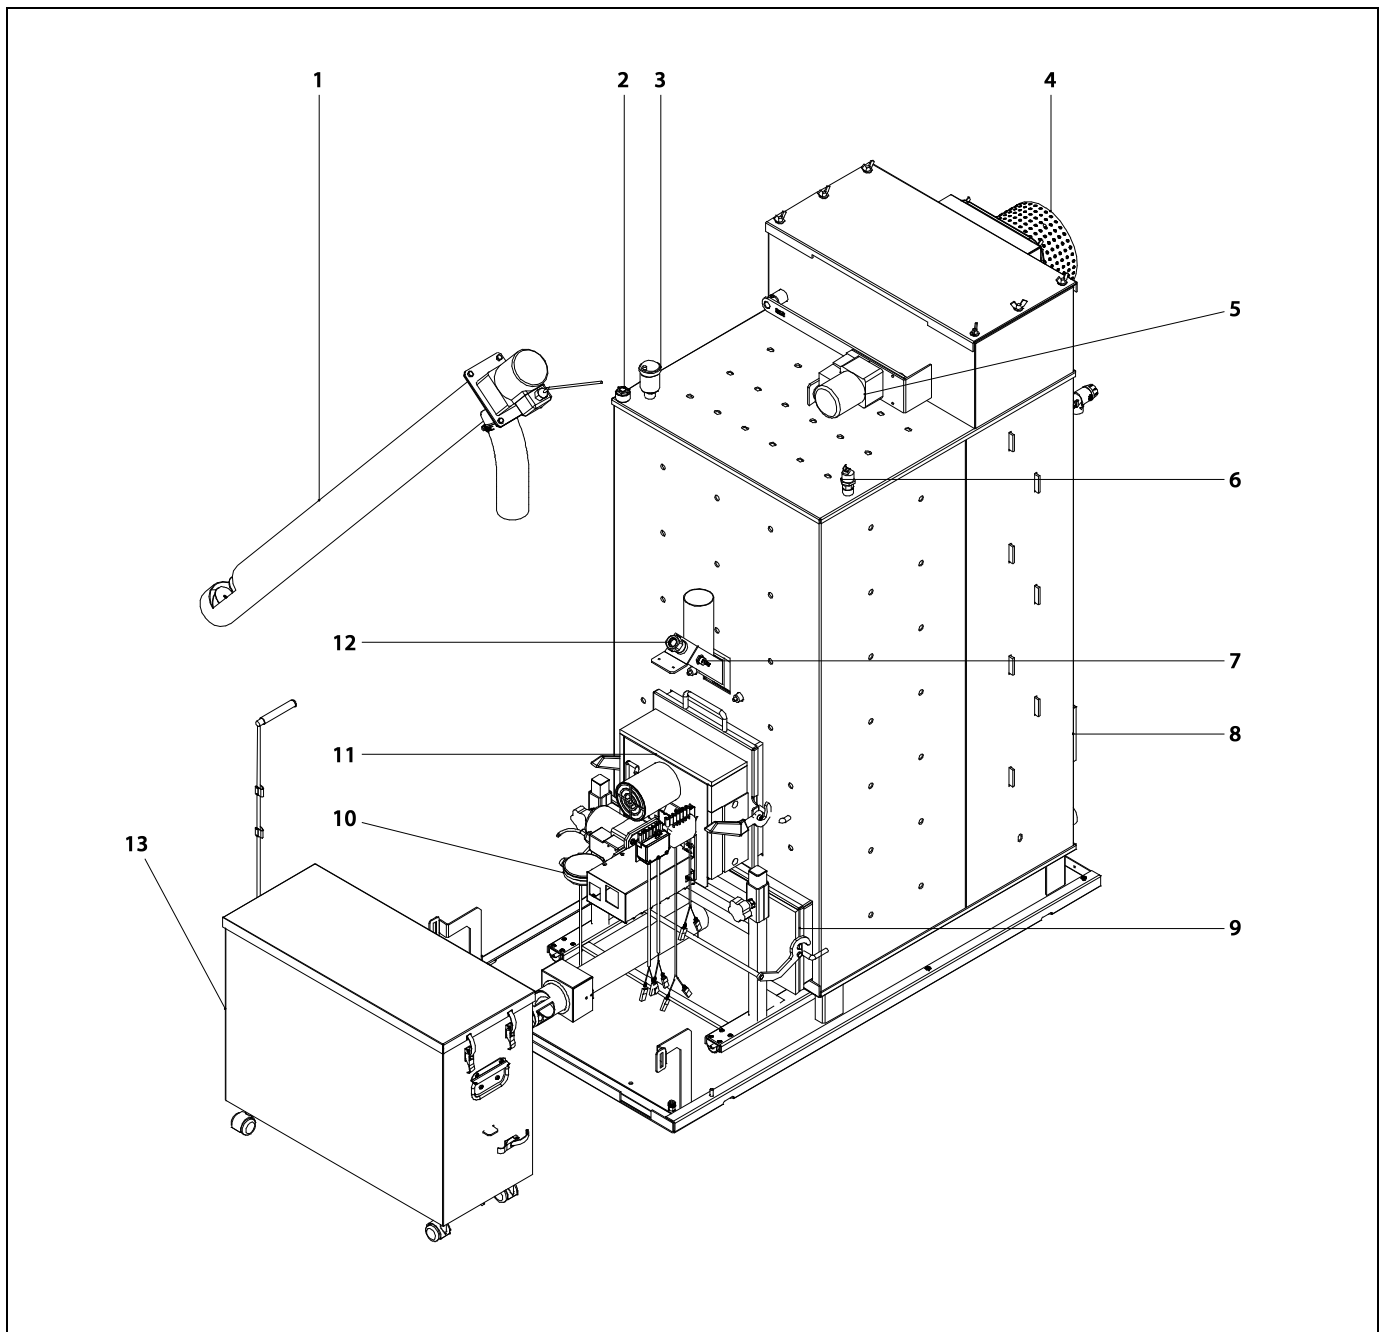

- | | |
|--------------------------------------------|---------------------------------|
| 1. Feed auger. | 8. Boiler body. |
| 2. Sensor housing. | 9. Ash drawer. |
| 3. Automatic Air vent. | 10. Air pressure sensor. |
| 4. Fan. | 11. Burner. |
| 5. Heat exchanger cleaning system. | 12. Peephole. |
| 6. Water pressure sensor. | 13. External ash box. |
| 7. Fuel entrance safety thermostat. | |

CONTROL COMPONENTS

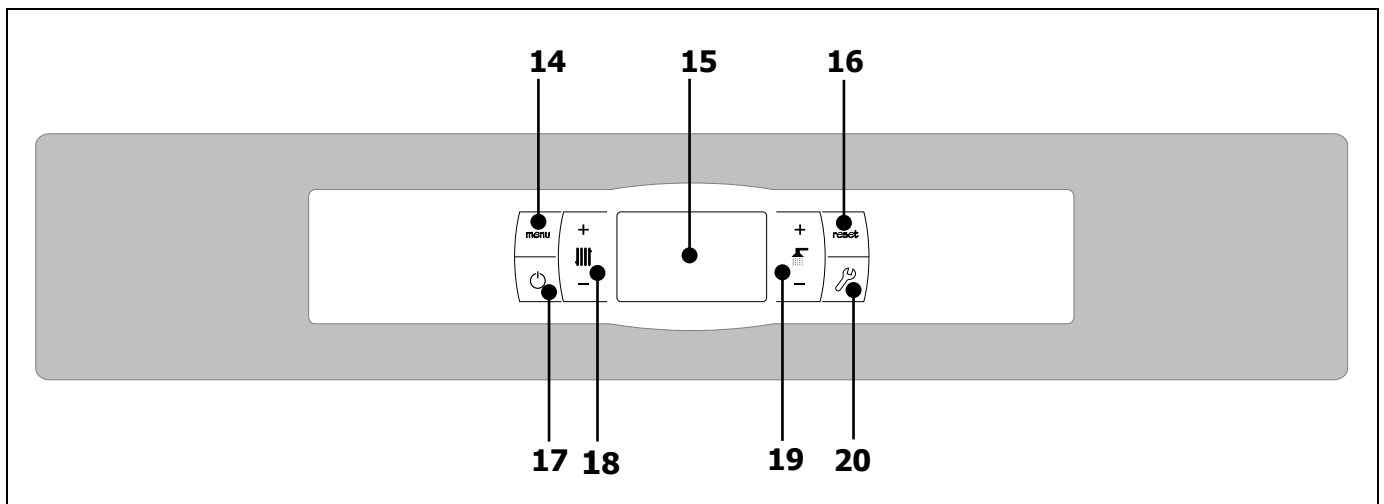

14. MENU touch button:

This button is used to access and browse through the "User Menu".

15. Digital display:

It is the main boiler functioning display, on which all the operating information, settings and values appear. This display is also used to access the appliance's user and service settings. In standard operating mode (default display), the actual boiler temperature is shown. If malfunction occurs, an alarm code will appear on the digital display instead of the temperature.

16. RESET touch button:

This button is used to restore functioning of the boiler after a lock-out situation. Also it is used to exit from any of the menus or parameters of the boiler without saving it and to return to the previous menu level.

17. ON touch button:

This button switches on and off the boiler.

18. Boiler temperature touch button:

This button is used to select the boiler set point temperature. It is also used to disable the hot water function.

19. DHW temperature touch button:

This button is used to select the desired domestic hot water set point temperature (only if a DHW tank is connected to the boiler). It is also used to disable the DHW function.

20. SET touch button:

This button is used to access and browse through the "Setup menu". Touch this button to access the settings options.

2 INSTALLATIONS INSTRUCTIONS

The boiler must be installed by personnel authorised by the Ministry of Industry, in compliance with the applicable laws and regulations.

This boiler is suitable for heating water to a temperature below boiling point at atmospheric pressure. It must be connected to a heating installation and/or a domestic hot water distribution network, which must always be compatible with its performance and power.

This appliance must only be used for the purpose for which it has been expressly designed. Any other use is considered unsuitable and therefore hazardous. The manufacturer shall not be considered liable under any circumstances for damage caused by unsuitable, erroneous or irrational use.

Remove all the packaging and check the contents are complete. In case of doubt, do not use the boiler. Contact your supplier. Keep the packaging elements out of reach of children, as they can be dangerous.

Be aware that the base of the boiler is fixed to the wooden pallet with four screws.


When you no longer wish to use the boiler, disable the parts that could be a potential source of hazard.

2.1 Location

The boiler must be installed in a sufficiently ventilated site, away from humidity. It must be located so that the air grilles on the premises are not obstructed and normal boiler maintenance is possible even if it is placed between items of furniture. One metre of free space must be left above the boiler for this purpose.

If you want to connect the boiler with the **iConnect** Internet platform or register it in the **iConnect** user application, it will also be essential to have **coverage of the home's Wi-Fi network** in the place where the boiler is located.

You must maintain the minimum distances to the surrounding components:

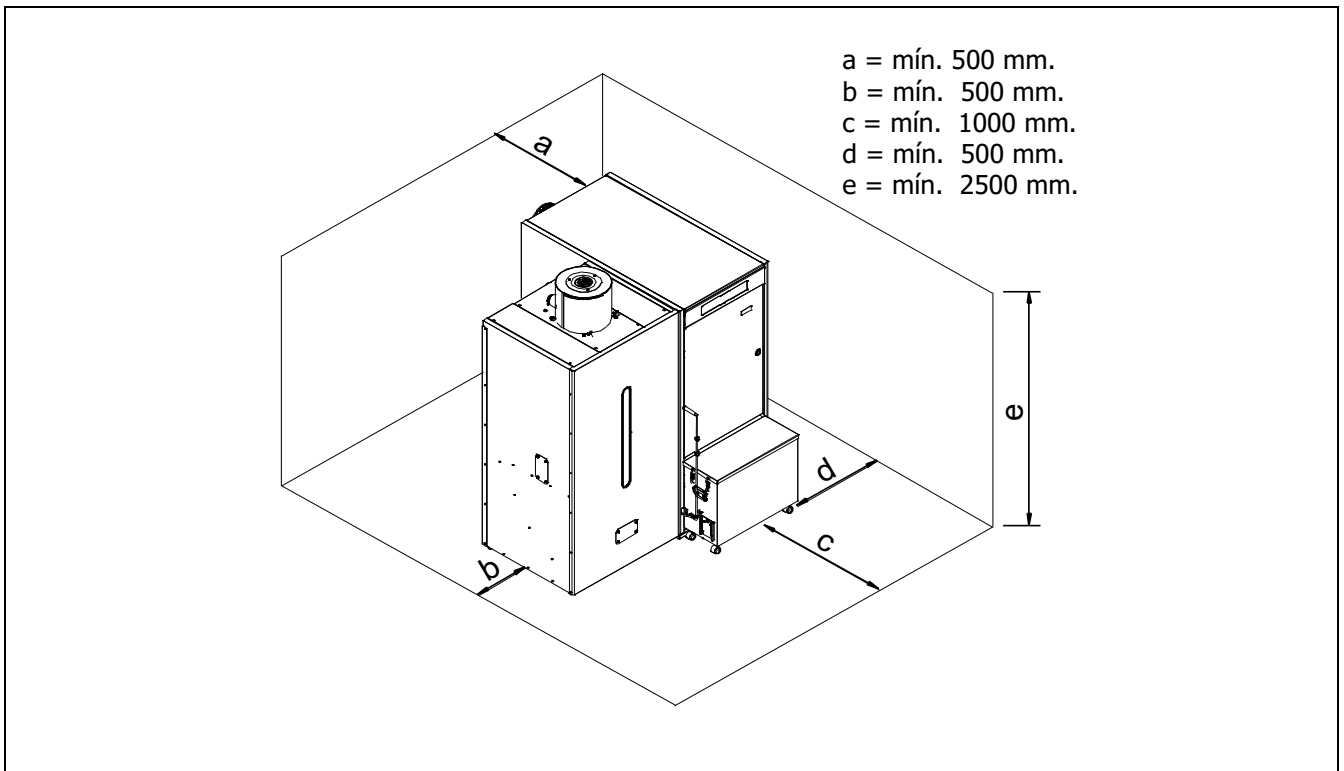

2.2 Hydraulic installation

The hydraulic installation must be made by qualified personnel. The applicable installation legislation is to be complied with, and the following recommendations should also be taken into account:


- **It is essential** to install the external circulation kit (back in protection Kit) with the boiler, to prevent any water condensation in the heat exchanger. If this requirement is not complied with, **DOMUSA TEKNIK's** guarantee of the appliance will automatically be null and void.
- The inside of the installation piping should be thoroughly cleaned before switching on the boiler.
- We recommend inserting cut-off valves between the installation piping and the boiler to simplify maintenance tasks.
- Leave a free space around the boiler for carrying out any maintenance and repair operations.
- Drain valves and suitable devices for correctly bleeding the air from the circuit during the boiler filling stage should be fitted.
- Install all the necessary safety elements (expansion vessel, safety valve, etc.) to comply with the applicable regulations for the installation.
- If the boiler is installed at a lower height than the heating installation, it is recommendable to create a siphon at the boiler outlet, to prevent the installation from heating up due to natural convection when heating is not required.

2.3 Installing a Sanit hot water tank (Optional)

For a correct electrical connection of a Sanit DHW hot water tank with **BioClass iC 66** boiler, these steps should be followed:

- Unplug the boiler from the mains power.
- Connect a DHW temperature sensor (supplied optionally) to the sensor terminal strip **J7 (Sa; terminals 16 and 17)** (see "*Connections Diagram*").
- Insert the temperature sensor bulb in the bulb-holder sheath provided on the hot water tank.
- Connect the 3-way DHW diverter valve or the hot water tank booster pump (depending on the installation, modify parameter **P.09**) to the supply terminal strip **J3 (BA; terminals 6 and N)** (see "*Connections Diagram*").
- Connect the boiler pump to the supply terminal strip **J3 (BC; terminals 5 and N)** (see "*Connections Diagram*").

The hydraulic installation for the 3-way DHW diverter valve should be made so that the heating circuit can flow through the valve when it is in rest position (not energised):

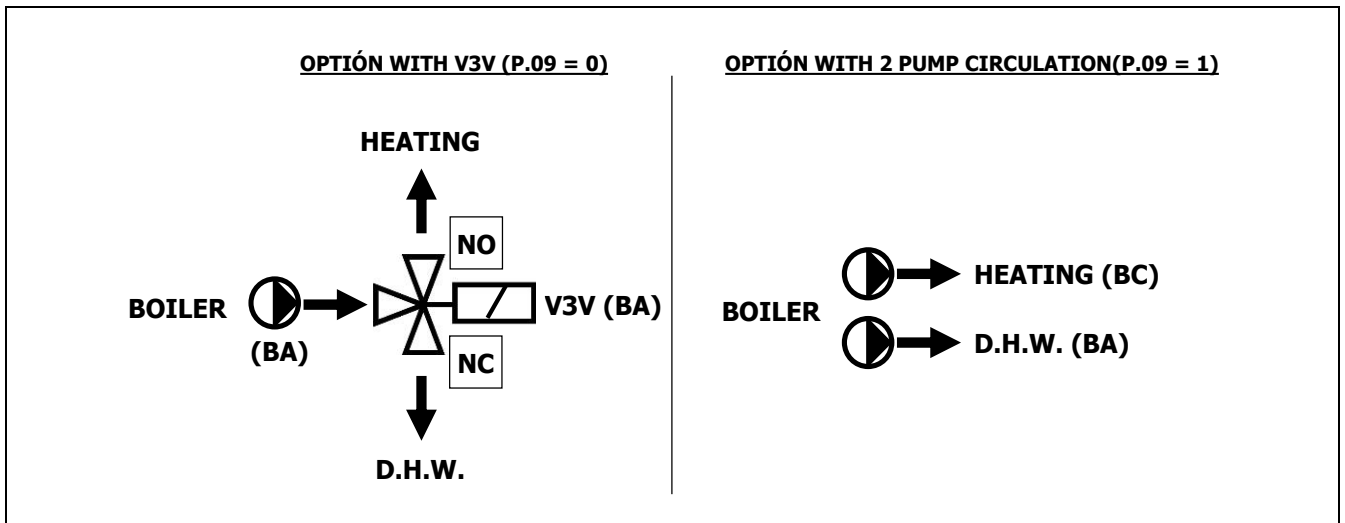

For correct hydraulic installation of the hot water tank, carefully follow the assembly and connection instructions enclosed with the same.

When the hot water tank is installed next to a buffer tank, see *"Installing a BT Buffer tank (Optional)"* in this manual to select the appropriate parameters.

2.4 Fuel


BioClass iC 66 boiler must be fuelled by **EN Plus-A1 or DIN PLUS** certified wood pellet. The DIN PLUS or EN Plus-A1 certificate assures that the fuel's humidity levels and calorific value are ideal for optimum boiler functioning. If this requirement is not complied with, **DOMUSA TEKNIK's** guarantee of the appliance will automatically be null and void.

The following aspects must be taken into account for the correct storage of fuel:

- Wood pellets should be stored in a room protected from humidity and weather. It is important to create an air gap around the wood pellet bags to ensure good ventilation. These bags should never be stored directly in contact with the ground and / or a wall.
- Wood pellets must be handled with care, as mixing them in bags can damage them.
- Wood pellets must be visually inspected before use in the boiler, to ensure the absence of dust or pellets crushed in large quantities, which could cause a boiler malfunction.

2.5 Installing the hopper

DOMUSA TEKNIK supplies a reserve tank with the boiler with a Fuel suction system for the transport and storage of pellets. It is also equipped with adjustable feet for height regulation. In addition, the tank incorporates an adjustable leg system to adjust its height.

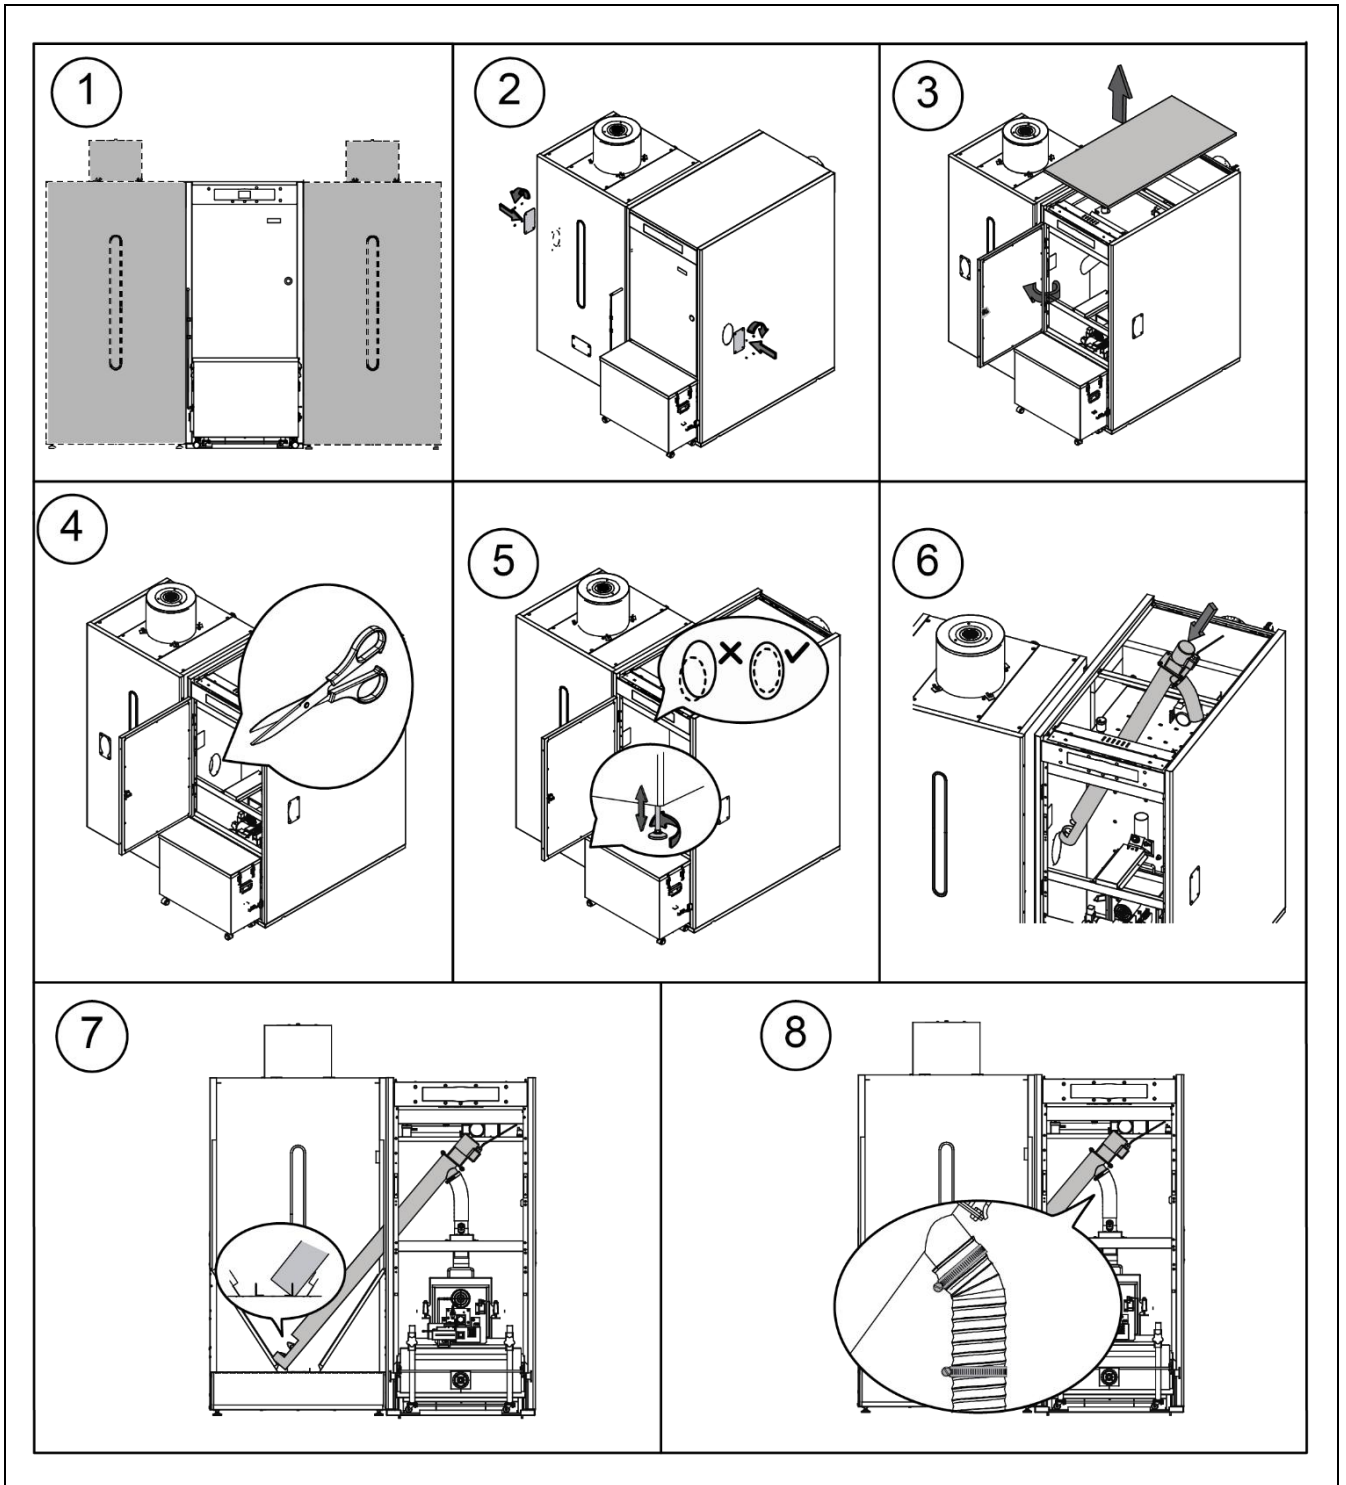

IMPORTANT: Ensure the height of the elliptical holes on the sides of the boiler and on the hopper coincide, for correct insertion of the feed auger. To do this, make the necessary adjustments for height (using the adjustment feet) and depth (correctly positioning the hopper).

2.6 Installation of a room temperature sensor or thermostat

The **BioClass iC 66** boiler has a **TA₁ (J6)** *terminal strip* (see "*Connection Diagrams*"), prepared for the connection of a device to measure the temperature conditions inside the house, which will manage the remote control of the heating circuit.

These devices will need to be suitably located within the home to be able to correctly manage the comfort of the house. It is advisable to install them in an area of the home that has regular use (living room, master bedroom, or similar), if possible avoiding rooms where heat or cold could be generated, such as kitchens, bathrooms, refrigerated larders, etc. In turn, they must be installed at a medium height and as far as possible from any source of heat or cold that could distort the temperature reading, such as windows, fireplaces, stoves, etc.

Two different types of devices can be connected to the **BioClass iC 66 boiler**:

Room sensor

The room sensor measures the temperature inside the home and transmits it to the boiler which displays it on the screen. The user will be able to select the desired setpoint temperature at any time from the "User" menu, and will have the possibility of adjusting the desired comfort times for the installation from the "Heating time programming" (see "*Configuration Menu*"). The electronic control of the boiler will manage the operating conditions to achieve the desired comfort and will modulate the boiler temperature to optimise the operation and efficiency of the heating installation.

For the correct connection of a room sensor to the **BioClass iC 66** boiler, proceed as follows:

- Unplug the boiler from the mains.
- Connect the room sensor, supplied with the boiler, to the **TA₁ (J6)** terminal strip (see "*Connection Diagrams*"). The bridge that connects the terminals of said strip must be removed first.
- Reconnect the boiler to the mains power.
- The boiler must be configured to operate with "Room Sensor", setting parameter **P.46** to **1** (see "Technical Menu").
- The electronic control allows correcting the value measured by the room temperature sensor, using parameter **P.51**. To make this adjustment correctly, first of all it should be waited a minimum of 10 minutes for the measured value to stabilize (without touching the room temperature sensor).

Room thermostat

A room thermostat connected to the boiler will activate and deactivate the heating demand depending on its setting. In addition, if it has a time programming (chronothermostat), the user can set the desired heating operating periods.

For the correct connection of a thermostat to the **BioClass iC 66** boiler, proceed as follows:

- Unplug the boiler from the mains.
- Connect the room thermostat to the terminal block **TA₁ (J6)** (see "*Connection Diagrams*"), having previously removed the bridge that connects the terminals of said strip.
- Reconnect the boiler to the mains power.
- The boiler comes factory configured for the connection of a "Room Thermostat". If for any reason this is not the case, for its correct configuration, parameter **P.46** must be set to **0** (see "Technical Menu").

2.7 Electrical Connection

The boiler is equipped for connection at 230 V~ 50 Hz. **The socket should have an appropriate earth connection.**

The terminal strip **J2** includes terminals for connecting the feed auger, whereas the terminal strip **J3** includes terminals for connecting the circulation pump of the boiler (**BC**) and the 3-way diverter valve (or circulation pump) for the optional DHW circuit. The terminal strip **J7** includes terminals for connecting a sensor for the optional DHW circuit. This sensor must be supplied by **DOMUSA TEKNIK**.

IMPORTANT: Before carrying out any work on the boiler's electrical installation, always ensure it is disconnected from the mains.

2.8 Combustion product removal


BioClass iC 66 boiler is a biomass boiler and it is essential for it to be connected to a flue, i.e. a smoke duct able to create a pressure drop (which in this case should be between 0.10 and 0.20 mbar), in compliance with the applicable laws to this regard.

The combustion product exhaust ducts must be installed by qualified personnel and must comply with the regulations in force. For the flue to create a pressure drop, the following recommendations should be taken into account:

- It should be suitably insulated.
- It should be independently located, with a separate flue for each boiler.
- It should be vertical, avoiding any angles greater than 45°.
- It should always have the same diameter. It is recommendable for it to be circular, and never any narrower than the boiler outlet.
- **It is obligatory to install a fume inspection plate with condensation collection, to remove the condensation generated in the flue.** Otherwise, the condensation may reach the inside of the boiler and cause irreparable damage, **which would not be covered by DOMUSA TEKNIK's guarantee.** The condensation pipe should lead to a drain outlet, as a large amount of water may be generated. This connection must be made in compliance with the regulations for draining off condensation water to the drain network.
- **It is recommended to install a draught stabiliser** to prevent any pressure drop variations in the flue due to atmospheric conditions, which could affect correct boiler combustion. This draught stabiliser must be installed below the fume inspection plate to prevent any leakage of combustion gases.

2.9 Pressure drop curves

For the appropriate sizing of the hydraulic installation, as well as the pump operation curves, the pressure loss caused by the boiler and the thermostatic mixing valve should be taken into account. The following graph shows the pressure loss curves for the boiler and for the boiler with the thermostatic valve (anti-condensation):

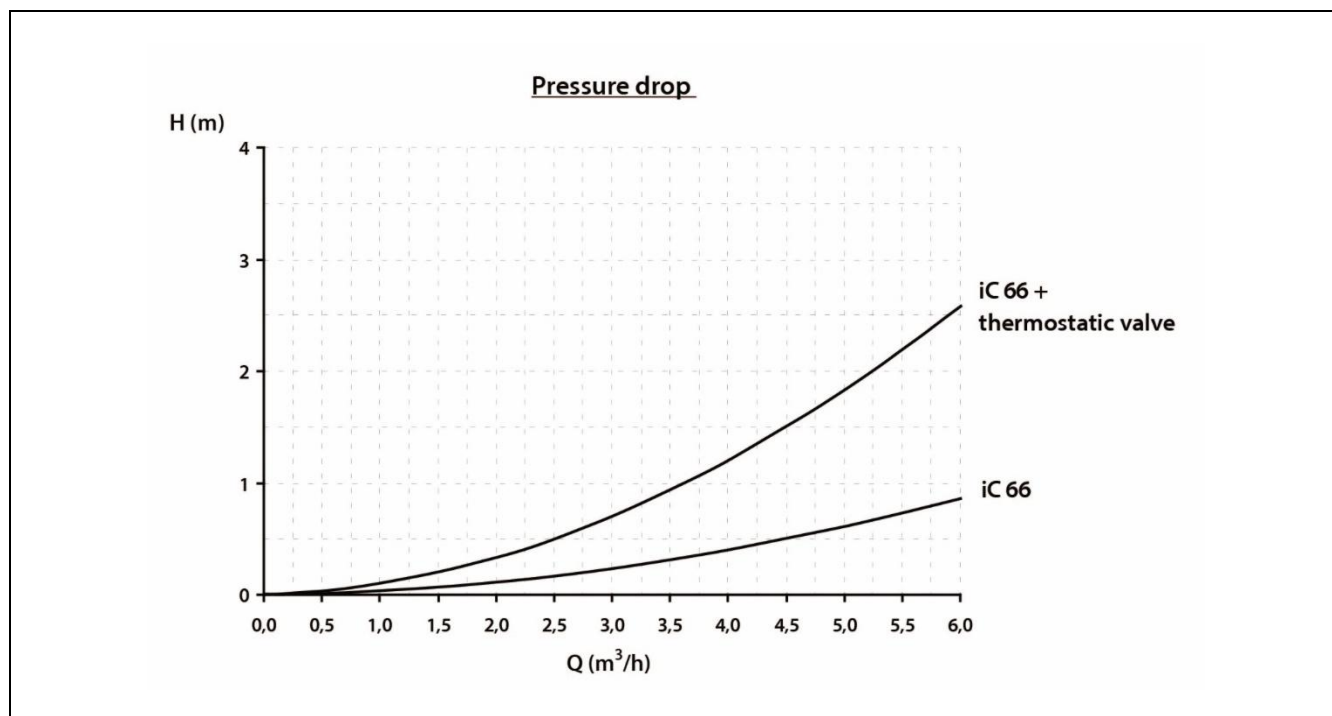

2.10 Installation with a BT Buffer Tank (Optional)

The **BioClass iC 66** boiler can be accompanied by a **BT Buffer Tank** during the installation from the wide range offered by DOMUSA TEKNIK, which may increase the benefits provided by the boiler in the heating service.


For this reason, the electronic control of the boiler is equipped with an input for a temperature sensor or a temperature thermostat (**Sbt**; terminals 18-19 on connection strip **J7**) and a circulation pump output (**Bbt**; terminals N-7 on the connection strip **J2**) dedicated exclusively to managing the heating of the buffer tank. Using these control elements of the boiler you will be able to manage 4 different modes of buffer tank hydraulic installation. The installation type will be selected using parameter **P.08** in the "Technician" menu on the control panel.

The boiler is supplied with this installation option disabled. To enable it, the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram") must be disconnected and replaced with a temperature sensor (supplied as an option by **DOMUSA TEKNIK**) or a control thermostat installed in the BT buffer tank. After disconnecting the resistance in the "Technician" menu of the control panel, parameter **P.08** must be enabled, via which you can select the installation mode desired.

The following sections describe in detail the hydraulic and electrical connection characteristics for each installation mode.

2.10.1 Installation with Sanit DHW tank after BT tank and control by temperature sensor (P.08 = 1)

In this installation mode, all heating circuits, as well as the circuit for producing DHW by accumulation, if present, must be hydraulically connected to the BT buffer tank. In other words, as shown in the following hydraulic diagram, the BT buffer tank is connected to the boiler, interposing a circulation pump (**Bbt**), and all the heating circuits of the system are connected to the BT tank. The temperature of the BT tank is controlled and managed by a temperature sensor (**Sbt**) immersed in the buffer tank and electrically connected to the boiler. The temperature sensor is optionally supplied by DOMUSA TEKNIK.

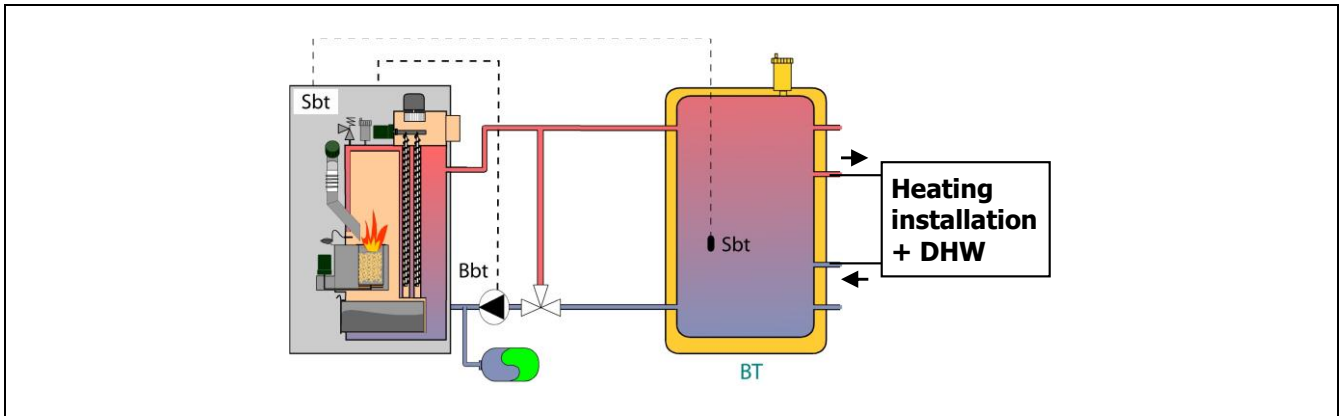


After the hydraulic installation of all the system components, proceed as follows to carry out the correct electrical connection of the BT buffer tank to the **BioClass iC 66** boiler:

- Unplug the boiler from the mains power.
- Disconnect the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram").
- Connect the BT tank temperature sensor (supplied optionally) to the sensor connection strip **J7** (**Sbt**; terminals **18** and **19**) (see "Connection Diagram").
- Insert the temperature sensor bulb in the bulb-holder sheath provided in the buffer tank.
- Connect the BT tank feed pump to the component connection strip **J2** (**Bbt**; terminals **N** and **7**) (see "Connection Diagram").
- Connect the boiler to the mains power.
- Using the control panel, access parameter **P.08** in the "Technician" menu (see "Technician Menu") and set the value to "1".
- After that, if it is necessary, set also the parameter **P.28** "BT buffer tank temperature hysteresis".

Once the hydraulic and electrical connection described above has been completed, to adjust and configure the BT buffer tank operation, carefully read the section "Operation with a BT buffer tank" in this manual.

2.10.2 Installation with Sanit DHW tank before BT tank and control by temperature sensor (P.08 = 2)

In this installation mode, all heating circuits must be hydraulically connected to the **BT buffer tank**, and the circuit for producing DHW by accumulation should be hydraulically connected to the boiler, upstream from the BT buffer tank. In other words, the BT buffer tank and the Sanit DHW tank, if present, are connected in parallel to the boiler. The DHW diverter valve and the BT tank feed pump (**Bbt**) must be installed as indicated in the following hydraulic diagrams. The temperature of the BT tank is controlled and managed by a temperature sensor (**Sbt**) immersed in the buffer tank and electrically connected to the boiler. The temperature sensor is optionally supplied by DOMUSA TEKNIK.

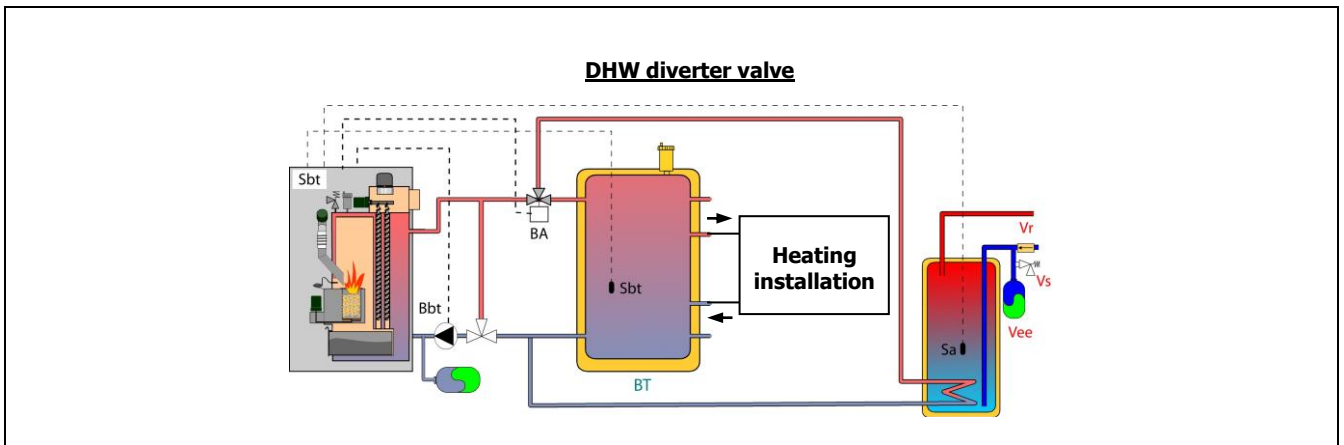

After the hydraulic installation of all the system components, proceed as follows to carry out the correct electrical connection of the BT buffer tank to the **BioClass iC 66** boiler:


- Unplug the boiler from the mains power.
- Disconnect the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram").
- Connect the BT tank temperature sensor (supplied optionally) to the sensor connection strip **J7** (**Sbt**; terminals **18** and **19**) (see "Connection Diagram").
- Insert the temperature sensor bulb in the bulb-holder sheath provided in the buffer tank.
- Connect the BT tank feed pump to the component connection strip **J2** (**Bbt**; terminals **N** and **7**) (see "Connection Diagram").
- Connect the boiler to the mains power.
- Using the control panel, access parameter **P.08** in the "Technician" menu (see "Technician Menu") and set the value to "2".
- After that, if it is necessary, set also the parameter **P.28** "BT buffer tank temperature hysteresis".

For the correct hydraulic and electrical installation of a Sanit DHW tank with a **BioClass iC 66** boiler, carefully follow the directions in the section "Installing a Sanit tank" in this manual.

Once the hydraulic and electrical connection described above has been completed, to adjust and configure the BT buffer tank operation, carefully read the section "Operation with a BT buffer tank" in this manual.

2.10.3 Installation with Sanit DHW tank before BT tank and control by temperature (P.08 = 3)

In this installation mode, all heating circuits, as well as the circuit for producing DHW by accumulation, if present, must be hydraulically connected to the BT buffer tank. In other words, as shown in the following hydraulic diagram, the BT buffer tank is connected to the boiler, interposing a circulation pump (**Bbt**), and all the heating circuits of the system are connected to the BT tank. The temperature of the BT tank is controlled and managed by a thermostat (**Tbt**) installed and immersed in the buffer tank and electrically connected to the boiler. The temperature control thermostat is not supplied by DOMUSA TEKNIK but can be purchased at any specialist central heating supplies warehouse.

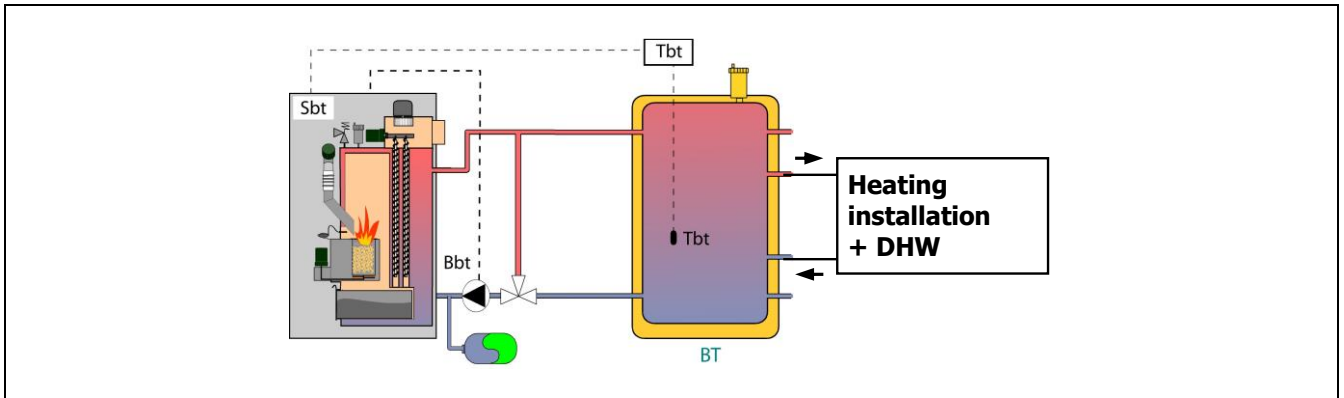


After the hydraulic installation of all the system components, proceed as follows to carry out the correct electrical connection of the BT buffer tank to the **BioClass iC 66** boiler:

- Unplug the boiler from the mains power.
- Disconnect the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram").
- Connect the NC contact (normally closed) on the BT tank control thermostat on the sensor connection strip **J7** (**Sbt**; terminals **18** and **19**) (see "Connection Diagram").
- Insert the thermostat bulb into the bulb-holder sheath provided in the buffer tank.
- Connect the BT tank feed pump to the component connection strip **J2** (**Bbt**; terminals **N** and **7**) (see "Connection Diagram").
- Connect the boiler to the mains power.
- Using the control panel, access parameter **P.08** in the "Technician" menu (see "Technician Menu") and set the value to "**3**".

Once the hydraulic and electrical connection described above has been completed, to adjust and configure the BT buffer tank operation, carefully read the section "Operation with a BT buffer tank" in this manual.

2.10.4 Installation with Sanit DHW tank before BT tank and control by thermostat (P.08 = 4)

In this installation mode, all heating circuits must be hydraulically connected to the BT buffer tank, and the circuit for producing DHW by accumulation should be hydraulically connected to the boiler, upstream from the BT buffer tank. In other words, the BT buffer tank and the Sanit DHW tank, if present, are connected in parallel to the boiler. The DHW diverter valve and the BT tank feed pump (**Bbt**) must be installed as indicated in the following hydraulic diagrams. The temperature of the BT tank is controlled and managed by a thermostat (**Tbt**) installed and immersed in the buffer tank and electrically connected to the boiler. The temperature control thermostat is not supplied by DOMUSA TEKNIK but can be purchased at any specialist central heating supplies warehouse.

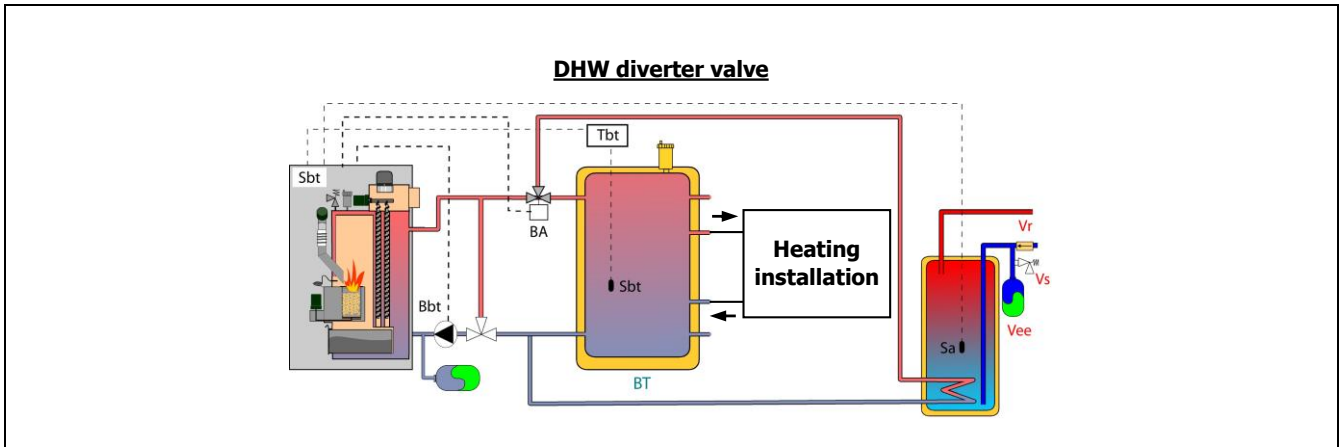

After the hydraulic installation of all the system components, proceed as follows to carry out the correct electrical connection of the BT buffer tank to the **BioClass iC 66** boiler:

- Unplug the boiler from the mains power.
- Disconnect the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram").
- Connect the **NC** contact (normally closed) on the BT tank control thermostat on the sensor connection strip **J7** (**Sbt**; terminals **18** and **19**) (see "Connection Diagram").
- Insert the thermostat bulb into the bulb-holder sheath provided in the buffer tank.
- Connect the BT tank feed pump to the component connection strip **J2** (**Bbt**; terminals N and 7) (see "Connection Diagram").
- Connect the boiler to the mains power.
- Using the control panel, access parameter **P.08** in the "Technician" menu (see "Technician Menu") and set the value to "4".

For the correct hydraulic and electrical installation of a Sanit DHW tank with a **BioClass iC 66** boiler, carefully follow the directions in the section "Installing a Sanit tank" in this manual.

Once the hydraulic and electrical connection described above has been completed, to adjust and configure the BT buffer tank operation, carefully read the section "Operation with a BT buffer tank" in this manual.


2.11 Installation with a BT-DUO buffer tank (Optional)

The **BioClass iC 66** boiler can be accompanied by a **BT-DUO Buffer Tank** during the installation from the wide range offered by **DOMUSA TEKNIK**, which may increase the benefits provided by the boiler in the heating service. This tank has a hot water storage tank inside, thereby adding the provision of DHW in addition to the buffer tank functionality. For this reason, its connection to the boiler as well as its operating configuration are specific.

For this reason the electronic control of the boiler is equipped with an input for connecting the primary control thermostat **Tcp** of the BT-DUO tank (input **Sbt**; terminals **18-19** on connection strip **J7**) and a circulation pump output (**Bbt**; terminals **N-7** on the connection strip **J2**) dedicated exclusively to managing the heating of the buffer tank. Also, for correctly managing the DHW production in the tank integrated in the **BT-DUO tank**, a DHW temperature sensor (supplied optionally) must be included in the installation.

The boiler is supplied with this installation option disabled. To enable it, the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram") must be disconnected and replaced with a temperature sensor (supplied as an option by DOMUSA TEKNIK) or a control thermostat installed in the BT buffer tank. After disconnecting the resistance in the "Technician" menu of the control panel, parameter **P.08** must be enabled, via which you can select the installation mode and appropriate functioning for this type of buffer tank.

The BT-DUO buffer tank is hydraulically connected to the boiler, interposing a circulation pump (**Bbt**), and all the central heating circuits of the system are connected to the **BT-DUO** tank. For the correct hydraulic installation of the BT-DUO tank and the feed pump **Bbt**, carefully follow the instructions in the following hydraulic diagram:

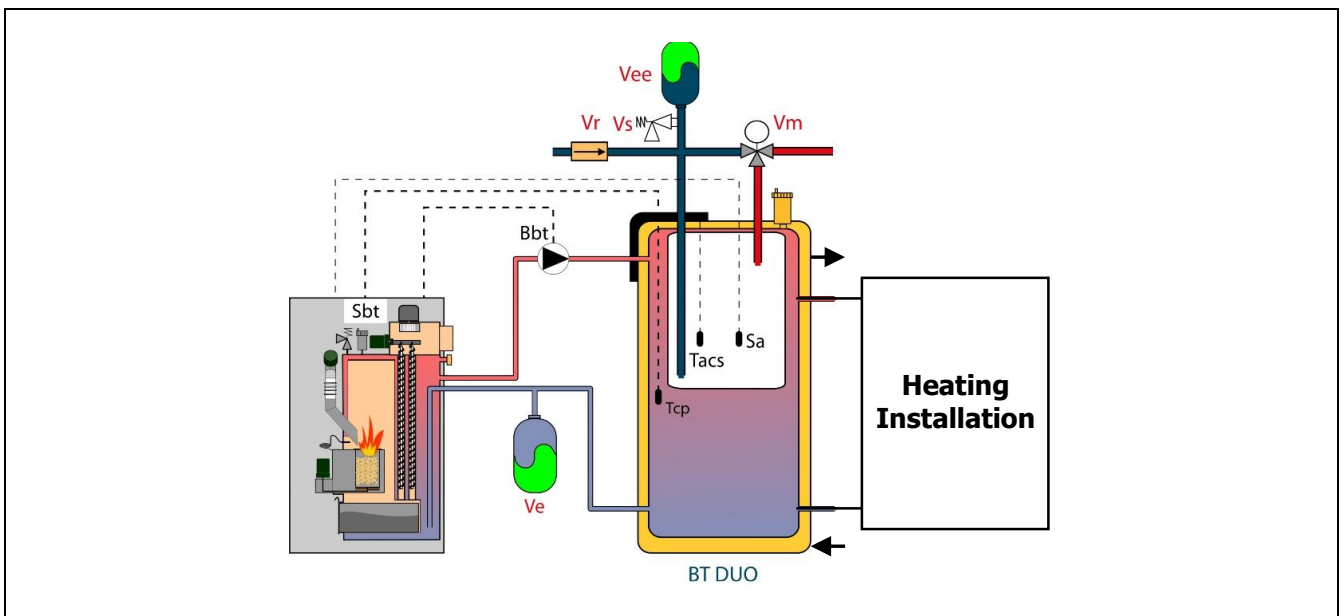

After the hydraulic installation of all the system components, proceed as follows to carry out the correct electrical connection of the BT-DUO buffer tank to the **BioClass iC 66** boiler:

- Unplug the boiler from the mains power.
- Disconnect the electrical resistance (**Rbt**) connected between terminals **18** and **19** of connection strip **J7** (see "Connection Diagram").
- Using a 2-wire electrical hose connect the **TAcald** terminals (terminals **9** and **10** in the wiring diagram of the BT-DUO tank manual) of the BT-DUO tank control thermostat (**Tcp**) to the sensor connection strip **J7** (**Sbt**; terminals **18** and **19**) (see "Connection Diagram").
- Connect the DHW temperature sensor (supplied optionally) to the sensor connection strip **J7** (**Sa**; terminals **16** and **17**) (see "Connection Diagram"), previously removing the resistance **Ra**, supplied as standard with the boiler.
- Insert the DHW temperature sensor bulb into the bulb-holder sheath provided in the DHW tank of the BT-DUO buffer tank.
- Connect the BT-DUO tank feed pump to the component connection strip **J2** (**Bbt**; terminals **N** and **7**) (see "Connection Diagram").
- Connect the boiler to the mains power.
- To correctly configure the type of installation you must adjust parameters **P.08** y **P.09** in the "Technician" menu on the control panel. Access parameter **P.08** in the "Technician" menu (see "Technician Menu") and set the value to "**4**". Next, access parameter **P.09** from the same menu and set the value to "**0**".

For the correct hydraulic and electrical installation of a **BT-DUO** buffer tank, carefully follow the instructions in the manual supplied with it.

Once the hydraulic and electrical connection described above has been completed, to adjust and configure the **BT-DUO** buffer tank operation, carefully read the section "*Operation with a BT-DUO buffer tank*" in this manual.

2.12 Installation with wireless Confort iC and/or Probe iC devices (Optional)

The **BioClass iC 66** boiler has a 2-way **+A/-B (J4)** terminal strip on the **iConnect** board (see "Connection Diagrams"), prepared for the connection of wireless temperature control devices, which can be used to improve the comfort of the home by manage heating zone, in addition to an external sensor.

2 types of wireless devices may be installed: **Confort iC** remote control and/or **Sonda iC** temperature sensor. To do this, an **Receptor RF iC** radio module must be connected to the boiler, which is simultaneously compatible with both the **Confort iC**, as well as with the **Sonda iC**, so that it is possible to create the desired combination of remote controls or probes to manage the comfort of the house.

Also, the **Confort iC** and the **Sonda iC** wireless devices are compatible with the boiler's **iConnect** connectivity, so they can be used in conjunction with boilers registered with the **iConnect** application.

Confort iC wireless remote control

The **Confort iC** wireless remote control is designed to manage the desired room temperature in the room where it is located by sending a radio signal to the **Receptor RF iC** module connected to the boiler. The radio communication is bidirectional and encrypted, allowing secure transmission of information from the boiler to the remote control and vice versa, such as the boiler's alarm status, operating mode and weekly programming times, as well as other information. The remote control has a backlit LCD screen, where this information is displayed.


Sonda iC wireless temperature sensor

The **Sonda iC** wireless temperature sensor is designed to measure the temperature inside the room and/or the temperature outside the house and transmit it to the boiler by sending a radio signal to the **Receptor RF iC** module that is connected to the boiler. This temperature is displayed on the boiler screen and in the **iConnect** app, if the boiler is registered with it. The user can select the desired room temperature and running times using the boiler's control panel or the **iConnect** application.

2.12.1 Installation and connection of the Receptor RF iC (radio module)

In order to be able to use the **Confort iC** or **Sonda iC** wireless devices, an **Receptor RF iC** radio module must be installed and connected to the boiler. It must be located inside the home in such a way as to provide sufficient radio signal coverage to reach the device furthest away, and any metal obstacles that could interfere with the signal must be avoided wherever possible. If there is poor radio signal cover, try relocating the module to another position. Sometimes, moving the radio module just a few centimetres can greatly improve the signal quality. In addition, the **Receptor RF iC** must be connected to the boiler and it is therefore recommended that it be installed at a distance not too far from the boiler.

The **Receptor RF iC** module is supplied with 2 self-tapping screws and 2 rawplugs for wall mounting. If the screws and rawplugs supplied with the module are not suitable for the type of wall installed, use the correct ones. To access the mounting holes, unscrew and remove the module cover and then fit the radio module to the wall:

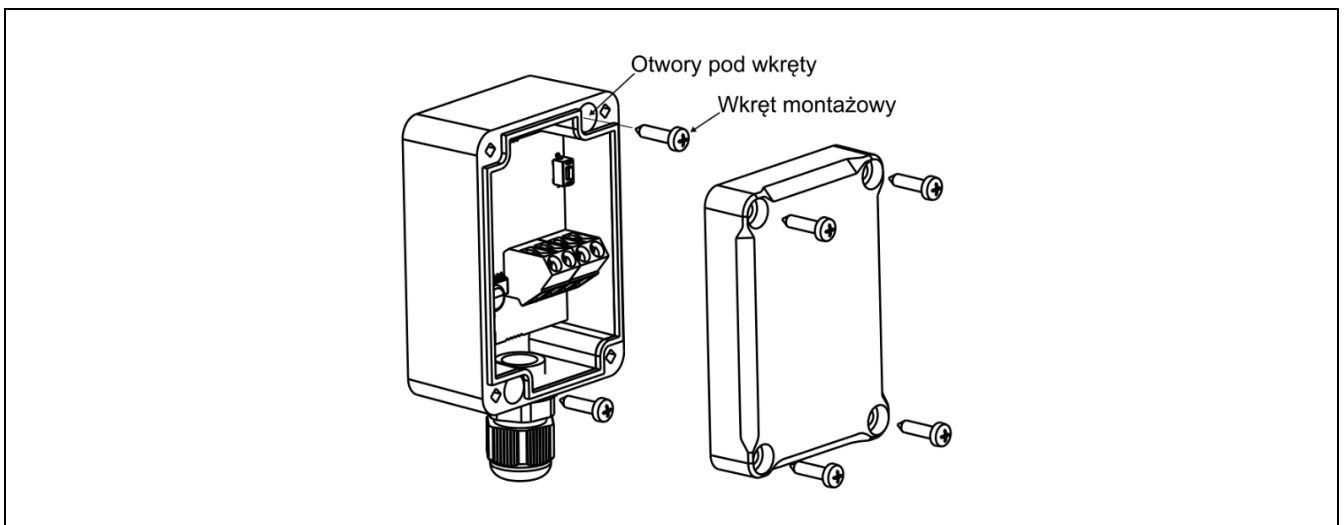


IMPORTANT: Fitting the radio module inside a metal enclosure, e.g. inside the boiler, in a metal box, etc., will weaken the radio signal and, therefore, interfere with and reduce the radio signal cover of the module.

The **Receptor RF iC** module is supplied pre-wired with a 1.5 m long electrical hose. In the event that the supplied hose needs to be extended, we recommend using the same type of hose (4 x 0.25 mm²) and it should not exceed a maximum length of 100 metres. Also, for its electrical connection and communication with the boiler, a communication strip (**+A/-B**), a power connector and a power supply with a plug (230 Vac / 12 Vdc) are also supplied.

For the correct electrical connection of the **Receptor RF iC** radio module to the **BioClass iC 66** boiler, the following steps must be followed:

- **Unplug the boiler from the mains.**
- Connect the green cable and the yellow cable of the **Receptor RF iC** module hose to the communication terminal block (**+A/-B**) supplied and connect this terminal block to the **J4** connector on the **iConnect** board located on the back of the boiler's electrical box (see "*Wiring Diagrams*").
- Connect the Earth and +12V cables of the plug-in power supply to the white cable and the brown cable of the **Receptor RF iC** module hose, respectively, using the 2-way power connector supplied.
- Connect the plug to the mains in order to switch on the **Receptor RF iC** radio module.
- Reconnect the boiler to the mains power.

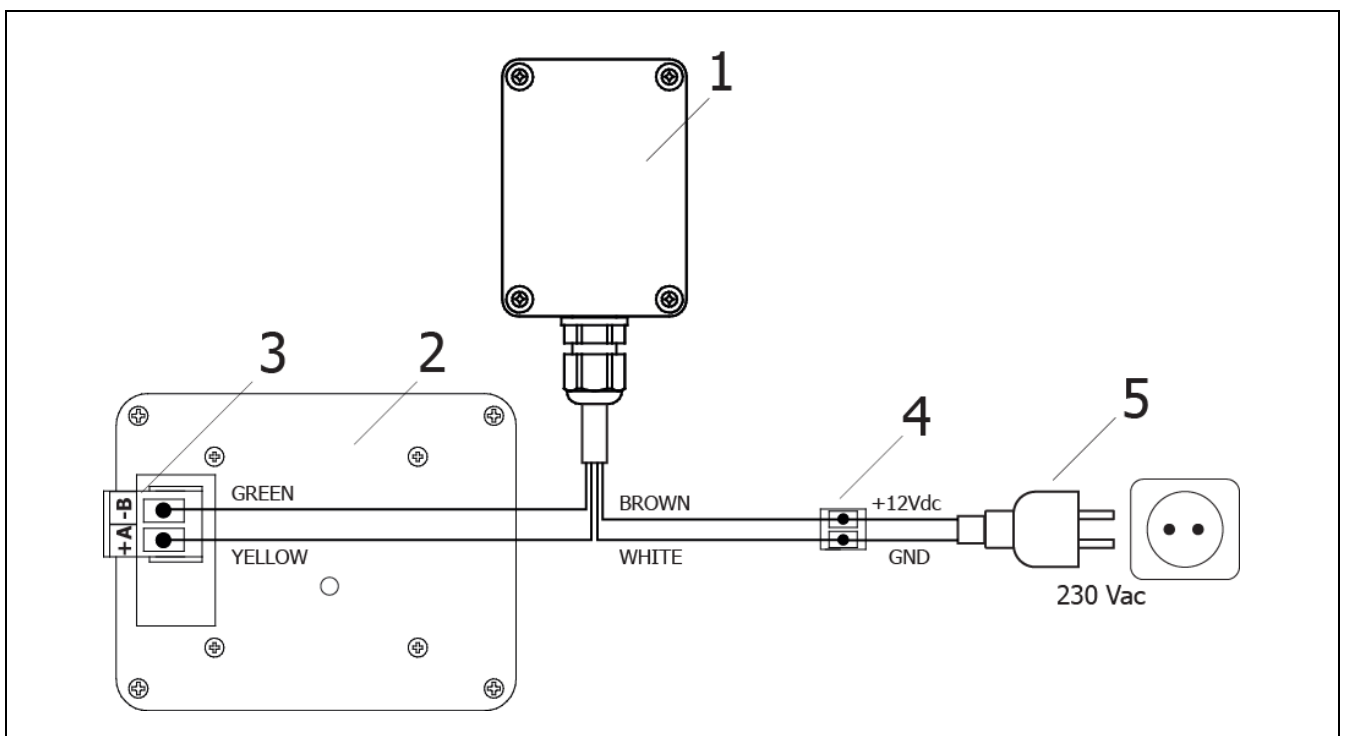

- | | |
|---------------------------------------------------------------------------|---------------------------------------|
| 1. Receptor RF iC. | 3. +A/-B connector on the box. |
| 2. iConnect electronic card (back of the boiler's electrical box). | 4. Power supply connector. |
| | 5. Electrical power supply. |


⚠ DANGER: When making the electrical connections, make sure that the polarity of the connections (**+A, -B**) and (**Earth, 12 V**) between the radio module, the boiler and the power supply is correct. An incorrect connection can cause damage to the boiler and/or malfunctions.

IMPORTANT: The maximum cable length depends on its cross-section. For a cross-section of **0.5 mm²**, the length must not exceed **100 metres**. The cross-section of the cable must not be less than **0.25 mm²**.

2.12.2 Fitting and location of the Confort iC remote control and the Sonda iC

The **Confort iC** remote control and the **Sonda iC** are designed to be located inside the home and may be fixed to a wall. Meanwhile, the **Confort iC** remote control can be placed on a flat surface, using the support bracket supplied. The selected location (room, corridor, etc.) should be representative within the heating circuit to which the control is linked.

A suitable choice of location for these devices within the home will be important to ensure the correct management of comfort in the home. It is advisable to install them in an area of the home where they are normally used (living room, dining room, master bedroom, or similar), avoiding rooms where heat or cold could be generated, such as kitchens, bathrooms, refrigerated larders, etc. Moreover, the chosen location should not cause interference in the radio signal, nor should it be in an area of low signal cover with respect to the **Receptor RF iC** radio module. It is also recommended to install them about 1.5 m above the ground and as far away as possible from any source of heat or cold that could distort the temperature reading, such as windows, fireplaces, cookers, radiators, etc.

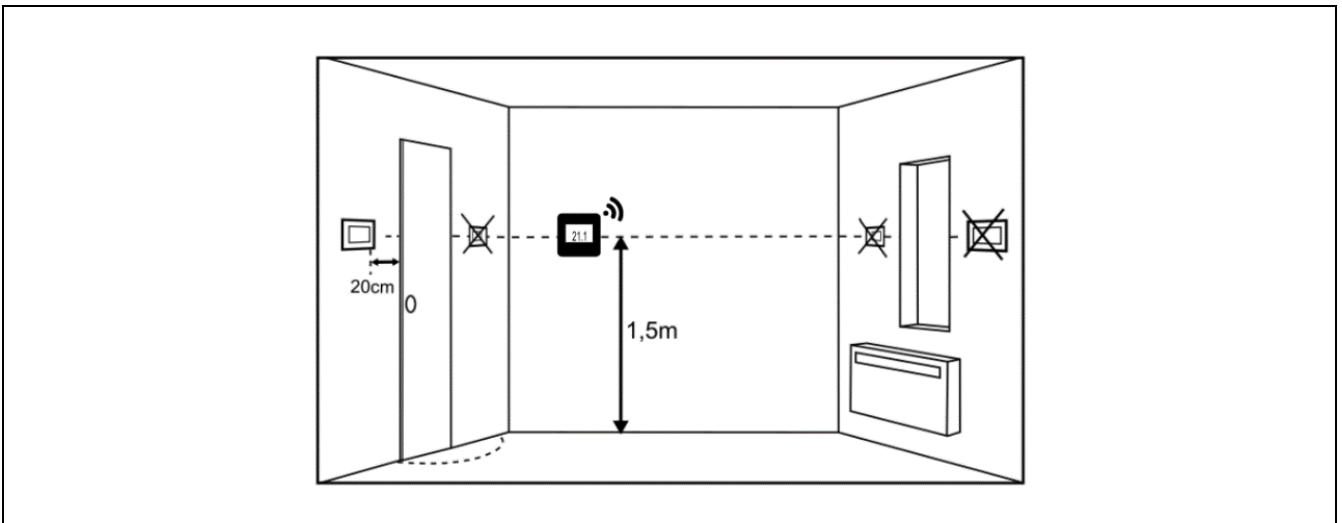

The **Sonda iC** may be located outside the dwelling if it is to be used as an outdoor temperature sensor. In this case, it is recommended to locate the probe on a north-facing façade wall, sheltered from rain and humidity, and avoiding, as far as possible, direct sunlight. It should also be located in an easily accessible place, so that maintenance work required for this type of wireless device, such as changing the batteries and wireless pairing with the radio module, can be carried out.

Both the **Confort iC** remote control and the **Sonda iC** are supplied with 2 self-tapping screws and 2 rawlplugs for wall mounting. If the screws and rawlplugs supplied are not suitable for the type of wall installed, use the correct ones. To access the fixing holes, remove the rear cover of the device using the tip of a flat screwdriver or something similar, fix the cover to the wall and re-attach the device to the cover. For more information, carefully follow the installation instructions supplied with the devices.

Once the installation of the desired wireless temperature control devices has been completed, they must be paired to the **Receptor RF iC** radio module and paired to the heating zones in which each of them is located in order for them to work properly. To perform the pairing process correctly, follow the steps outlined in the section on *"Pairing and unpairing of wireless temperature control devices"* in this manual, or carefully follow the instructions given in the manual supplied with each device.

3 COMMISSIONING OF THE BOILER

3.1 Prior warnings

Repair and maintenance of the boiler must be carried out by a qualified professional, authorised by **DOMUSA TEKNIK**. For optimum functioning and conservation of the boiler, it should be serviced annually.

Carefully read this instruction manual and keep it in a safe, easily-accessible place. **DOMUSA TEKNIK** will not be liable for any damages caused by failure to follow these instructions.

Before any servicing, disconnect the boiler from the mains.

3.2 Filling the installation

The hydraulic installation must include a fill valve, drain valves and the necessary hydraulic components for correctly filling the installation.

To fill the installation, open the fill valve until the parameter "*Water pressure*" of "*User Menu*" shows a pressure of 1 - 1.5 bars. The installation must be filled slowly, bleeding the air from the water circuit using the drain valves provided on the same. Close the fill valve after filling.

BioClass iC 66 boiler has a pressure sensor for controlling the pressure of the installation. If the installation does not have the minimum pressure set at **P.19** parameter of "*Technical Menu*" (by default 0.5 bar), a low pressure alarm will appear ("**E-19**").

IMPORTANT: Switching on the boiler with no water inside could result in serious damage.

3.3 Initial calibration of the feed auger

BioClass iC 66 boiler is equipped with a feed auger to supply the fuel. Follow the instructions described in "*Installing the hopper*" section to install it correctly. Due to diversity of feed augers and the range of different hoppers, it is needed to calibrate the feed auger minimum twice to assure the correct running.

Follow the instructions described in "*Feed auger calibration*" section of "*Setup menu*" to assure a correct calibration.

3.4 Commissioning

In order for the **guarantee to be valid**, the boiler must be commissioned by **personnel authorised by DOMUSA TEKNIK**. Before beginning the commissioning, the following must be complied with:

- The boiler must be plugged in to the mains.
- The installation must be filled with water (the pressure must be between 1 and 1.5 bar).
- The hopper must be filled with fuel.

The commissioning sequence is as follows:

- Check the flue is correctly installed using a condensation inspection tap and a draught stabiliser.
- Check the hopper and the feed auger are correctly installed. **The feed auger must be calibrated for a correct boiler functioning** (See "*Calibrating the feed auger*"). Check the right type of fuel is being used (wood pellet must be **DIN PLUS**).
- If the installation has flow and return valves, check they are open.

3.5 Installation delivery

After commissioning, the Technical Assistance Service will explain to the user how the boiler functions, making any observations they consider relevant.


The installer is responsible for clearly explaining to the user the functioning of any control or regulation device forming part of the installation but not supplied with the boiler.

Upon delivery of the boiler, the user receives the following documents:

- The boiler installation and operation manual.
- Combustion analysis performed during commissioning.
- The commissioning sheet.

4 DIGITAL DISPLAY

BioClass iC 66 boiler is equipped with a digital touch display for viewing and adjustment of the different boiler settings. The display has various display areas where different icons and numbers appear to indicate the different status of the boiler.

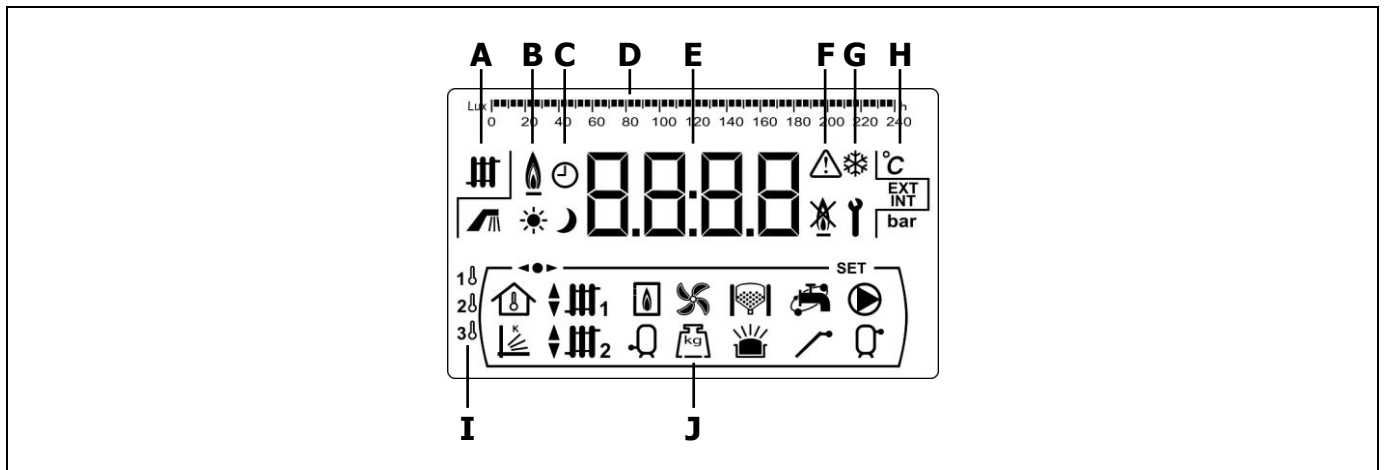

A Boiler status:

Heating function enabled.

DHW production enabled.

B Icon for flame detection: Flame detected.

C Timer icons:

It is displayed when the real time is inside "ON" programmed period.

It is displayed when actual time is inside "OFF" programmed period.

When any screen is displayed it relates to the display of actual time, programming, etc.

D Scale marking bar: The meaning can change depending on the parameter displayed:

- **Time scale:** Used to indicate values or settings related to the time and/or time programming:



- **Lux scale:** Used to indicate the **lux level** read by the flame sensor:



- **Ash scale:** Used to indicate the **level of ash**:




E Numerical digits.


F Alarm icons:

 Warning.

 Boiler lock-out.

G Special functions icons:

 **Anti-frost function:** This icon blinks when the boiler's anti-frost function is activated.

 **Technical icon:** It is displayed when any of the boiler's technical parameter on the "Technical Menu" or "Setup menu" is displaying or modifying.

H Auxiliary icons.

°C Value or setting related to a temperature is shown by the numerical digits.

EXT Value or setting related to the outside temperature is shown by the numerical digits.

INT Value or setting related to the room temperature are shown by the numerical digits.

bar Value or setting related to the boiler water pressure is shown by the numerical digits.


I Heating zone icons:


 Display of any value or parameter related to Zone 1 heating.


 Display of any value or parameter related to Zone 2 heating.


 Display of any value or parameter related to Zone 3 heating.


J Operating mode icons:














 Display of any value or parameter related to the inside temperature of the home or parameters related to room sensors or remote controls.

 It is displayed when a value or setting related to OTC operating mode is shown by the numerical digits.

 It is displayed when the direct heating circuit n° 1 demand is activated or when a value or setting related to this circuit is shown by the numerical digits.

 It is displayed when the mixing heating circuit n° 1 demand is activated or when a value or setting related to this circuit is shown by the numerical digits. The arrows appear according to the 3 way mixing valve of the circuit activation mode. The upper arrow indicates that the hot channel of the valve is opening, and the lower arrow indicates that the hot channel of the valve is closing.

 It is displayed when the mixing heating circuit n° 2 demand is activated or when a value or setting related to this circuit is shown by the numerical digits. The arrows appear according to the 3 way mixing valve of the circuit activation mode. The upper arrow indicates that the hot channel of the valve is opening, and the lower arrow indicates that the hot channel of the valve is closing.

-  It is displayed when any value or setting **related to the boiler and/or the burner** is shown by the numerical digits.
-  It is displayed when a value or setting related to DHW tank is shown by the numerical digits.
-  It is displayed when a value or setting related to boiler's fan is shown by the numerical digits.
-  It is displayed when a value or setting related to weight, calibration, fuel consumption, etc. is shown by the numerical digits.
-  It is displayed when a value or setting related to the **CVS Suction System** is shown by the numerical digits.
-  It is displayed when a value or setting related to the burner's ash cleaning system or boiler's ashtray (either manual or compressor) is shown by the numerical digits.
-  It is displayed when a value or setting related to the ashtray overflowing is shown by the numerical digits.
-  Display of any value or parameter related to boiler connectivity in **iConnect**.
-  It is displayed when a value or setting related to DHW recirculation function is shown by the numerical digits. It displays blinking when the DHW recirculation pump is switched on.
-  It is displayed when the feed auger is switched on and it is displayed blinking when it is in manual operation mode.
-  Display of direct circuit No. 1 demand activated or when any value or parameter related to it is displayed.
-  Display of any value or parameter related to the temperature or operation of the buffer tank.
-  It is displayed when any of the "Menu" is in browse mode.
- SET** It is displayed when the parameter shown by the numerical digits is adjustable and it is displayed blinking when the parameter is in adjustment mode.

5 OPERATION

BioClass iC 66 is set by default as an "Only Heating" boiler. Optionally, to increase the system's performance, a Domestic Hot Water tank (**Sanit**) offered by **DOMUSA TEKNIK** may be connected.

5.1 "Only heating" operation

In this mode, the desired boiler temperature set-point must be selected (*see "Selecting the boiler temperature set-point"*) and the desired temperature of the room device connected to the boiler, if any (room thermostat, room sensor **LAGO FB OT+** remote control, **Confort iC** wireless remote control). The burner will start running to heat the water of the boiler. When the temperature of the boiler overtakes 60 °C, the heating pump is switched on to heat the water of the installation. The burner modulates the heat output level to maintain the set point temperature selected and the pump continues running until the installation reaches to the temperature selected in the room thermostat or remote control (if there is any connected). When the temperature in the boiler overtakes 4 °C the boiler set point temperature the burner stops until the temperature decreases 10 °C behind the set point temperature, in this moment the burner is switched on again.

It is possible to disable the heating service (**Summermode**) by setting to "OFF" the boiler temperature set point. In this operating mode only the DHW service is available if there is a DHW tank installed.

5.2 Operating with a Sanit DHW tank (Option)


BioClass iC 66 boiler could be installed together with a DHW tank **Sanit**, within the product range offered by **DOMUSA TEKNIK**, to obtain Domestic Hot Water service. Follow the instructions described in section "Installing a Sanit hot water tank" to assure a correct installation.

In this operating mode, it is needed to set a DHW temperature set point (see "DHW temperature set point selection") in order to start DHW service up. The burner will start running and the DHW pump or valve will switch on if the boiler's temperature overtakes 60 °C and it is higher than the one into DHW tank. When DHW tank temperature reaches the set point temperature, after a postcirculation period of time (parameter **P.16** of "Technical Menu"), the boiler will be able to heat the heating installation by switching on the heating pump. The burner modulates the heat output level to maintain the boiler temperature set point. The heating pump will stop when the room temperature reaches the set point set at the room thermostat or remote control (if there is any connected).

It is possible to disable the DHW by setting to "OFF" the DHW temperature set point.

NOTE: To assure the optimal DHW service, the heating service will not be available while the DHW service is activated to heat the DHW tank.

5.3 Boiler temperature set point selection

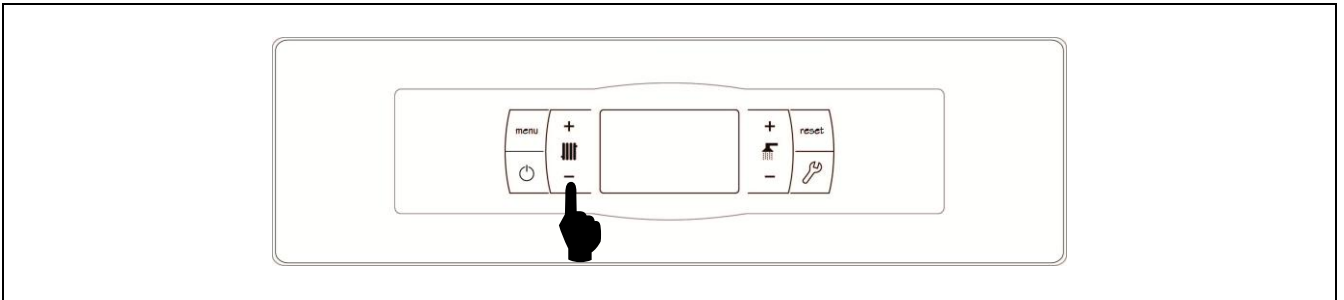


Boiler temperature set point selection is made by the tactile selector shown in the picture. Press "+" and "-" buttons to increase or decrease the set point desired. Few seconds after the desired set point temperature is adjusted the display returns to main position. The range of values for boiler temperature set point is OFF, 65 - 80 °C.

It is also possible to set boiler temperature set point browsing through the "User Menu" by pressing **MENU** button. When parameter "Boiler set point temperature" is displayed, the boiler temperature set point is set by pressing "+" and "-" buttons.

When the operation mode is activated according to the external climatic conditions by means of parameter **P.10** of the "Technical Menu" and an operation K curve is selected for heating Zone 1 (parameter **P.45** of the "Technical" menu), the The temperature of the water in the same will be calculated using the K curve, therefore, by selecting the boiler temperature setpoint, it will only be possible to select the activation ("ON") or deactivation ("OFF") of the heating service of said boiler. zone.

It is possible to disable the heating service of the boiler (**Summer mode**) by setting to "OFF" the boiler temperature set point by pressing "-" symbol for heating (**18**).

5.4 DHW temperature set point selection (with DHW tank installed only)

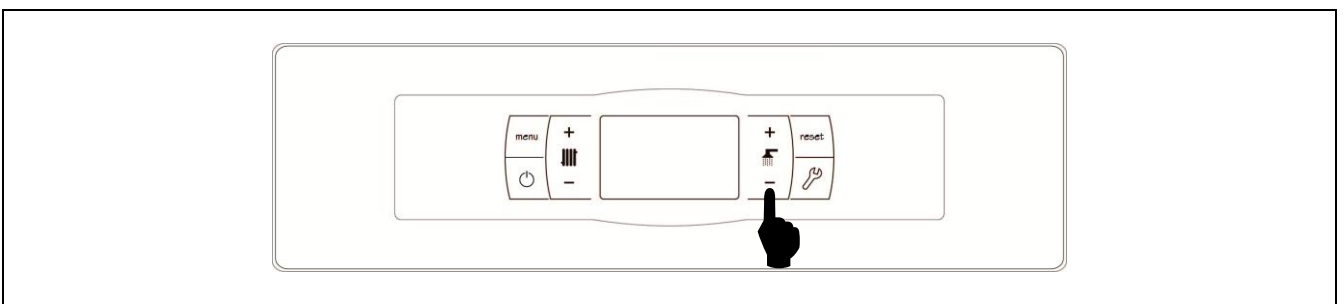


DHW temperature set point selection is made by the tactile selector shown in the picture. Press "+" and "-" buttons to increase or decrease the set point desired. Few seconds after the desired set point temperature is adjusted the display returns to main position. The range of values for DHW temperature set point is OFF, 15 - 65 °C.

It is also possible to set the DHW temperature set point browsing through the "User Menu" by pressing **MENU** button. When parameter "DHW temperature set point" is displayed, the DHW temperature set point is set by pressing "+" and "-" buttons.

It is possible to disable the DHW service by setting to "OFF" the DHW temperature set point by pressing "-" for DHW (**19**).

5.5 Selecting the set point temperature of the buffer tank (only with buffer tank)

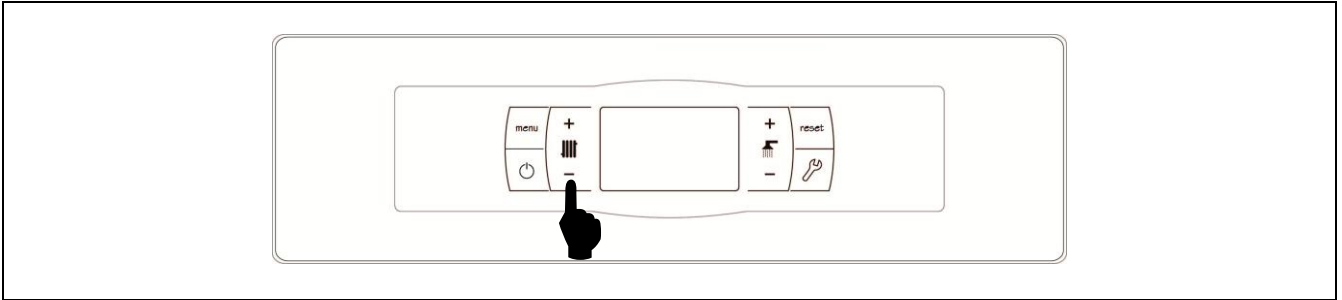

The desired buffer tank temperature is selected using the touch button, as shown in the figure. To select the desired temperature, touch the "+" or "-" symbols to increase or decrease the temperature. When the temperature has been selected, the display will return to standby mode after a few seconds. The permitted range of set point temperature is OFF, 30 - 80 °C.

The buffer tank set point temperature can also be selected by using the touch button MENU to browse to the display option "Buffer tank set point temperature". When this option appears on the display, touch the "+" or "-" symbols to select the desired temperature.


If you wish to totally disable the central heating function of the installation (**Summer mode**), select the set point value "OFF", by touching the "-" symbol until this value appears on the display.

5.6 Funcionamiento según las condiciones climáticas exteriores OTC (Opcional)

When the boiler has the outdoor temperature value, obtained from the probe supplied with a **BIO Hydraulic Kit**, obtained via the Internet (by registering the boiler in the **iConnect** application) or obtained from the **Sonda iC** wireless temperature sensor, then its operation can be activated based on the outdoor temperature compensation (**OTC**), using parameter **P.10** in the boiler "Technical Menu".

When this operation mode is activated, the boiler and/or heating flow temperature are automatically adjusted in accordance with the K-factor curve set at the "Technical Menu" (parameters **P.11** and **P.12** and **P.45**) and the outdoor temperature measured by the outdoor sensor. If the installation is correctly dimensioned, the boiler temperature and/or flow temperature calculated will ensure the room temperature set point set at room thermostat or remote control (if there is any connected).

The K-factor curve relates the outdoor temperature, measured by the sensor installed outside the building, with the boiler temperature set point. The diagram shows the temperature value for each point on the K-factor curve.

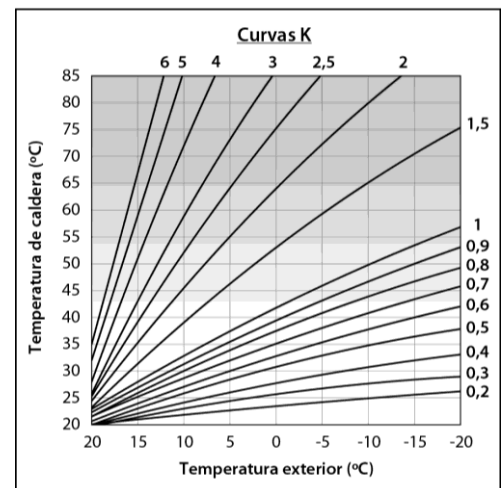

Depending on the type of heating circuit, isolation of the building and position of the outdoor sensor, the optimal K-factor curve could be different. Nevertheless, a general rule could be that for high temperature heating circuits (radiators heating circuit) the K-factor curve should be 1 or higher and for low temperature heating circuits (underfloor heating circuit) it should be 0.8 or less.

IMPORTANT: To connect the outdoor sensor, see the instruction manual supplied with the **BIO Hydraulic Kit** or the appropriate **Sonda iC**.

6 OPERATION WITH A BT BUFFER TANK (OPTIONAL)

The **BioClass iC 66** boiler can be accompanied by a **BT Buffer tank** from the wide range of tanks offered by **DOMUSA TEKNIK**. This tank accumulates heat energy that improves the performance of the system when switching the boiler on and off. For its correct installation, carefully follow the assembly instructions included with the tank and for its correct integration with the **BioClass iC 66** boiler, read the instructions in the section "*Installing a BT Buffer tank*" in this manual.

The electronic control of the **BioClass iC 66** boiler is able to manage four different installation configurations of the BT buffer tank. Depending on the configuration of the installation (parameter **P.08** in the "Technician" menu) there are 2 operating modes:

6.1 Operation with a temperature sensor in the BT buffer tank (P.08 = 1 or 2)

In this operating mode, the desired buffer tank temperature set-point (*see "Selecting the buffer tank temperature set-point"*) and the temperature of the thermostat or room sensor, **LAGO FB OT+** remote control, or **Confort iC** wireless remote control (if applicable) must be selected). The burner will start working to heat the water in the boiler. When the boiler temperature exceeds 60 °C the feed pump for the buffer tank (**Bbt**) will start up to heat the BT tank. The modulating burner of the **BioClass iC 66** boiler will keep the water in the buffer tank at the set temperature. When the temperature of the tank reaches the selected set point temperature the burner will shut down until its temperature drops to the value set in parameter **P.28** (by default 5 °C) below that desired, once again starting a new heating cycle.

With regard to the boiler heating service, the boiler circulation pump (**BC**) will be activated whenever the thermostat or room sensor, the **LAGO FB OT+** remote control, or **Confort iC** wireless remote control (if applicable), demands heating and the temperature of the buffer tank is higher than the value set in parameter **P.50** in the "Technical" menu". When the atmosphere reaches the desired temperature and after a time of post-circulation (parameter **P.15** in the "Technician Menu"), the operation of the heating pump (**BC**) will turn off.

The boiler's central heating service can be totally disabled (**Summer mode**) by selecting a buffer tank set point value of "**OFF**". In this operating mode, only the DHW production function will remain enabled, providing there is a DHW tank connected to the tank (**P.08 = 1**) or to the boiler (**P.08 = 2**).

NOTE: This operating mode is only activated when parameter P.08 of the "Technician" menu is set to 1 or 2 and when there is a buffer tank installed.

6.2 Operation with a control thermostat in the BT buffer tank (P.08 = 3 or 4)

In this operating mode you must select the desired set point temperature of the boiler (*see "Selecting the boiler set point temperature"*) and, using the control thermostat installed in the buffer tank, you must also select the desired set point temperature in the buffer tank. **It is essential for the operation of the installation that the set point temperature selected for the boiler exceeds the set point selected for the control thermostat of the buffer tank and it is recommended that it be at least 5 to 10 °C higher.** The modulating burner of the **BioClass iC 66** boiler will start working to heat the water within it. When the boiler temperature exceeds 60 °C the feed pump for the buffer tank (**Bbt**) will start up to heat the BT tank, provided that its control thermostat is activated (demanding heating). When the buffer tank thermostat reaches the desired temperature and turns off the heating demand, operation of the buffer tank feed pump (**Bbt**) will be disabled.

With regard to the boiler heating service, the boiler circulation pump (**BC**) will be activated whenever the thermostat or room sensor, the **LAGO FB OT+** remote control, or **Confort iC** wireless remote control (if applicable), demands heating. In other words, when the room temperature where the thermostat or the remote control is installed is lower than that which is set. When the atmosphere reaches the desired temperature and after a time of post-circulation (parameter **P.15** in the "Technician Menu"), the operation of the heating pump (**BC**) will turn off.

The boiler's central heating service can be totally disabled (**Summer mode**) by selecting a boiler set point value of "**OFF**". In this operating mode, only the DHW production function will remain enabled, providing there is a DHW tank connected to the tank (**P.08 = 3**) or to the boiler (**P.08 = 4**).

IMPORTANT: It is essential for the operation of the installation that the set point temperature of the boiler exceeds the set point selected for the control thermostat of the buffer tank.

NOTE: This operating mode is only activated when parameter **P.08** of the "Technician" menu is set to 3 or 4 and when there is a buffer tank installed.

7 OPERATION WITH A BT-DUO BUFFER TANK (OPTIONAL)

The **BIOCLASS iC 66** boiler can be accompanied by a **BT-DUO Buffer tank** from the wide range of tanks offered by **DOMUSA TEKNIK**. This tank accumulates heat energy that improves the performance of the system when switching the boiler on and off. It also incorporates a DHW cylinder in its interior for obtaining Domestic Hot Water. For its correct installation, carefully follow the assembly instructions included with the tank and for its correct integration with the **BioClass iC 66** boiler, read the instructions in the section "*Installing a BT-DUO Buffer tank*" in this manual.

In this operating mode you must select the desired set point temperature of the boiler (*see "Selecting the boiler set point temperature"*) and, using the adjustment thermostat of the control panel in the BT-DUO buffer tank, you must also select the desired set point temperature in the buffer tank. **It is essential for the operation of the installation that the set point temperature selected for the boiler exceeds the set point selected for the thermostat of the BT-DUO buffer tank and it is recommended that it be at least 5 to 10 °C higher.** The modulating burner of the **BioClass iC 66** boiler will start working to heat the water within it. When the boiler temperature exceeds 60 °C the feed pump for the buffer tank will start up to heat the BT-DUO tank, provided that its control thermostat is activated (demanding heating). When the BT-DUO tank thermostat reaches the desired temperature and turns off the heating demand, the operation of its feed pump will be disabled.

With regard to the boiler heating service, the boiler circulation pump (**BC**) will be activated whenever the thermostat or room sensor, the **LAGO FB OT+** remote control, or **Confort iC** wireless remote control (if applicable), demands heating. In other words, when the room temperature where the thermostat or the remote control is installed is lower than that which is set. When the atmosphere reaches the desired temperature and after a time of post-circulation (parameter **P.15** in the "Technician Menu"), the operation of the heating pump (**BC**) will turn off.

Regarding the operation of the service for providing DHW, provided that a DHW temperature sensor is installed in the **BT-DUO** tank, you must select the desired DHW set point temperature (*see "Selecting the DHW set point temperature"*). The burner will ignite and the feed pump for the **BT-DUO** tank will be activated whenever the water temperature of the boiler exceeds 60 °C. When the tank reaches the DHW set point temperature selected and after a waiting period (parameter **P.16** in the "Technician Menu"), it will once again be available to heat the central heating system, activating the central heating service. In order to provide an optimal production of DHW, while this is active the boiler's central heating service will remain disabled and it will not be restored until it has finished heating the DHW cylinder of the **BT DUO** tank.

The boiler's central heating service can be totally disabled (**Summer mode**) by selecting a boiler set point value of **"OFF"**. In this operating mode, only the DHW production function will remain enabled, via the cylinder integrated inside the **BT-DUO** tank. Also, you may totally disable the domestic hot water production function by selecting **"OFF"** as the DHW set point temperature.

IMPORTANT: **It is essential that the set point temperature of the boiler exceeds the set point selected for the control thermostat of the buffer tank.**

NOTE: **For the correct operation of the BT-DUO buffer tank, parameters P.08 and P.09 in the "Technician" menu must be set to 4 and 0 respectively.**

8 "iConnect" CONNECTIVITY

The **BioClass iC 66** boiler can be connected to **DOMUSA TEKNIK's "iConnect"** connectivity platform. Through this option, the user can register the boiler in the **iConnect** application for Smartphone, Tablets or similar mobile devices, and use it to remotely manage all the user parameters of the boiler and the comfort of the heating installation, as well as receive notifications and alarms generated by the boiler, all from anywhere in the world.

8.1 Requirements for connecting to *iConnect*

The electronic control has a Wi-Fi module, through which the boiler will connect to the home's Wi-Fi network and use it to access the **iConnect** platform. As such, there must be **coverage from the home's Wi-Fi network** in the place where the boiler is installed. In turn, the Wi-Fi module built into the **BioClass iC 66** boiler is only compatible with **2.4 GHz** frequency Wi-Fi networks.

The connection and registration in the **iConnect** application can be done with any device with an **Android 4.4** operating system or later or **iOS 13** or later (**iPhone 6S** terminal or later), and must have a **Wi-Fi connection, Bluetooth** connection, and enable the location of the boiler. To do so, it will first be necessary to download and install the free application on said device from the corresponding application platform, **Google Play** (Android) or the **App Store** (iOS).

If there is no Wi-Fi coverage at the boiler location or if it is too weak, a wide range of different repeater devices and Wi-Fi network amplifiers are available on the market. Two methods are described below to expand the coverage of the home's Wi-Fi network:

- **Wi-Fi repeater:** Consists of a device that is very easy to install, which collects the Wi-Fi signal from the home's network and replicates it, expanding the coverage area of the Wi-Fi network. To do this, the repeater must be installed in an area of the home where there is Wi-Fi coverage, which is halfway between the home Wi-Fi network router and the boiler, making sure that the range of the repeater reaches it.

This method is the most recommended due to its simplicity, ease of installation and the fact that it is cheaper than the other method, as long as the distance between the home router and the boiler is not excessive.

- **PLC devices:** Consists of a pack of 2 or more easy-to-install devices, through which the Wi-Fi router signal is transmitted through the home's electrical network. One of the devices connects to the home's Wi-Fi router and is in charge of injecting its signal into the electrical network through the outlet into which it is plugged. The other devices are plugged into the house's power outlets where the Wi-Fi coverage is to be expanded, receiving the signal through the electrical network and converting it into a Wi-Fi signal, and expanding the coverage area of the Wi-Fi network.

This method is recommended in homes or large buildings with several floors or many rooms, and when the distance between the router and the boiler is too great to be able to install a Wi-Fi repeater. Although this method is also easy to install, it is somewhat more laborious than the previous method, and since at least 2 devices are needed, it is somewhat more expensive.

8.2 Boiler registration in *iConnect*

To remotely manage the boiler through the **iConnect** APP, you must first register it in the **iConnect** connectivity platform, for which the APP must be downloaded and installed on the Smart device with which you wish to carry out the registration process. Before starting to register the boiler, we recommend activating the **Bluetooth** connection and the **location** of the device. The APP only uses the location function during the registration process to geographically locate the boiler and be able to update the local time and the outside temperature, so once the registration is completed, this function will not be necessary to use the application, and the location can be disabled on the device.

Once the application has been downloaded and installed, **register the boiler** by opening the APP and clicking on "Register boiler" in the home screen. Then follow the steps indicated by the APP to complete the process

The registration consists of the following main steps:

- **Boiler connection with the Smart device:** By selecting the "ON" value on the "iCon" screen of the "Configuration" menu of the boiler's digital display, the **Bluetooth** connection will be activated and the Smart device will connect to the boiler.
- **Configuration of the home's Wi-Fi network:** The APP will ask you to enter the **Name** and **Password** of the home's Wi-Fi network and will then connect to it.
- **Entering the User registration data:** The APP will ask you to enter the User registration data, which will be used to log in to the **iConnect** application. You will also be asked to agree to the APP's "Conditions of Use" and "Privacy Policy". Once all the requested information has been filled in, the registration will be completed.
- Once the boiler registration process has been successfully completed, you will be redirected to the "Login" screen where, by entering the registered email address and password, you will access the application.

From this time on, the boiler can be accessed from any device that has the **iConnect** APP installed by logging in with the user data entered in the registration process.

This **initial registration** process will link a "**main**" user to the boiler. This **main user** will be unique, in such a way that, if a registration process is carried out again, the data of the previous user will be deleted and replaced by the new one. The main user will be able to give other users access to the APP using the "Invite" option in the "Configuration/Boilers" menu of the application. The "Guest" users will be able to use the **iConnect** application from any device on which it is installed and without any type of restrictions.

In turn, the same user (with the same email address and password) will be able to access several boilers from the same APP, either as the main user, performing the initial registration for several boilers, and also as a guest user, if they have received an invitation from various boilers. Through the boiler menu of the APP (right part of the APP), the user will be able to select the boiler they want to manage at all times, as well as the desired heating zone, if there is more than one installed.

8.3 Description of the *iConnect* application



All the "User" parameters of the boiler and the home heating installation can be simply and intuitively accessed through the iConnect App from anywhere in the world. The main functions of the iConnect application will be the following:

- Real-time **viewing of the status** of the boiler and the heating installation, displaying the status of the demands, ambient temperatures, boiler temperature, DHW temperature, water pressure, ash collector status, etc.
- **Selection of setpoints** for room temperature, boiler, DHW and heating circuits at any time.
- Possibility of carrying out **weekly hourly programming** of all the heating circuits and all the accessories connected to the boiler.
- Sending of **notifications and notices** from the boiler of alarm situations, warnings, maintenance notices, ash collector emptying notice, etc.
- Possibility of obtaining the outside temperature of the house from the Internet and modulating the operation of the installation according to the weather conditions (**OTC** function).
- Viewing of the fuel consumption and temperatures by means of **graphs**, and counters for the number hours of operation and consumption.
- **Selection of the language** of the Application and the possibility of contacting **DOMUSA TEKNIK Technical** Support to clarify any questions.


8.4 *iConnect* App Map

The **iConnect** Application is very intuitive and easy to use, so it is not necessary to follow an instruction manual for its use. In any case, **DOMUSA TEKNIK** provides users with a series of technical information and use tutorials on its website www.domusateknik.com/es/servicios/apps, that will help clarify any doubts. In addition, the front door or on the back cover of this manual, of the **BioClass iC 66** has a visible QR code that can be used to directly access the **iConnect** area of the **DOMUSA TEKNIK** website..

Below, as a visual guide, is a description of the content map of the APP. The application has 3 main areas:


- **"Home" screen:** Main screen of the APP, where the status of the installation is displayed in real time and various setpoints and operating modes can be selected.
- **Main Menu:** This menu contains all the key options of the APP. Located on the left side of the APP, it can be accessed through the button  located at the top left of the "Home" screen.
- **Installations menu:** In this menu you can select the boiler and the heating zone to be displayed if there is more than one registered boiler and more than one zone installed in said boiler. Located on the right side of the APP, it can be accessed through the button  located at the top right of the "Home" screen.

"Home" screen

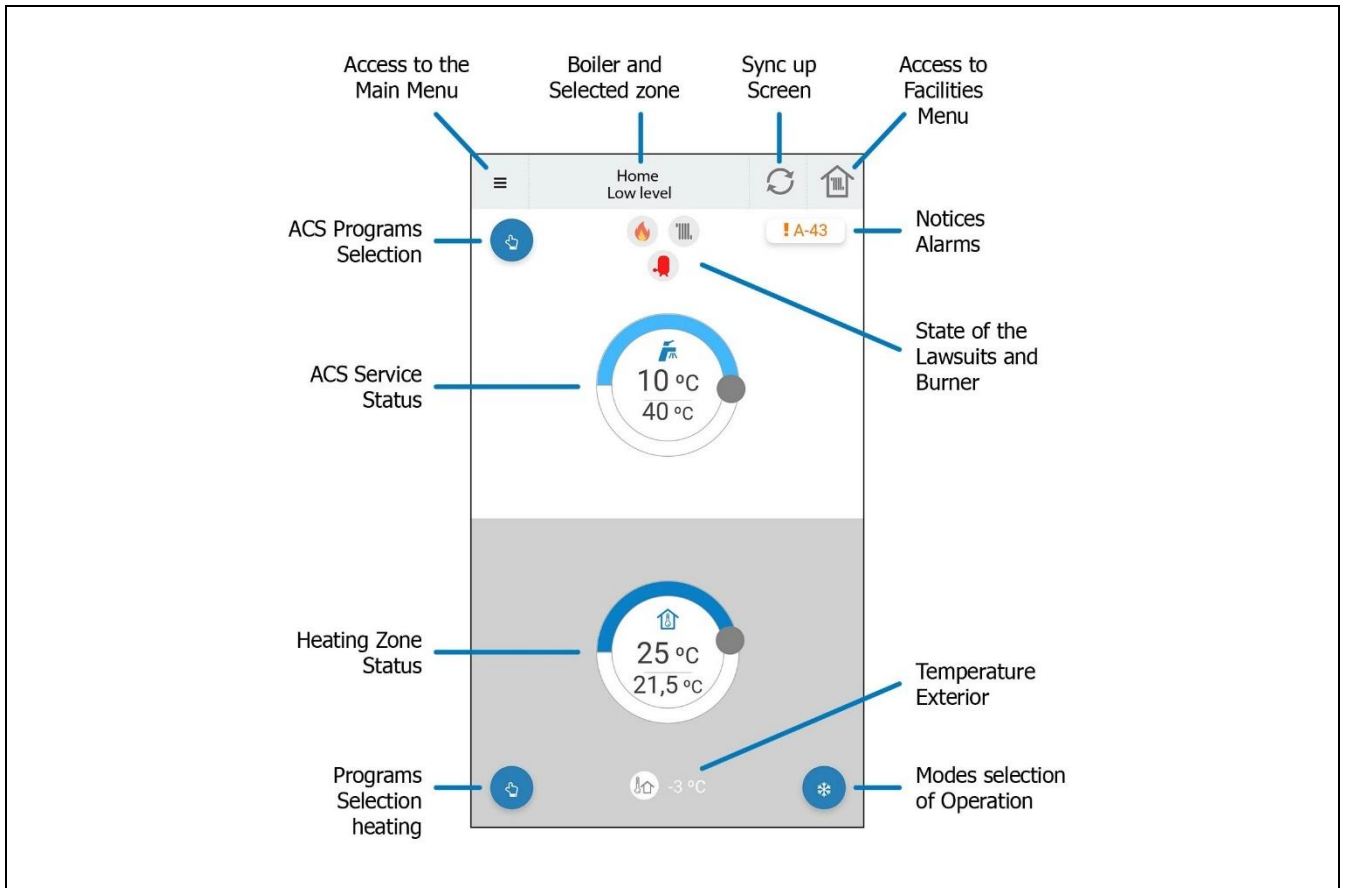

Main Menu

This can be accessed by clicking on the button  located in the upper left part of the "Home" screen, and the following options will be displayed:

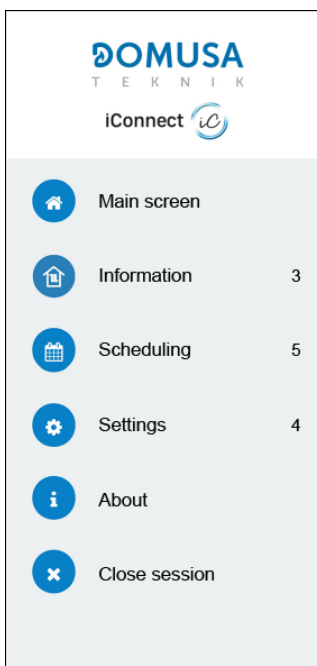

- **Main screen:** Click on this option to return to the "Home" screen.
- **Information:** This option can be used to access technical parameters related to the "Boiler" as well as the "Graphics" and "Counters".
- **Scheduling:** This option can be used to adjust all the timer programmes available in the boiler and to activate the "Holiday Mode" function to programme a period of days of absence from the home during which the boiler will stay turned off. The boiler will turn on automatically at the end of the set period.
- **Settings:** This option can be used to access the "General" settings of the APP, the registered "Boilers", Heating "Zones" and the user "Account" settings. It is possible to activate the **OTC** mode of the desired boiler and select the **K curve** of operation in each heating zone (*see "Operation according to external OTC climatic conditions"*).
- **About:** Use this option to access the "Terms of Use" and "Privacy Policy" and verify the version of the Application.
- **Close session:** Clicking on this option will close the user session and redirect you to the "Login" screen of the Application.

9 OPERATING WITH LAGO FB OT+ REMOTE CONTROL (OPTIONAL)

A remote control (**LAGO FB OT+**) can optionally be supplied together with **BioClass iC 66** boiler. This remote control can be used to fully operate the boiler from anywhere in the room in which it is installed. The **LAGO FB OT+** remote control regulates the parameters of heating circuit and the domestic hot water production.

The **LAGO FB OT+** remote control is not compatible with the boiler's **iConnect** connectivity, so if the boiler is already registered in the **iConnect** application, it will not be possible to install a **LAGO** remote control, and viceversa. If you want to install a **LAGO FB OT+** remote control, first unregister the boiler from **iConnect** using the "iCon" option in the "Configuration" menu (see "Configuration Menu").

This remote control allows the hours of comfort to be programmed for heating circuit, regulating the installation to the particular requirements of the building by measuring the room temperature and consequently adapting the installation temperature. The remote control can also be used to regulate the hot water and heating temperatures set point at any time, and for viewing the different boiler operation parameters. It also warns of any functioning anomalies affecting the boiler.

The **LAGO FB OT+** remote control may optionally be connected to an outdoor temperature sensor, for measuring the temperature around the building. With this option installed, the remote control can adjust the building comfort level according to the weather conditions, optimising fuel consumption and heating comfort in the building.

The **LAGO FB OT+** remote control takes over the control of the boiler when it is connected. The different selectable temperatures boiler of the boiler must be set at the remote control. It is easy to install, requiring only 2 wires for communication between the boiler and the **LAGO FB OT+** control, by connecting the two wires on terminal strip **J5** (see "Electrical Connection Diagram"). For a correct installation and functioning, read carefully the instructions within the remote control.

The following sections contain a general explanation of the different operating modes and options of **LAGO FB OT+** remote control.

Operation of the heating circuit

The maximum temperature for heating circuit, the operating period of time and the desired room temperature can be set at remote control. **LAGO FB OT+** remote control will calculate the boiler temperature required at each particular time, depending on the temperature of the room and it will activate or deactivate the heating demand depending on the heating times and room temperatures programmed.

DHW service function

When **BioClass iC 66** boiler is installed together with a DHW tank the desired DHW temperature and the desired periods of time for DHW service must to be set at **LAGO FB OT+** remote control. **LAGO FB OT+** remote control regulates the DHW tank temperature and enables or disables the DHW service according to the time periods scheduled.

NOTE: The installation of a LAGO FB OT + remote control is not compatible with the iConnect connectivity of the boiler.

10 CONFORT iC WIRELESS DEVICES AND SONDA iC (OPCIONAL)

Wireless devices can be optionally supplied along with the **BioClass iC 66** boiler, which can be used to improve the comfort of the house being able to manage the heating zone as well as an external sensor.

2 different types of wireless devices can be connected to the **BioClass iC 66** boiler: **Confort iC** remote control and/or **Sonda iC** temperature sensor. Both the **Confort iC** remote control and the **Sonda iC** temperature sensor are simultaneously compatible with the same **Receptor RF iC**, so it is possible to create the desired combination of remote controls or room sensors, in order to manage home comfort in a personalised way.

The **Confort iC** remote control and the **Sonda iC** are compatible with the **iConnect** connectivity of the boiler so if the boiler is registered in the **iConnect** application, it is possible to install remote controls and/or wireless probes.

Operating the Confort iC wireless remote control

The **Confort iC** wireless remote control is designed to manage the desired room temperature in the room where it is located by sending a radio signal to the **Receptor RF iC** radio module connected to the boiler. The bidirectional encrypted radio communication allows secure transmission of information from the boiler to the remote control and vice versa, such as the boiler's alarm status, operating mode and weekly programming times, as well as other information. The remote control has a backlit LCD display, where the information is shown.

When an **Confort iC** wireless remote control is connected to the boiler, it makes it easier to control the boiler from the place where it is installed. The various temperatures and parameters that can be selected on the remote control can be changed via the boiler's control panel as well as via the **iConnect** application (if this is connected). If there are programmed time schedules and the boiler is connected to the **iConnect** application, the boiler will operate solely and exclusively via the programmed times of the **iConnect** application.

The wireless remote control is easy to install. To do so, carefully follow the instructions in the section "*Installation with Confort iC wireless remote control and Sonda iC temperature sensor (Optional)*" in this manual. To ensure it works correctly, carefully read the instructions enclosed with the remote control.

Operating the Sonda iC wireless temperature sensor




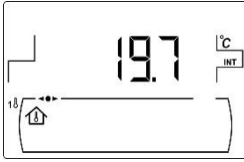






The **Sonda iC** wireless temperature sensor is designed to measure the temperature inside the room and/or the outside temperature and then transmit it to the boiler by sending a radio signal to the **Receptor RF iC** radio module. This temperature is displayed on the boiler display and helps to improve the comfort level of the home by maintaining the set-point temperature selected on the boiler or in the **iConnect** application.

The **Sonda iC** temperature sensor is easy to install. To do so, carefully follow the instructions in the section "*Installation with Confort iC wireless remote control and/or Sonda iC*" in this manual. To ensure its correct operation, carefully read the instructions supplied with the probe.

11 USER MENU

"User Menu" shows the settings related to boiler functioning on the digital display.

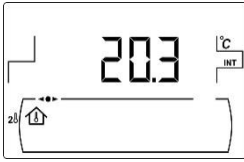To access this menu press MENU; press this button repeatedly to browse through the different settings available. When one of the options is displayed, after 20 seconds the display returns to main position. In the following table are listed all the settings of "User Menu":

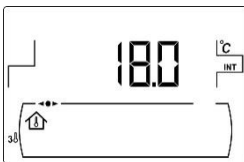		Main position. Actual boiler temperature is displayed.
Manual mode		
Scheduled mode		Temperature setpoint of Zone 1, adjustable using the touch selector (18) . Clicking on it whilst in programmed mode will deactivate said mode and activate manual mode. <i>(only with the room sensor connected).</i>
		Real room temperature of Zone 1 <i>(only with the room sensor connected).</i>
Manual mode		
Scheduled mode		Temperature setpoint of Zone 2, adjustable using the touch selector (18) . Pressing it whilst in programmed mode will deactivate said mode and activate manual mode. <i>(Only with the Bio Hydraulic Kit and room sensor connected).</i>
		Temperatura de ambiente real de la Zona 2 <i>(Only with the Bio Hydraulic Kit and room sensor connected).</i>
Manual mode		
Scheduled mode		Temperature setpoint of Zone 3, adjustable using the touch selector (18) . Pressing it whilst in programmed mode will deactivate said mode and activate manual mode. <i>(Only with the Bio Hydraulic Kit and room sensor connected).</i>
		Real room temperature of Zone 3 <i>(Only with the Bio Hydraulic Kit and room sensor connected).</i>




Ashtray actual fill level.
(see "Ashtray status")




Actual time (HH:MM).




DHW temperature set point setting by means of the tactile button **(19)**.
(DHW tank option only).

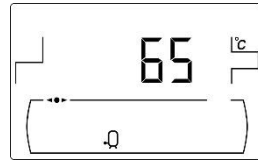


Actual DHW temperature.
(DHW tank option only)

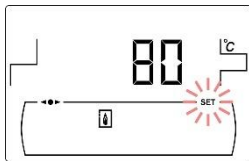


or

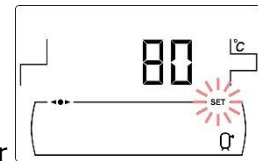


Boiler or buffer tank set point temperature^(*),
selected using the corresponding touch button **(18)**.
(*) *only with buffer tank connected and with control by temperature sensor*

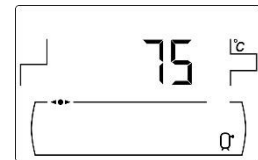


Actual temperature of the Buffer Tank
(*only with buffer tank connected and with control by temperature sensor*).

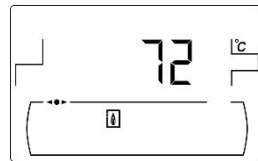

Actual boiler temperature.

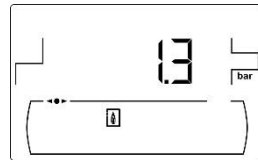


Actual boiler water pressure.

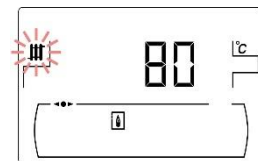

Actual active boiler temperature set point.



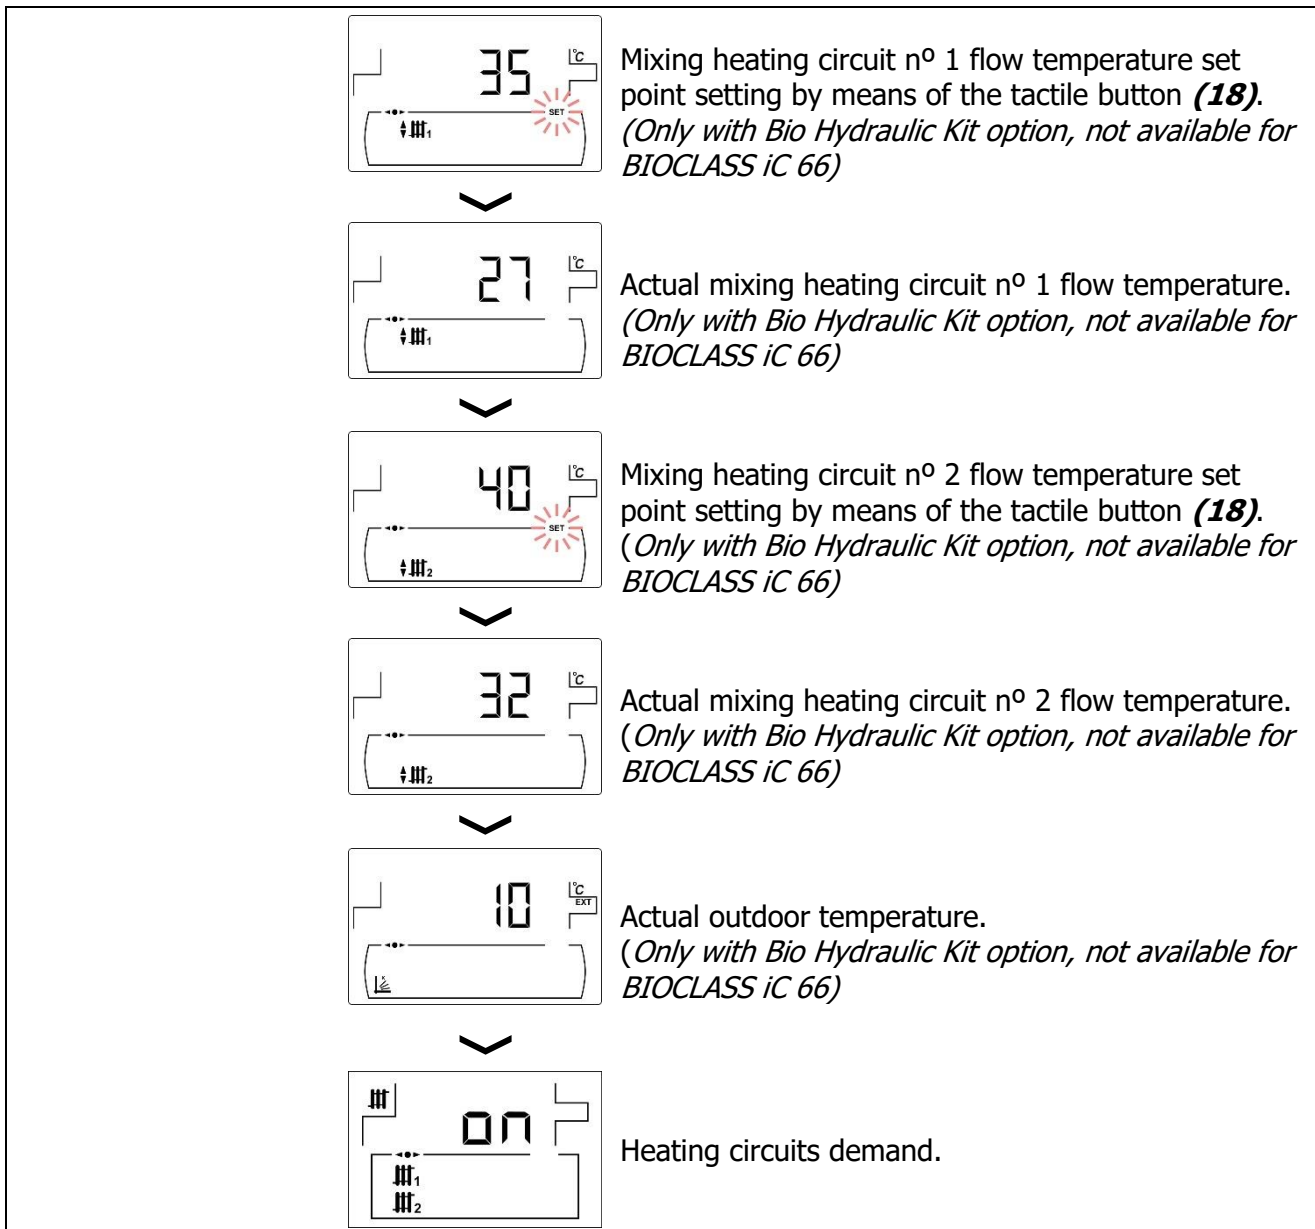




11.1 Ashtray status

When "Ashtray Empty Warning" function is activated (see "Setup menu"), the boiler warns about the ashtray is full and must be emptied. The parameter "Ashtray status" allows checking the fill level and the screen shows the ash scale bar which indicates the fill level of the ashtray. When it is full, an "Empty the ashtray" warning is activated. Whenever the ashtray is emptied, it is necessary to set the "Ashtray status" parameter to "0" by pressing "-" for DHW **(19)**.

The display of the notices is as follows:

 : Ashtray fill level between 0 and 75 %.

 flashing: Ashtray fill level between 75 and 100 %.



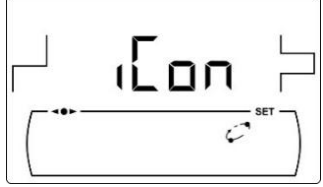
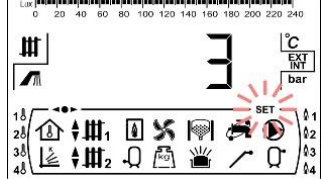
 and  flashing: Ashtray fill level more than 100 %.

12 SETUP MENU

"Setup menu" consists of operating parameters of the boiler which can be adjusted by the user (Ashtray empty warning, timer programming, time setting, ...)

To access to the "**Setup menu**" press . Browse through the menu by pressing the symbols "+" or "-" of heating (18). When a parameter is displayed, press to access and set it. When the parameter has been set, press again, the new value will be saved and the display will return to "Setup menu". Press RESET any time to go back without recording any value. In the following table are listed all the parameters of "Setup menu":

Nº.	Parameter	Display
1	Time programming of Zone 1. (*) (**) <i>(Only with the room sensor connected).</i>	
2	Time programming of Zone 2. (*) (**) <i>(not available).</i>	
3	Time programming of Zone 3. (*) (**) <i>(not available).</i>	
4	Boiler timer programming. (*)	
5	CVS Suction System timer programming. (*) <i>(CVS Suction System option only)</i>	
6	DHW recirculation function timer programming. (*) <i>(DHW tank option only)</i>	
7	Time setting. (*)	

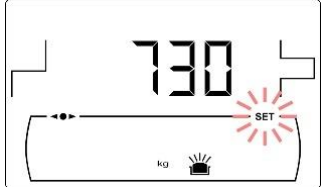Nº.	Parameter	Display
8	Ashtray empty warning function.	
9	Manual setting of feed auger calibration.	
10	Registration of the boiler in iConnect.	
11	Screen contrast setting.	

(*) When the boiler is registered in **iConnect**, these settings will be adjusted through the app.


(**) If there is an **Confort iC** remote control linked to this Zone, the programming will be adjusted via the remote control.

IMPORTANT: It is strongly recommended that the user activate the "Ashtray emptying warning" function (see point 5 of the configuration menu and paragraph 11.6), to avoid a malfunction of the boiler due to premature fouling and a fire.


12.1 Timers programming process

BioClass iC 66 boiler allows setting 3 different timers: boiler timer, Fuel suction system timer (if there is any connected) and DHW recirculation pump timer (if this function is activated on the "Technical Menu"). The default setting for the timers is disabled ("- - - -"), so the functioning that is regulated by each timer will operate 24 hours. The programming process is the same for any timer.


In turn, each of the heating zones that may have been installed in the boiler (up to a maximum of 3 zones) can have their own time programming if they have a room sensor connected. By default, the boiler comes with the heating time schedule disabled (the digits "- - - -" are displayed on the programming screen), that is, the user will manually adjust the desired temperature setpoint at each moment of the day using the corresponding screen of the "User" menu.

The adjustment process, described below, will be the same for any of the time schedules mentioned above. Once the time programming to be adjusted has been selected by pressing , it is accessed and SET will light up flashing, starting the adjustment process.


If a heating time schedule is selected, first go to the settings screens of the room temperature setpoints applied during the scheduled periods of "Comfort" temperature (☀️) and the periods of "Reduced" temperature (🌙). Touch the "+" or "-" heating symbols **(18)** to select this temperature:

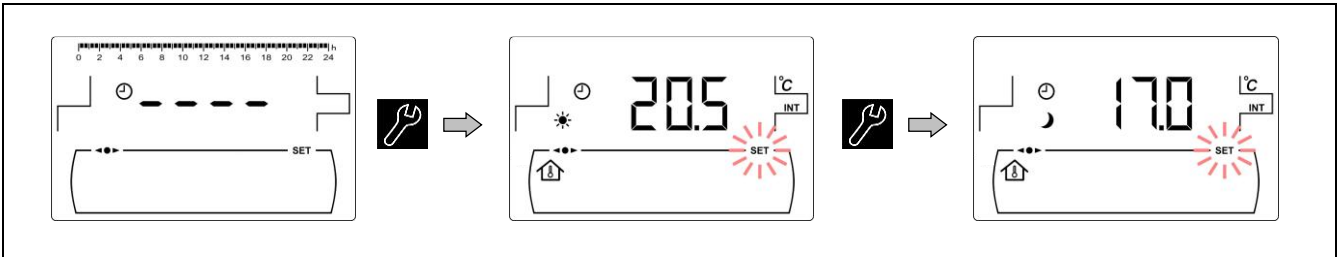


For the other time programmings, directly access the process for setting the activation and deactivation time periods for the selected function:

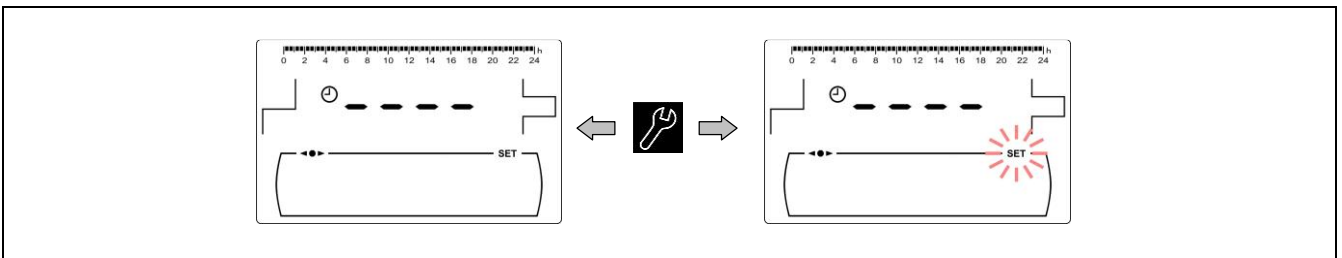

Select the time periods (30 minutes periods) by pressing "+" or "-" of heating **(18)**.

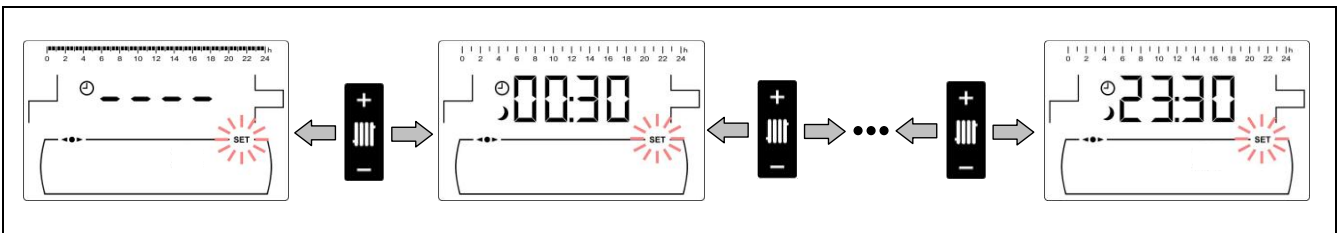


When the period desired is selected, change it state by pressing "+" or "-" of DHW **(19)**. The function will be switched off if symbol 🌙 is displayed and it will be switched on if symbol ☀️ is displayed.

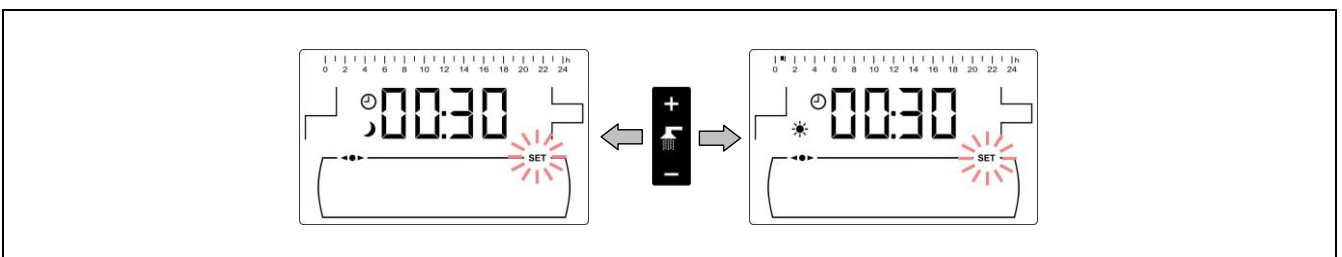

After setting all the periods desired, press 🛠️ to save and return to "Setup menu" level.


12.2 Heating time schedules

These schedules are only displayed for the zones if there is a room sensor connected in the corresponding heating circuit. Use this process to adjust the "Comfort" and "Reduced" heating periods you want for each heating zone installed in the boiler (🏠). To deactivate the time programming for a zone, go to the operating periods selection screen and hold the "-" Heating symbol (**18**) until you see "----". In this way, the user can manually set the desired temperature setpoints for any time during the day.

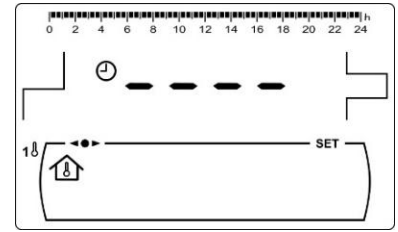


12.3 Boiler timer programming

This timer is used to adjust the switching on and off periods of the boiler functioning. To disable the timer, select boiler timer programming (🕒) and set it to "- - -" by pressing "-" of the boiler temperature touch button (**18**). The boiler timer will be cancelled and it will be switched on permanently.

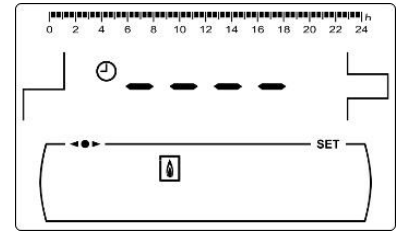


12.4 Programming the Fuel suction system

This programme displays the status of the pellet suction system. This process is used to adjust the periods during which the operation of the pellet suction system will be enabled or disabled. To disable the timer, select the Fuel suction system timer programming (🔧) and set it to "- - -" by pressing "-" of the boiler temperature touch button (**18**). timer will be cancelled and it will be switched on permanently.

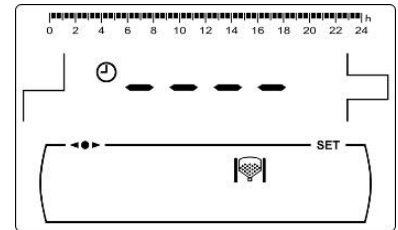


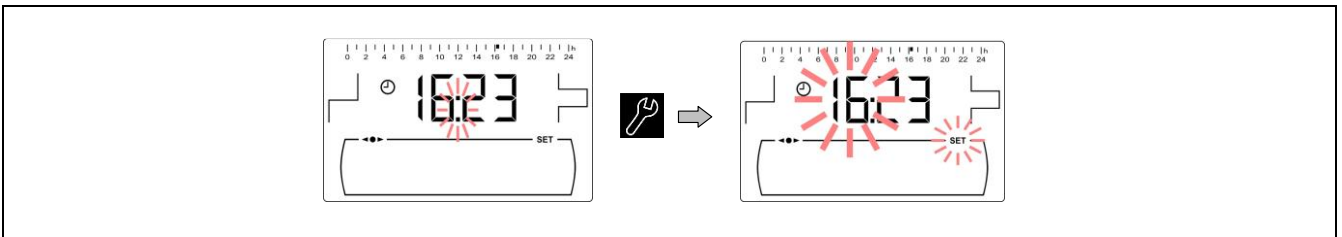
12.5 DHW recirculation function timer programming (DHW tank option only)


This timer is only displayed when the DHW recirculation function is selected in the multifunction relay parameter (P.20 = 2) of the "Technical Menu". It is used to adjust the switching on and off periods of DHW recirculation pump. To disable the timer, select the DHW recirculation timer programming (🚰) and set it to "- - -" by pressing "-" of the boiler temperature touch button (**18**). The timer will be cancelled and DHW recirculation pump will be switched on permanently.

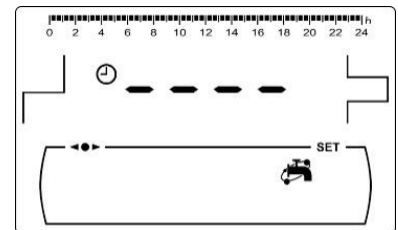



12.6 Time setting

When "Time setting" parameter of "Setup menu" is displayed, press  to access. The first two digits of numerical digits blinks (hours) and setting process begins:



Set the hour value by pressing "+" or "-" of DHW (19). Pressing  the value is saved and the minutes digits blinks to set them.

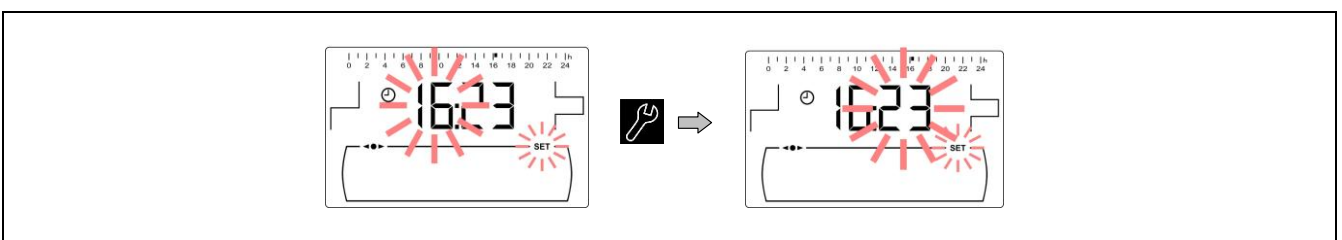

Set the minutes value by pressing "+" or "-" of DHW (19). Pressing  the value is saved and it returns to "Setup menu" level.



When the boiler is registered in **iConnect**, it will not be necessary to set the time as it will be automatically set and synchronised by the APP, so this screen from the "Configuration" menu will not be displayed.

12.7 Empty ash box notice

With this function activated, the boiler lets us know when the boiler ash box is full, so that we proceed with its emptying. The parameter "Ashtray status" of "User Menu" allows checking the actual fill level. When it is full, an "Empty the ashtray" warning is activated.

By default, the ash box reminder function is supplied activated and is set to indicative fuel consumption values which, depending on the quality and type of fuel, will have to be adjusted for each system. Below shows the default number of kilograms at which the boiler notifies you to empty the ash drawer:



Modelo	kg
BioClass iC 66	6000 kg


Select "Ashtray empty warning" () parameter of "Setup menu" and press  to access. The value is set by pressing "+" and "-" symbols of DHW (19). It is possible to deactivate this function by setting the value of this parameter to "OFF".



NOTE: Each time a new value is set for this parameter, the ashtray must be emptied.



12.8 Manual setting of feed auger calibration


When this parameter is displayed () on "Setup menu", press  to access and set the value desired by pressing "+" o "-" of DHW **(19)**. The range of values selectable is OFF, 0.500 - 5.000 kg.

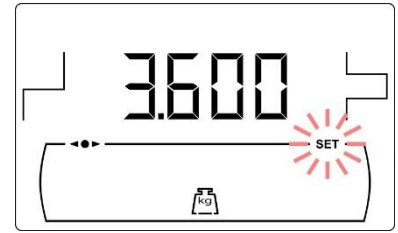


1.1 Registration of the boiler in iConnect


Use this option to activate the boiler registration process in the **iConnect** APP. First download and install the application on a mobile device, tablet, or similar, and go to the "Register boiler" option of the home screen. Use the **iConnect** APP to remotely access all the home comfort management parameters from anywhere in the world (see "**iConnect** connectivity").

Once you have selected the "**iCon**" screen () from the "Configuration Menu", press the  symbol to access it. **SET** will flash, and use the "+" or "-" DHW symbols **(19)** to set the desired value. To activate the registration of the boiler in **iConnect** set the value to "on". Once you have completed the registration process in the APP, the value "rEG" will be displayed, indicating that the registration was successful. Setting this value of the screen to "oFF" will disconnect the boiler from **iConnect**, unregistering the APP.

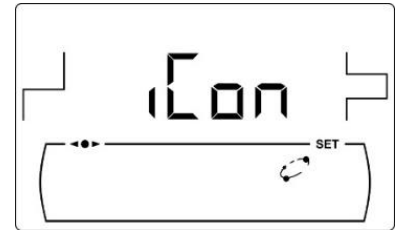



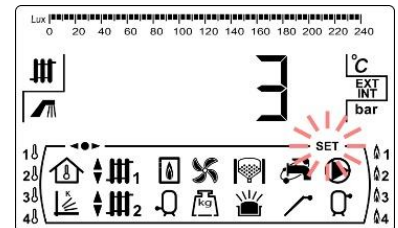

1.2 Screen contrast setting






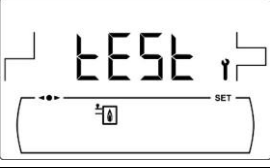
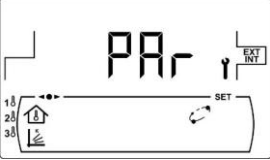
When this parameter of the "Setup menu" is displayed, press  to access and set the value desired by pressing "+" o "-" of DHW **(19)**. The range of values selectable is 1 - 5.



13 CALIBRATION MENU

"*Calibration Menu*" consists of a number of processes and parameters that allow the correct set up of the boiler.


To access the "**Calibration Menu**", the boiler must be switched off by pressing  tactile button. After having switched off the boiler press  for 5 seconds to access to the menu. Browse through the menu by pressing the symbols "+" or "-" of heating (18). When the desired parameter is displayed, press  to access and set it. When the parameter or process has been set, press  again, the value will be saved and the display will return to "*Calibration menu*". Press RESET any time to go back without recording any value. In the following table are listed all the parameters and processes included in "*Calibration menu*".

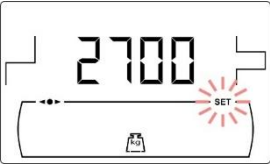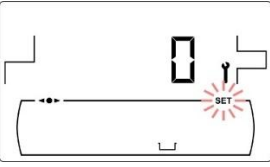Nº.	Parameter	Display
1	Feed auger filling	
2	Feed auger calibration	
3	Manual setting of feed auger calibration	
4	Manual ash cleaning activation	
5	Manual circulation pumps activation	
-	<i>*Fonction reserved for the German market.</i>	
6	Pairing and un-pairing of Confort iC and Sonda iC wireless temperature control devices.	


13.1 Feed auger filling

During the commissioning of the boiler, before calibrating the feed auger or if the hopper runs out of fuel, **it is compulsory** to fill of fuel the feed auger. By means of this parameter the feed auger will be filled of fuel, process required for a correct boiler functioning.

When "Feed auger filling" parameter is displayed (🔧) on "Calibration Menu", press 🔧 to access. SET symbol blinks and pressing 🔧 again it will be activated filling procedure. The feed auger will be activated and a count up to 15 minutes (maximum) will be displayed. During the process by pressing 🔧 the feed auger could be stopped at any time and by pressing RESET the filling procedure could be finished and return to "Calibration Menu" at any time.

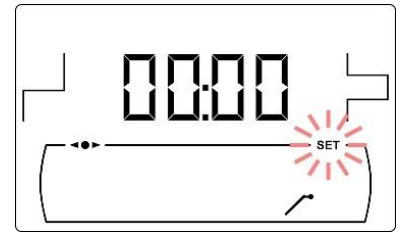






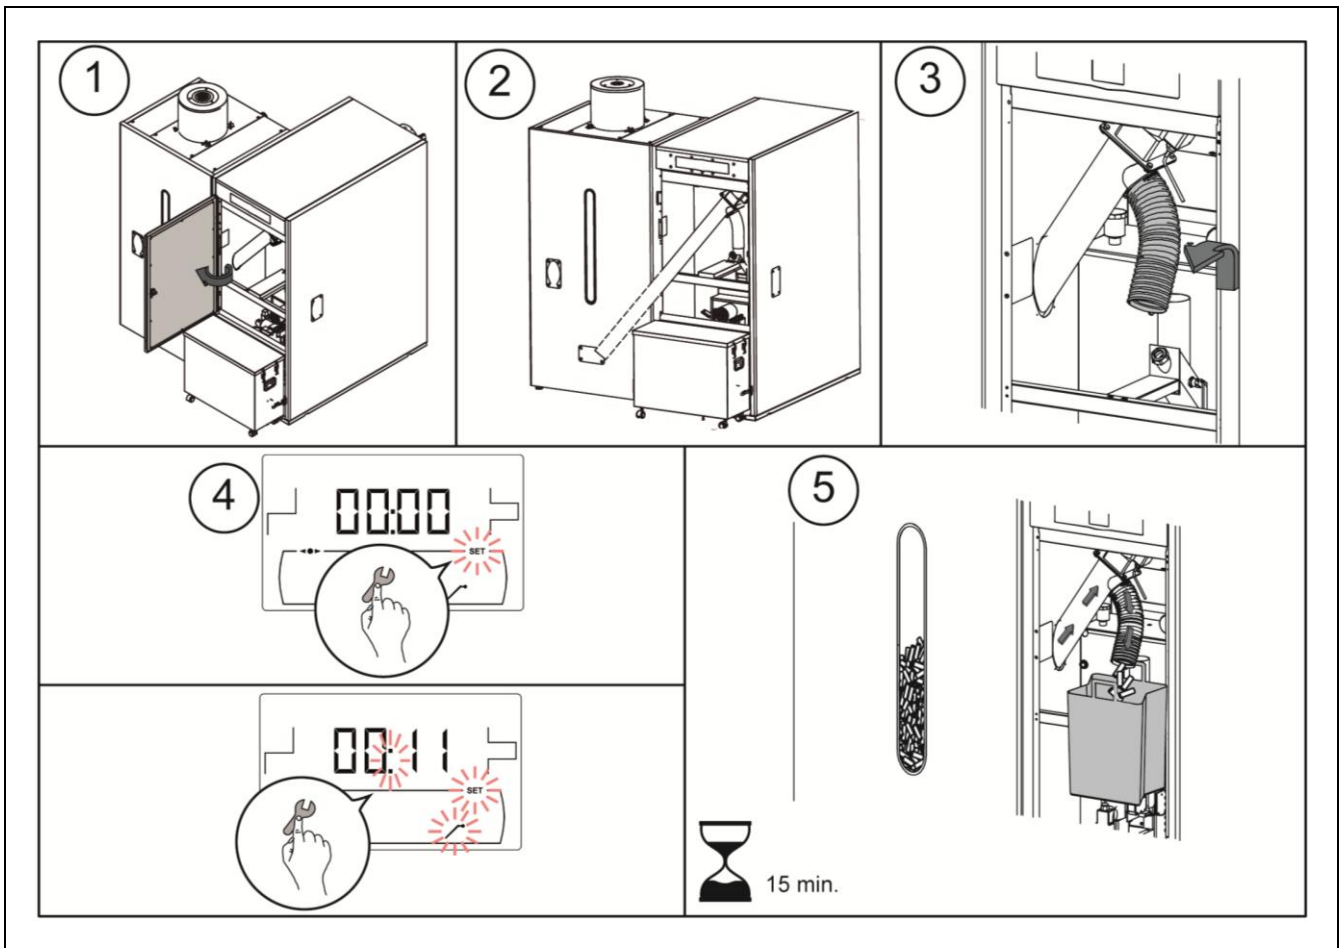To ensure a complete filling of boiler feed auger it is recommended to make a complete 15 minute procedure of filling, at least once. Follow the steps shown in the following pictures for a correct filling of the feed auger:




IMPORTANT: It is compulsory to fill the feed auger during the commissioning or when the hopper runs out of fuel.


13.2 Feed auger calibration

By means of calibrating the feed auger the electronic controller of the boiler adjusts the optimum amount of fuel required to supply the burner and to produce the correct heat output and combustion. By means of this parameter the feed auger calibration procedure will be made, process required for a correct boiler functioning. **In any case the hopper is empty or it runs out of fuel, it is compulsory to fill the feed auger before carrying out the calibration process. It is compulsory to calibrate the feed auger on commissioning.**

When "Feed auger calibration" parameter is displayed () on "Calibration Menu", press  to access. SET symbol blinks and pressing  again it will be activated calibration procedure. The feed auger will be activated and a countdown from 200 doses will begin. When the countdown finishes current calibration value will be displayed, press  to adjust the new value obtained during the procedure by pressing "+" or "-" symbols of DHW (19). Finally pressing  the value will be saved and it will return to Calibration Menu level.

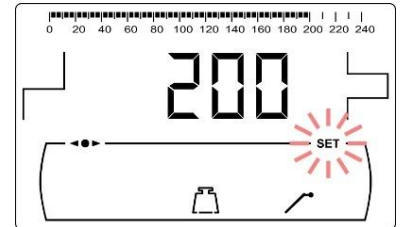


This process must be carried out at least twice to ensure the correct amount of fuel has been added. Follow the steps shown in the following pictures for a correct calibration of the feed auger:

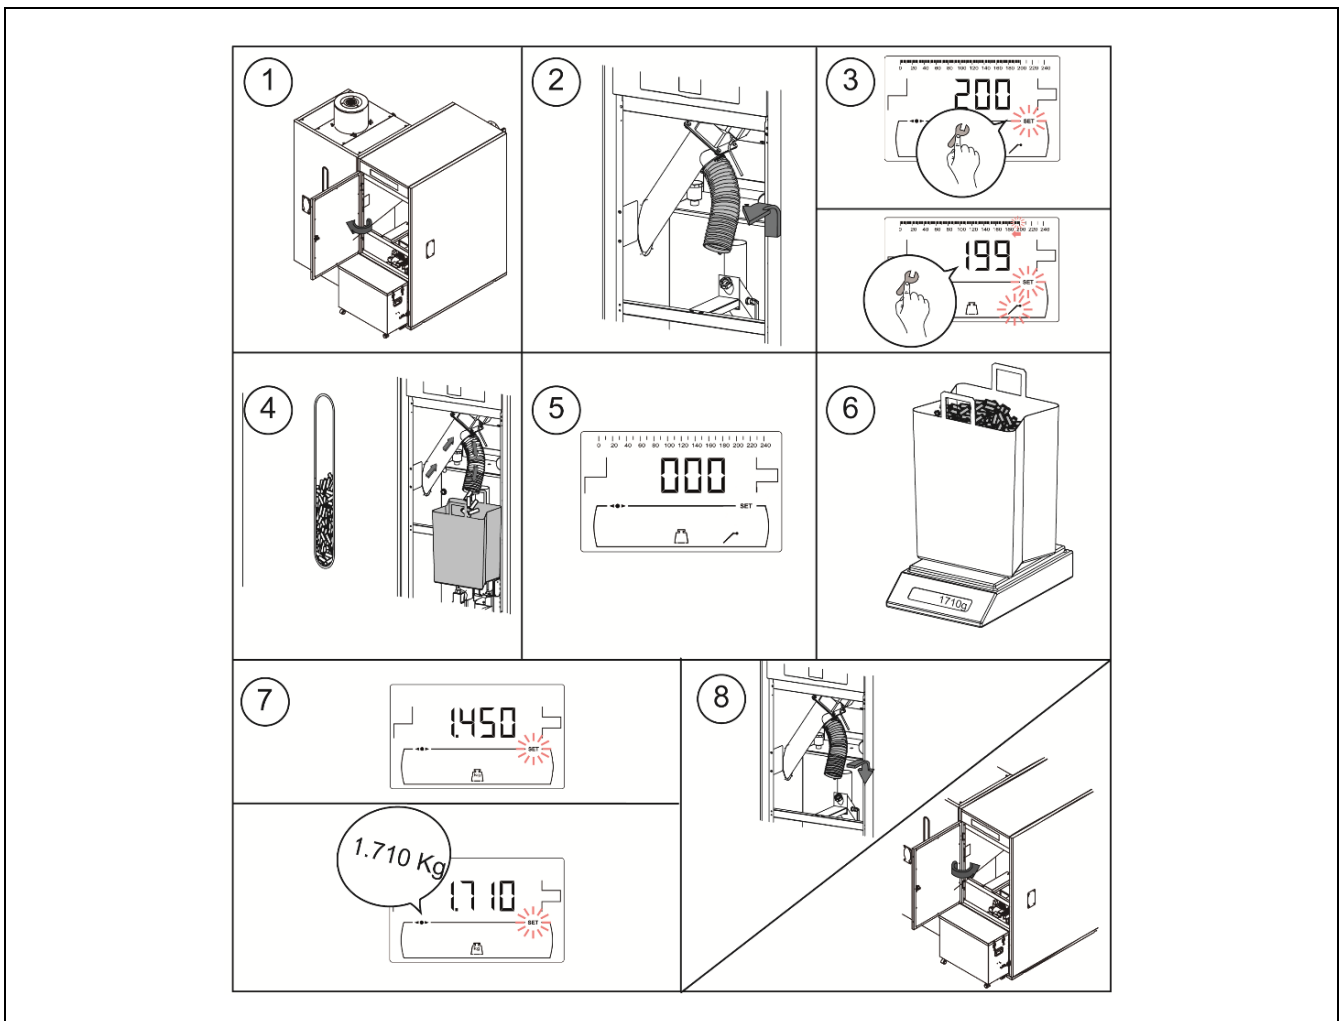

IMPORTANT: Calibrate the feed auger during commissioning of the boiler or whenever the fuel supplier has been changed.


13.3 Manual setting of feed auger calibration

By means of this parameter the weight obtained in the feed auger calibration procedure can be set manually. When "Manual setting of feed auger calibration" parameter is displayed (⚙️) on "Calibration Menu", press ⚙️ to access and set the value desired by pressing "+" or "-" of DHW (19). The range of values selectable is OFF, 0.500 - 5.000 g.

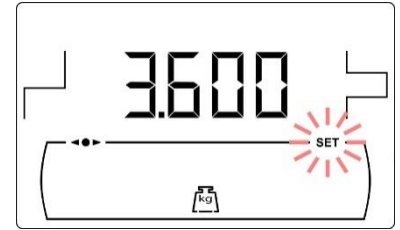

13.4 Manual ash cleaning activation


By means of this parameter the burner ash cleaning device can be switched on manually up to a maximum of 20 cleaning cycles. When "Manual ash cleaning activation" parameter is displayed (⚙️) on "Calibration Menu", press ⚙️ to access. SET symbol blinks and pressing ⚙️ again it will be activated the cleaning system. A countdown of 20 cycles will be displayed. When the countdown is finished the cleaning device will stop. By pressing ⚙️ the cleaning procedure can be stopped at any time and by pressing RESET it will return to "Calibration Menu" level.

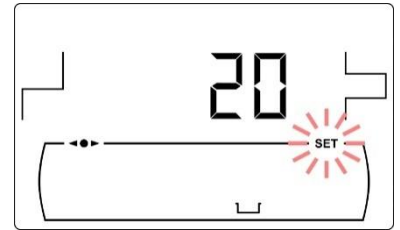

13.5 Manual circulation pumps activation

By means of this parameter the circulation pumps can be switched on manually. When "Manual circulation pump activation" parameter is displayed (⚙️) on "Calibration Menu", press ⚙️ to access. SET symbol blinks and pressing ⚙️ again the circulation pumps will be activated for a period of not more than 20 minutes.


By pressing ⚙️ the circulation pumps can be stopped at any time and by pressing RESET it will return to "Calibration Menu" level.

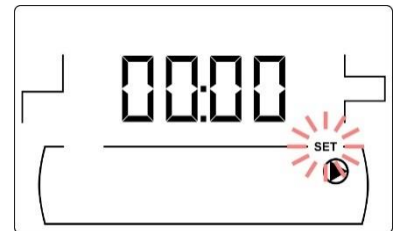



13.6 Pairing and un-pairing of wireless temperature control devices


This function will be available if an **Receptor RF iC** radio module is available connected to the Modbus (+A/-B) port of the **iConnect** board.


This option will pair and unpair the wireless device with the **Receptor RF iC** radio module and will link it to the appropriate heating zone. To successfully complete the pairing and un-pairing process, follow the steps below, in the order shown:


Once the "Pairing and un-pairing" process has been selected from the "Calibration Menu" ("**PRr**"), by pressing  to access it, the flashing "**◀●▶**" symbol will appear and the current pairing status of heating Zone 1 will be displayed. If "**on**" is displayed, this means that a wireless device is already paired in that zone, and if "**oFF**" is displayed, this means that there is no paired device yet and it can be paired if desired. Use the "+" or "-" Heating symbols (**18**), to select the desired heating zone.

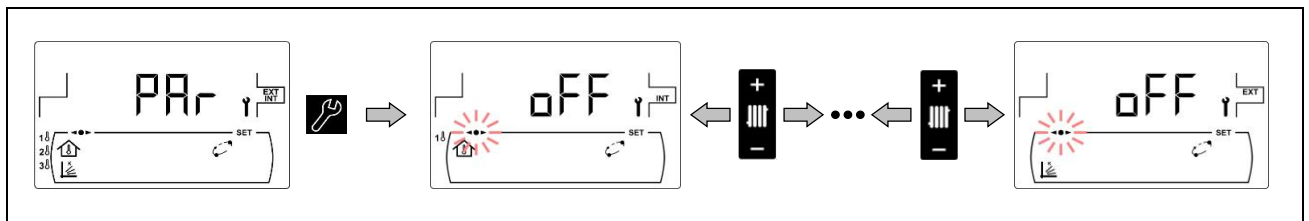



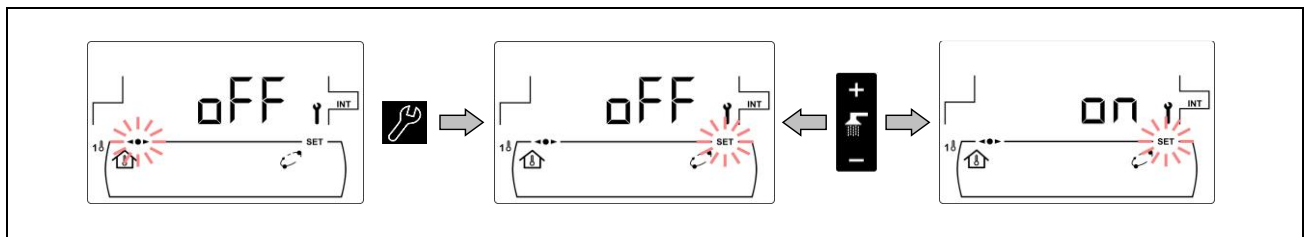


1. Once the desired Zone to be paired/unpaired has been selected, press  to access it and **SET** will be displayed in flashing mode. Using the "+" or "-" symbols in ACS (**19**) you can select the "**on**" or "**oFF** function to pair or un-pair".

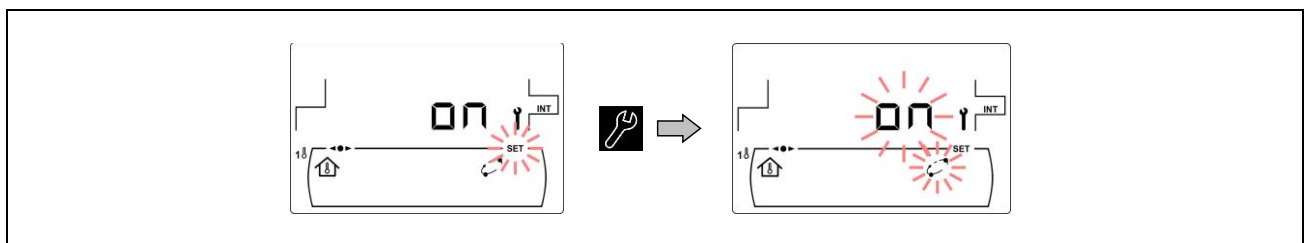

2. Pressing  again will activate the selected function, displaying the function and the flashing "**↻**" symbol. The boiler will wait for a maximum of 10 minutes for the pairing or un-pairing of the wireless device with the **Receptor RF iC** radio module to take place.










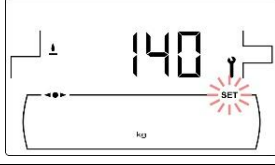

3. If the **pairing** function has been selected, this must be done from the wireless device itself. Depending on the type of wireless device (**Confort iC** or **Sonda iC**) the pairing will be done differently (see the instruction manual supplied with each device for details):
 - **Confort iC** remote control: Go to the "**PRr**" option (**P03**) in the control's user menu and press the middle button  of the device. The remote control will begin the pairing process, attempting to connect to the radio module for a maximum time period of 4 minutes. If the connection is successfully completed, the control screen will display "**End**" and "**Succ**". Press the centre button  again to return to the main screen and wait for the  and  symbols to stop flashing and disappear (up to a maximum of 2 minutes). The pairing process is now complete.
 - **Sonda iC** temperature sensor: To pair this type of wireless device, press the button on the back of the device and wait until the red LED light next to it stops flashing. The wireless probe pairing process is now complete.
4. If you have selected the **un-pairing** function, it will not be necessary to have the wireless device physically present. Simply set the "**oFF**" value in the "**PRr**" option of the "Calibration" menu of the boiler control panel, press the  symbol and wait for the un-pairing process to be executed. The boiler will return to the initial "**PRr**" screen. The un-pairing process is successfully completed.
5. If the pairing and un-pairing processes are completed successfully, the boiler will return to the initial screen of the "**PRr**" option. If not, the boiler display will stop flashing and wait for the process to be repeated.






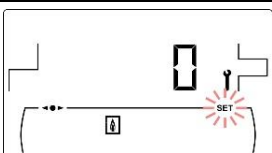
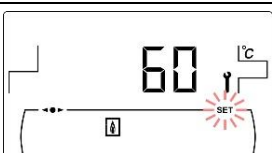
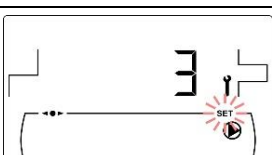


For more information about the installation and operation of the **Confort iC** remote control and the **Sonda iC** temperature sensor, read the instructions enclosed with the remote control and the probe in detail.






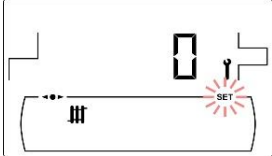
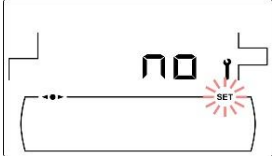



14 TECHNICAL MENU

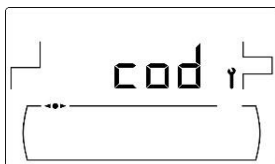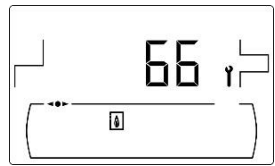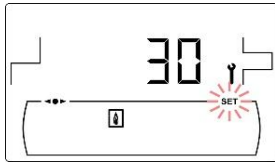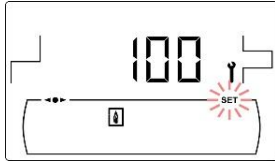

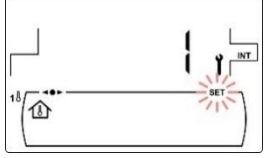
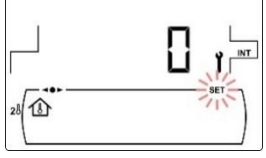
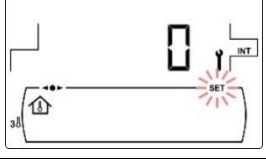

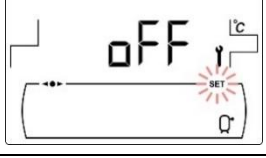
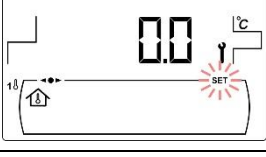


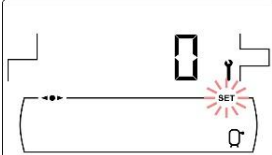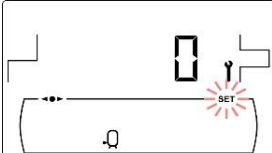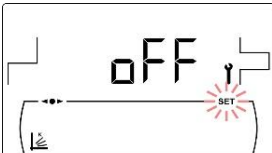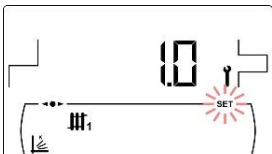"Technical Menu" consists of a number of technical operating parameters that only have to be modified by a person with sufficient technical knowledge of the meaning of each parameter. Any inappropriate setting of a parameter of "Technical Menu" can cause a serious malfunctioning of the boiler and could cause damages to people, animals or things.

To access the "**Technical Menu**" press MENU and RESET tactile buttons together for 5 seconds. Access code ("cod") request will be displayed (see "Entry and set the access code"). After entering the correct code, the first parameter of "Technical menu" will be displayed. Browse through the menu (**P.01, ..., P.53**) by pressing the symbols "+" or "-" of heating (**18**). When the desired parameter is displayed, press  to access and set it by pressing the symbols "+" or "-" of DHW (**19**). When the parameter has been set, press  again, the value will be saved and the display will return to "Technical menu". Press RESET any time to go back without recording any value. The following table lists these parameters and they are described in detail in the following sections of the manual:

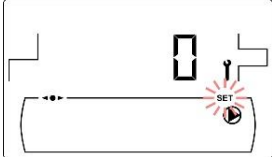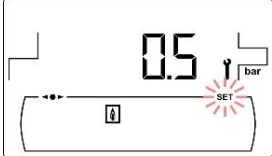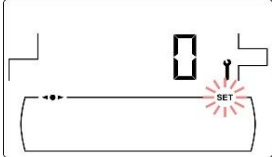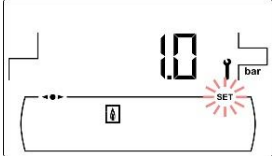
Nº	Parameter	Display
Cod	Access code (by default 1234)	
P.01	Boiler model	
P.02	Minimum boiler heat output (%)	
P.03	Maximum boiler heat output (%)	
P.04	General fan speed factor (%) (Visible only with C.01 = 0 or C.01 = 1)	
P.05	Fuel for ignition (g)	
P.06	Fuel consumption (kg/h)	


N°	Parameter	Display
P.08	Selecting the type of installation for the BT buffer tank <i>(Only with buffer tank installed)</i>	
P.09	DHW installation mode	
P.10	OTC function, depending on outdoor conditions	
P.11	Heating circuit n. 1 K-factor curve <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	
P.12	Heating circuit n. 2 K-factor curve <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	
P.13	Boiler minimum temperature mode	
P.14	Minimum boiler temperature (°C)	
P.15	Heating pump post-circulation time (min)	
P.16	DHW pump post-circulation time (min) <i>(DHW tank option only)</i>	
P.17	Legionella protection function <i>(DHW tank option only)</i>	

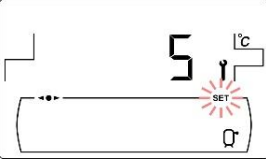N°	Parameter	Display
P.18	Boiler's pump operating mode (BC)	
P.19	Minimum boiler water pressure (bar)	
P.20	Multifunction relay	
P.21	Automatic water filling pressure(bar) <i>(P.20 = 3 option only)</i>	
P.22	Fuel suction system cycle time (s)	
P.23	BIO Hydraulic Kit direct pump operating mode <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	
P.24	Reset default values	
P.25	Set access code	
P.26	Auxiliary parameter for fuel selection	
P.27	Maximum heating flow temperature of mixed circuits <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	

N°	Parameter	Display
P.28	BT buffer tank temperature hysteresis <i>(Only with buffer tank installed)</i>	
P.45	K curve of the direct circuit (Zone 1)	
P.46	Type of room temperature device in Zone 1 (Direct circuit)	
P.47	Type of room temperature device in Zone 2 (Mixed circuit 1) <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	
P.48	Type of room temperature device in Zone 3 (Mixed circuit 2) <i>(Only with Bio Hydraulic Kit option, not available for BIOCLASS iC 66)</i>	
P.49	Room temperature hysteresis (Only with connected room sensor)	
P.50	Minimum temperature for BT tank heating (Only with buffer tank installed)	
P.51	Zone 1 room temperature correction	
P.52	Zone 2 room temperature correction <i>(Only with Bio Hydraulic Kit option)</i>	
P.53	Zone 3 room temperature correction <i>(Only with Bio Hydraulic Kit option)</i>	

14.1 Entry and set the access code ("cod", P.25)

When the access code request is displayed or to set a new one (**P.25**), press  to access. **SET** symbol blinks and it would be possible to enter the code or set it. Press the "+" o "-" for heating symbols (**18**) to browse trough the digits and press the "+" o "-" for DHW symbols (**19**) to set each digit. By default, the access code is "1234". The **P.25** parameter allows to set a new access code.

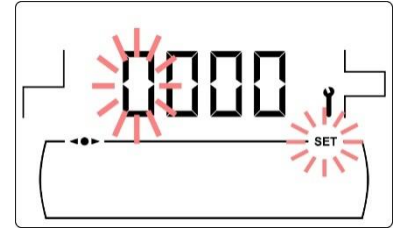

15 BOILER'S SETUP PARAMETERS

The following parameters in the "*Technical Menu*" allow to adjust the boiler to each installation. They only may be modified by a person with sufficient technical knowledge of the meaning of each parameter. Any inappropriate setting of a parameter of "*Technical Menu*" can cause a serious malfunctioning of the boiler and could cause damages to people, animals or things.

15.1 Boiler Model (P.01)

Parameter **P.01** displays the model of the boiler set at DIP-switch on the electronic board.

P.01 = 66 => BioClass iC 66

15.2 Boiler heat output (P.02, P.03)

BioClass iC 66 boiler is configured to modulate between a minimum and a maximum burner heat output. By means of parameters **P.02** and **P.03** the minimum and maximum heat output of the burner may be set at desired value.

15.3 General fan speed factor (P.04)

Using parameter **P.04**, a multiplication factor for the fan speed percentage can be set when automatic fan adjustment is not activated. Using this parameter, the amount of combustion air can be increased or decreased, to ensure correct combustion values. Changing its value modifies the percentage of the fan throughout its modulation curve. The selectable range of parameter **P.04** is 0 - 200 (by default 100), if a value lower than 100 is set, the amount of air will be decreased and if a value higher than 100 is set, it will be increased.

15.4 Fuel for ignition (P.05)

By means of parameter **P.05** the amount of fuel for burner ignition procedure may be set at desired value. The default value depends on the model of boiler and the type of fuel set. The range of values selectable is 0 - 900 g.

15.5 Fuel consumption (P.06)

By means of parameter **P.06** the amount of fuel consumed by the boiler at 100% heat output may be set, in kilograms per hour. The range of values selectable is 1.00 - 30.00 kg/h.

15.6 Managing BT and BT-DUO buffer tanks (P.08, P.28, P.50)

Parameter **P.08** is used to set the type of hydraulic installation that has been used for the **BT** or **BT-DUO** buffer tank. This parameter depends on the installation and must be set by the installer once the buffer tank has been assembled. The factory default value is 0, management function of BT buffer tanks disabled. The electronic control of the **BioClass iC 66** boiler is able to manage the operation of 4 different types of installation.

- P.08** = 0 => Function disabled (default value).
- P.08** = 1 => Installation with Sanit DHW tank after BT tank and control by temperature sensor.
- P.08** = 2 => Installation with Sanit DHW tank before BT tank and control by temperature sensor.
- P.08** = 3 => Installation with Sanit DHW tank after BT tank and control by thermostat.
- P.08** = 4 => Installation with Sanit DHW tank before BT tank and control by thermostat.

When the installation type **1** or **2** is selected, by means of parameter **P.28**, it is possible to adjust the hysteresis of temperature for the sensor **Sbt**, in order to set the temperature to start up and stop the BT buffer tank heating operation. The parameter **P.28** can be adjusted between 5 and 40 °C and by default it is set to 5 °C. In turn, by means of parameter **P.50** it is possible to set a minimum temperature at which the operation of the heating circuits connected to the buffer tank will be enabled, below this temperature the heating circuits will remain deactivated. The selectable range of parameter **P.50** is OFF, 30 - 70 °C and the factory default value is OFF.

15.7 Auxiliary parameter for fuel selection (P.26)

By means of parameter **P.26** the combustion may be set to the fuel characteristics. This parameter is related to the boiler model (heat output) and the type of fuel used. The range of values selectable is 0.000 - 99.99 kg/h.

15.8 Boiler minimum temperature mode (P.13, P.14)

By means of parameters **P.13** and **P.14** a different mode of temperature managing may be set (by default **P.13 = 0**), if heating or/and DHW services are enabled. When parameter **P.13** is set to 0, by parameter **P.14** the minimum temperature can be selected as desired, between 30 and 60 °C. The following regulation modes of minimum temperature can be selected:

- P.13** = 0 => Maintains the minimum temperature set at **P.14** parameter (by default).
- P.13** = 1 => Maintains the boiler temperature set point.
- P.13** = 2 => Does not maintain any boiler temperature.

16 HEATING CIRCUIT'S SETUP PARAMETERS

BioClass iC 66 is equipped with an electronic controller to manage efficiently the automatic functioning of the boiler. It also has the following additional parameters to regulate the heating circuit connected. They only may be modified by a person with sufficient technical knowledge of the meaning of each parameter. Any inappropriate setting of a parameter of "*Technical Menu*" can cause a serious malfunctioning of the boiler and could cause damages to people, animals or things.

16.1 Heating pump post-circulation time (P.15)

This function keeps the heating pump (**BC**) running for a period of time after deactivating the heating service, to avoid the overheating due to the temperature inertias of the heating installation. By means of parameter **P.15** the period of time that the pump continues to operate may be set. The range of values selectable is 0 - 40 minutes (by default 3 minutes).

16.2 Boiler's pump operating mode (P.18)

The electronic controller allows to select between two operating modes of boiler's circulating pump (**BC**) by means of **P.18** parameter of the "*Technical Menu*". The following operating modes can be selected:

- P.18 = 0 =>** Standard mode: The circulation pump will be run depending if the heating demand is activated or not.
- P.18 = 1 =>** Continuous mode: The pump continues to run provided that the heating mode is enabled (boiler temperature set point different to OFF). If there is room thermostat or remote control connected to the boiler, the electronic controller will regulate the burner functioning according to the heating demand, keeping the pump running continuously.

16.3 Minimum boiler water pressure (P.19)

BioClass iC 66 is equipped with a water pressure sensor that makes possible to know the pressure of the boiler. If the pressure descends below the value set at **P.19** parameter, the electronic controller locks out the functioning of the boiler and **E-19** alarm code is displayed (see "*Safety lock-outs*"). The range of values selectable is 0.1 - 0.5 bar (by default 0.5 bar).

16.4 Type of room temperature device (P.46, P.47, P.48)

The **BioClass iC 66** boiler is capable of managing the temperature conditions inside the home for each heating zone connected to it by means of 2 types of devices (see "Installing a room sensor or thermostat"). Use parameters **P.46** (Zone 1), **P.47** (Zone 2) and **P.48** (Zone 3) to set the type of room temperature device installed in each heating area.

- P.46, P.47 or P.48 = 0 =>** Room thermostat.
- P.46, P.47 or P.48 = 1 =>** Room sensor.

16.5 Room temperature hysteresis (P.49)

Parameter **P.49** can be used to adjust the hysteresis of the room temperature required to reactivate the demand, i.e. once the desired room temperature has been reached in the room, how much it will have to fall below that temperature for the heating demand to be reactivated. The appropriate choice of the value of this parameter will avoid excessive cycling of the activation of the heating demand of the boiler, optimising its operation. The optimal value will depend on the level of the home's thermal insulation; the higher the insulation level, the lower the value of parameter **P.49** can be. In turn, if the insulation level is reduced, it is recommended to increase the parameter. This parameter will only be applied in heating zones where there is a connected room sensor. The selectable range of parameter **P.49** is 0.2 - 5°C and the factory default value is 0.5°C.

16.6 Room temperature correction (P.51, P.52, P.53)

Through these parameters it is possible to compensate the temperature measurements differences in the temperature sensors. Selectable range **P.51** (zone 1), **P.52** (zone 2) and **P.53** (zone 3) is -5,0 - +5,0 °C and the default value is 0,0 °C.

17 DHW CIRCUIT'S SETUP PARAMETERS

BioClass iC 66 is equipped with an electronic controller to regulate a Domestic Hot Water production service, if a DHW tank is connected to the boiler. The following parameters are used to set the parameters related to DHW service. These parameters are only displayed if a DHW tank is connected. They only may be modified by a person with sufficient technical knowledge of the meaning of each parameter. Any inappropriate setting of a parameter of "*Technical Menu*" can cause a serious malfunctioning of the boiler and could cause damages to people, animals or things.

17.1 DHW installation mode (P.09)

BioClass iC 66 could be set to be connected to a DHW production installation managed by a 3-way DHW diverter valve or by a hot water tank pump. These two operating modes can be selected by means of **P.09** parameter:

P.09 = 0=> 3-way DHW diverter valve installation.

P.09 = 1=> Hot water tank pump installation (by default).

17.2 DHW pump post-circulation time (P.16)

This function keeps the DHW valve or pump running for a period of time after deactivating de DHW service, to avoid the overheating of the boiler due to the temperature inertias of the DHW installation. By means of parameter **P.16** the period of time that the pump/valve continues to operate may be set. The range of values selectable is 0 - 20 minutes (by default 5 minutes).

17.3 Legionella protection function (P.17)

This option prevents the proliferation of legionella bacteria in the DHW tank. Every 7 days the temperature of tank hot water is increased to 70 °C to kill the bacteria. This function is only active if the boiler is turned on and a DHW tank is connected. By means of parameter **P.17** the protection against Legionella bacteria function may be activate or deactivate. By default this function is set deactivated.

17.4 DHW re-circulation function (P.20 = 2)

The multifunction of the auxiliary relay output allows to install a DHW re-circulating pump in DHW hydraulic circuit, in order to increase the comfort of DHW service. To activate this function read "*Multifunction-Relay functions*" section.

18 ADDITIONAL FUNCTIONS

BioClass iC 66 boiler includes the following additional control functions.

18.1 Time of the Fuel suction system cycle (P.22)

The **BioClass iC 66** boiler includes the installation of a **Fuel suction system**. Using the **P.22** parameter, the activation cycle time of the system can be adjusted.

18.2 Reset default values (P.24)

In case any parameter is wrongly set or if the boiler works incorrectly, all the original values of the parameters can be reset automatically by selecting "Yes" in **P.24** parameter.

18.3 Pumps anti-lock function

This function prevents the boiler circulating pumps from locking if they have been out of use for a long period of time. This system remains enabled while the boiler is plugged into the mains.

18.4 Anti-frost function

This function protects the boiler from freezing during cold weather periods. If the boiler temperature drops below 6 °C, the heating pump will start running until the boiler temperature reaches 8 °C. If the boiler temperature continues to drop below 4 °C, the burner will start running, in order to heat the installation. It will continue working until the boiler reaches 15 °C. This system remains on standby while the boiler is plugged into the mains.

18.5 Boiler pressure sensor function

This function prevents boiler failure caused by a low or high water pressure level in the boiler. The pressure is detected by a pressure sensor and its value appears on the control panel display (in the "User Menu"). When the pressure drops below the pressure set at **P.19** parameter (by default 0.5 bar), the electronic controller locks out the boiler functioning and displays **E-19** alarm code on the screen. When the boiler pressure exceeds 2.5 bar, (**E-28**) alarm code is displayed on the screen, warning about the excess of pressure. When it occurs repeatedly it is recommended calling the nearest **Technical Assistance Service** and draining the boiler water until the pressure is between 1 and 1.5 bar.

18.6 Connecting the LAGO FB OT+ remote control

The boiler has the terminal strip **J5** for connecting the **LAGO FB OT+** remote control (see "Connection Diagram") that allows to regulate boiler's heating circuit according to the room temperature, besides adjusting the DHW temperature (as long as the DHW temperature sensor is connected in the boiler).

Installing a **LAGO FB OT+** remote control enables the heating and DHW services to adapt to the scheduled times of use of the installation. It also optimises the installation's functioning, adapting the heating temperature set point to the room temperature, improving the comfort.

18.7 Room thermostat connection

The boiler has a terminal strip **J6** for connecting a room thermostat or a room chrono-thermostat (**TA₁**, see "*Connection Diagram*") that allows to switch on and off the heating circuit demand according to the actual room temperature. The terminal strip **J6** is supplied with a electrical bridge connecting its terminals, so it will be necessary to remove it before connecting the room thermostat.

Installing a room thermostat will optimise the installation's performance, adapting the heating to building requirements and obtaining enhanced comfort. Also, if the thermostat allows the hours of functioning to be programmed (chronothermostat), it can adapt the heating system to the hours of use of the installation.

18.8 Connecting the room sensor

The boiler has a **J6** terminal strip, prepared for the connection of a room sensor (**TA₁**, see "*Connection Diagrams*"), which will make it possible to manage the heating service of the direct boiler circuit (**BC**) depending on the inside temperature of the house. For correct connection and configuration, carefully read the instructions in the "*Installing a room sensor or thermostat*" section..

The installation of a room sensor will optimise the operation of the heating installation, adapting the operation of the boiler to the needs of the home and improving comfort levels. The electronic control will modulate the boiler temperature setpoints according to the ambient conditions read by the sensor, optimising fuel savings and increasing the efficiency of the installation.

In turn, when there is a room sensor connected, the boiler's digital display will allow the programming of the operating hours of the corresponding circuit (see "*Configuration Menu*"), so the heating system can be adapted to the hours of use of the installation.

18.9 Connecting the Confort iC wireless remote control

The **BioClass iC 66** boiler has a **J4** terminal strip on the **iConnect** board, prepared for the connection of **Confort iC** wireless remote controls (**+A/-B**, see "*Installation with Confort iC wireless devices and/or Sonda iC*"), which can be used to improve comfort in the home by managing the heating zone.

The installation of an **Confort iC** remote control will optimise the performance of the heating installation, adapting the boiler's operation to the needs of the home and obtaining improved comfort levels. The electronic control modulates the boiler temperature set-points depending on the ambient conditions read by the remote control, thereby optimising fuel savings and increasing the efficiency of the system.

Also, using the digital display of the wireless remote control, the operating hours of the respective circuit can be programmed, so that the heating system can be adapted to the times of use of the system.

18.10 Connecting the Sonda iC wireless temperature sensor

The **BioClass iC 66** boiler has a **J4** terminal strip on the **iConnect** board, prepared for the connection of **Sonda iC** wireless room sensors (**+A/-B**, see *"Installation with Confort iC wireless devices and/or Sonda iC"*), which can be used to improve comfort in the home by managing the heating zone and an outdoor sensor.

The installation of a wireless room sensor will optimise the installation's heating performance, adapting the boiler to the requirements of your home and providing enhanced comfort features. The electronic control modulates the boiler temperature set-points depending on the ambient conditions read by the sensor, thereby optimising fuel savings and increasing the efficiency of the system.

If a room sensor is connected, the digital display of the boiler allows the operating hours of the relevant circuit to be programmed (see *"Settings Menu"*), which means that the heating system can be adapted to the times of use of the installation.

The **Sonda iC** can be installed as an outdoor sensor and can thus be activated to operate in accordance with Outside Temperature Compensation (**OTC**), using parameter **P.10** in the *"Technical Menu"* (see *"Operation according to outside temperature compensation OTC"*).

19 MULTI-FUNCTIONAL RELAY (P.20)

BioClass iC 66 is equipped with an auxiliary relay output that may be used to select a series of additional functions that increase the boiler performance, features and comfort of the installation.

Several operating modes may be set at **P.20** parameter of the "Technical Menu" to define the "multi-functional relay" function. The default value of this parameter is 0 (disabled). The following sections describe the functions that could be set.

19.1 Boiler alarms external signal (P.20 = 1)

When this function is selected (**P.20 = 1**) if the boiler shows an error or an operating alarm code the multi-functional relay output will be activated, supplying voltage (230 V~) between terminals no. **4**: "**NO**" and **N** of the terminal strip **J3**, where any external alarm signalling device may be connected to warn of boiler malfunctioning.

When the boiler lockage is reset, the multi-functional relay output will supply voltage again (230 V~) between terminals no. **3**: "**NC**" and **N** of the terminal strip **J3**.

19.2 DHW re-circulation function (P.20 = 2)

This function is available only if a DHW tank is connected on the boiler. The DHW recirculation function (**P.20 = 2**) will keep the whole DHW installation hot during the operating periods programmed in the boiler, so when any hot water tap is turned on the hot water will be supplied instantly, increasing the comfort of the DHW installation.

A DHW re-circulation pump will be required to install in the installation. This pump has to be connected in the multi-functional relay output, between the terminals No **4 (NO)** and **N** of the terminal strip **J3** (see "Connections diagram"). The hydraulic installation and electrical connection of re-circulation system must be made by qualified personnel.

During the operating periods programmed in the boiler, the multi-functional relay output will be activated, supplying voltage (230 V~) between terminals No **4 ("NO")** and **N** of the terminal strip **J3**, where the recirculation pump must be connected. During the switched off periods programmed the multi-functional relay output will be deactivated, supplying voltage (230 V~) between terminals No **3 ("NC")** and **N** of the terminal strip **J3** and the re-circulation pump will be stop.

19.3 Automatic water filling function (P.20 = 3)

BioClass iC 66 boiler may be connected to an automatic water filling system which can be activated or deactivated by **P.20** parameter.

It will be required to install a motorised valve to filling the water between the distribution water and the primary circuit of the boiler. This valve has to be connected in the multi-functional relay output between the terminals No **4 (NO)** and **N** of the terminal strip **J3** (see "Connections diagram"). The hydraulic installation and electrical connection of the automatic water filling system must be made by qualified personnel.

If the function is enabled (**P.20 = 3**) the electronic controller of the boiler will active the multi-functional relay output supplying voltage (230 V~) between the terminals No **4 (NO)** and **N** of the terminal strip **J3** (see "Connections diagram") that activates the connected filling valve to refill the primary circuit up to the pressure set at **P.21** parameter. If the boiler pressure drops below the minimum pressure set at **P.19** parameter the boiler will automatically fill up again until the filling pressure value is reached.

20 SAFETY LOCK-OUTS


The boiler's electronic controller may activate the following safety lock-outs to stop the boiler functioning in order to prevent serious damages. When any of these lock-outs occur, the boiler will switch off and an alarm code will be displayed on boiler's screen.

IMPORTANT: If any of the safety lock-outs described below should occur repeatedly, switch off the boiler and put in contact with the nearest official Technical Assistance Service.

20.1 Temperature safety lock

When this lock-out occurs "**E-11**" alarm code (temperature alarm) will appear on the screen. The burner will switch off and stop heating the installation.


This lock-out occurs when the temperature of boiler's water exceeds 110 °C. To unlock it, wait until the temperature drops below 100 °C and press the button of the safety thermostat, located underside of the electrical case of the boiler, after having removed the button cover:

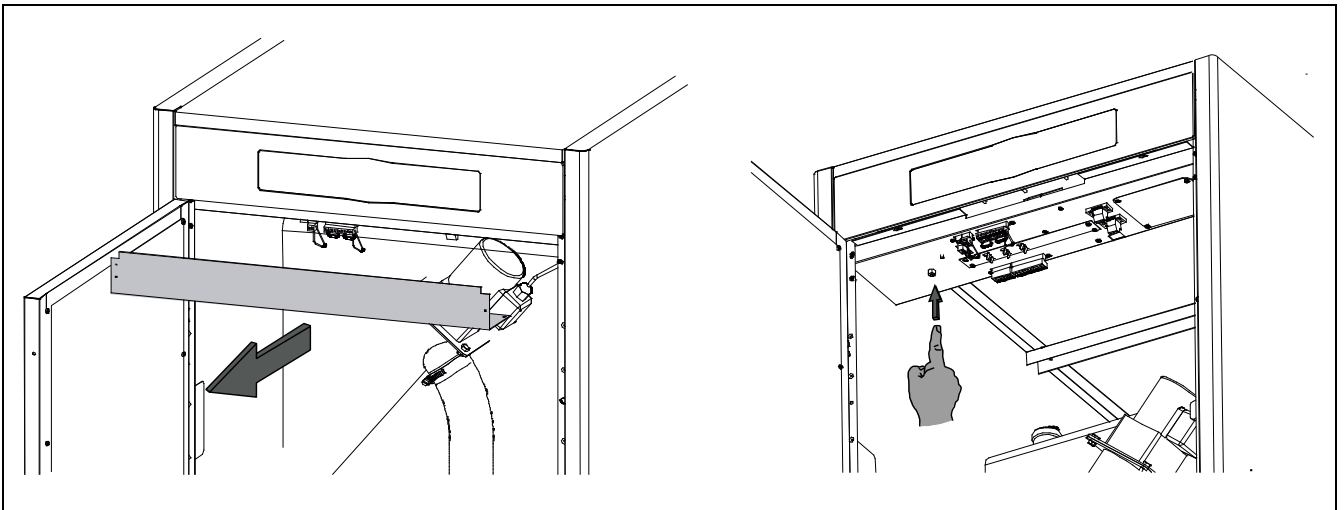

20.2 Fuel entrance tube overheat safety cut-out

When this lock-out occurs "**E-05**" alarm code will appear on the screen. The burner will switch off and stop heating the installation.

This lock-out occurs when the temperature of the fuel entrance tube exceeds 80 °C. To unlock it, wait until the temperature drops and press the button on the safety thermostat using a screwdriver or a pen as is shown in the picture below:

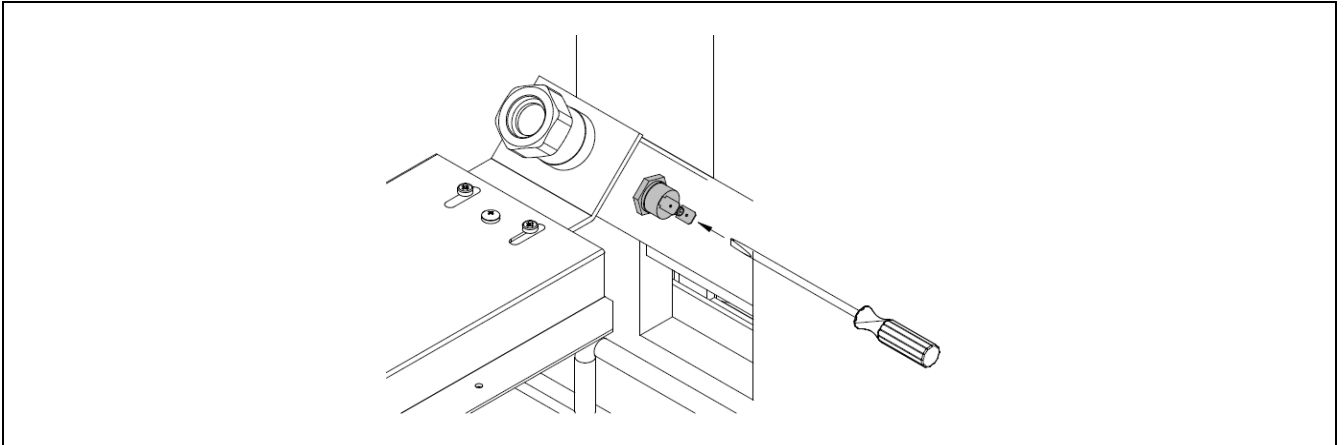


20.3 Low pressure lock-out

When this lock-out occurs, "**E19**" alarm code will appear on the digital display. The burner and the boiler's circulation pumps will switch off, cutting off the heating and water flow to the installation.

The blockage occurs when the boiler pressure drops below 0.5 bar, preventing it from working when the installation is drained of water, either due to a leak or due to maintenance operations.. To unlock this alarm, fill the installation again (*see "Filling the installation"*) up to 1 or 1.5 bar, displayed on "*Water pressure*" parameter of "*User menu*".

21 SHUTTING DOWN THE BOILER

Press  during 1 second to shut down the boiler. When the boiler is shut down the heating and DHW services are switched off but anti-frost and pumps anti-lock functions continue activated whereas the boiler is kept connected to the power supply and fuel installation.

Unplug the boiler from the power supply and cut out the fuel supply to shut down the boiler completely.

22 EMPTYING THE BOILER

Use the drain cock located on the bottom of the backside of the boiler to empty it of water. Before opening it, connect a flexible pipe leaded to a sewer. After finishing the procedure, close the cock and remove de flexible pipe.

23 BOILER MAINTENANCE

Various maintenance operations should be carried out at different intervals of time to keep the boiler in perfect working order. The yearly maintenance operations should be carried out by personnel authorised by **DOMUSA TEKNIK**.

23.1 Frequency of maintenance of the boiler and chimney

The most important aspects to be checked are as follows:

N	Operation	Frequency
1	Clean the ash in the external ash box	As required (approx. After using 6 Tn of pellets)
2	Cleaning the burner combustion chamber	Approx. after using 6 Tn of pellets. The frequency could be higher according to current legislation in each country
3	Cleaning the boiler smoke box and the fan	Quarterly or approx. after using 12 Tn of pellets
4	Cleaning the protective grid (filter) of the CVS suction system	12 Tn
		If the pellet has a high concentration of fines (sawdust), the cleaning frequency should be increased.
5	Cleaning the pellet suction system motor (CVS suction turbine)	12 Tn
6	Check the correct operation of the CVS	12 Tn
7	Check the condition of the CVS suction system flexible hoses	12 Tn
8	Surface cleaning of the ash drawer with the burner removed from the front frame	6 Tn
9	Check the boiler visually	weekly
10	Check the feed auger is correctly calibrated	As required
11	Checking the status of pellet storage (silo and reserve tank)	As required (assess according to amount of accumulated sawdust)
12	General cleaning of the burner	yearly
13	General cleaning of the vent cleaning system	yearly
14	Check and clean the flue. The flue must be free of any obstacles and have no leaks. The smoke register with condensate collection T must be cleaned	yearly
15	Check the expansion vessel. It must be full, according to its reference plate	yearly
16	Check the tightness (gasket of the ash drawer, smoke cover, burner and fan)	yearly

N	Operation	Frequency
17	Checking that the hydraulic circuits of the installation are completely sealed	yearly
18	Check the water pressure in the hydraulic installation. In cool mode, it should be between 1-1,5 bar	yearly
19	Checking the suction turbine motor brushes	yearly
20	Cleaning the ash compressor: removing and cleaning accumulated ash	yearly
21	Perform a test ignition to check the condition of the resistor	yearly
22	Check the status of the internal feeder	yearly
23	Clean the feed ramp with the internal feeder removed	yearly
24	Check the correct operation of the cleaning mechanisms (cleaning of smoke passages and ash drawer)	yearly




NOTE: Depending on the fuel type and weather conditions, it may be necessary to clean the combustion chamber of the burner at a bigger frequency.

23.2 Burner cleaning procedure


The **BioClass iC 66** boiler has a burner (combustion chamber) where the combustion of the wood pellets takes place.

This burner must be cleaned regularly to avoid premature fouling due to the accumulation of slag (solid combustion residues) adhering to the burner walls.

Warning:

- To be carried out only when the boiler is off and cold.
- Thermal gloves .
- Mask .
- Fire hazard .

The following procedure is recommended for a correct cleaning of the burner:

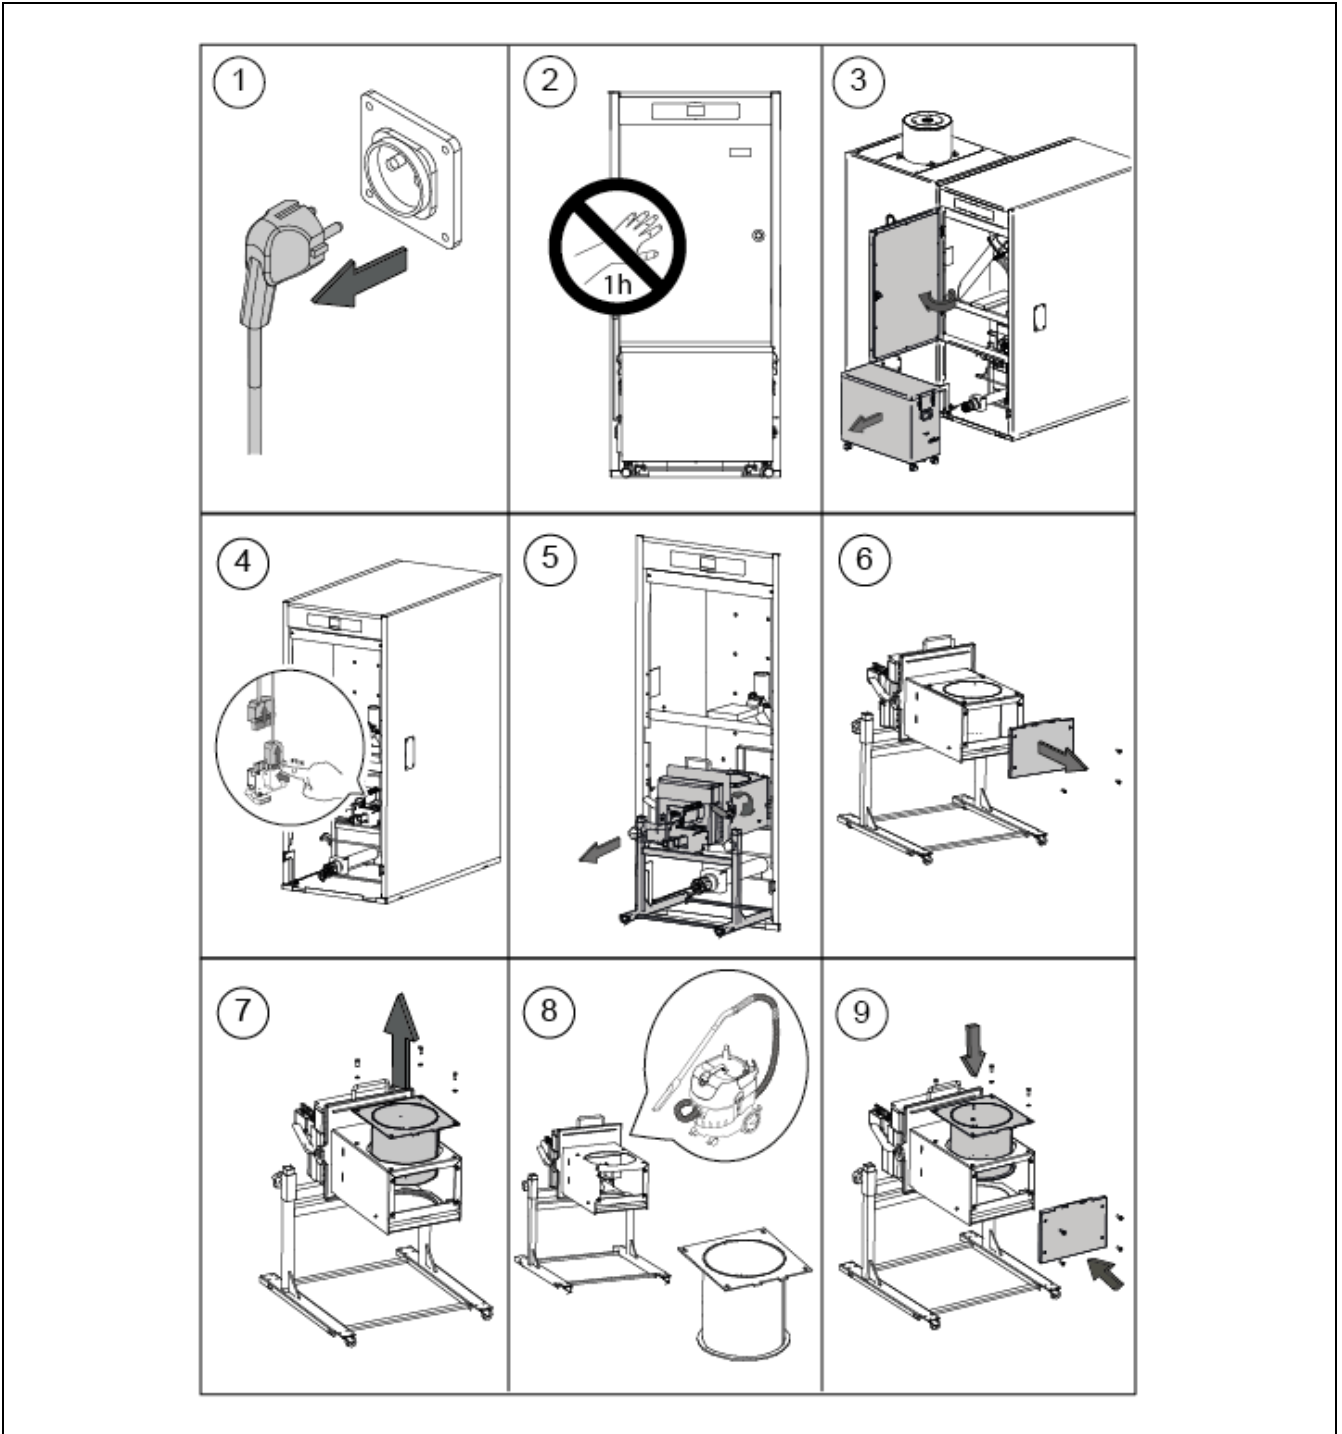

Depending on the quantity of wood pellets burned or its quality, the user must clean the walls of the burner using a suitable brush, in order to avoid excessive ash formation.


A regular check of the amount of fuel should be carried out in the hopper, as a lack of fuel can generate an error code **E06**.

Dust can also accumulate at the bottom of the hopper, depending on the quality and humidity of the wood pellets.

If there is a large quantity of wood pellet dust in the hopper, **DOMUSA TEKNIK**-s authorised technical assistance service must be contacted for maintenance.

23.3 Heat exchanger cleaning procedure

The following procedure is recommended for correctly cleaning the heat exchanger:

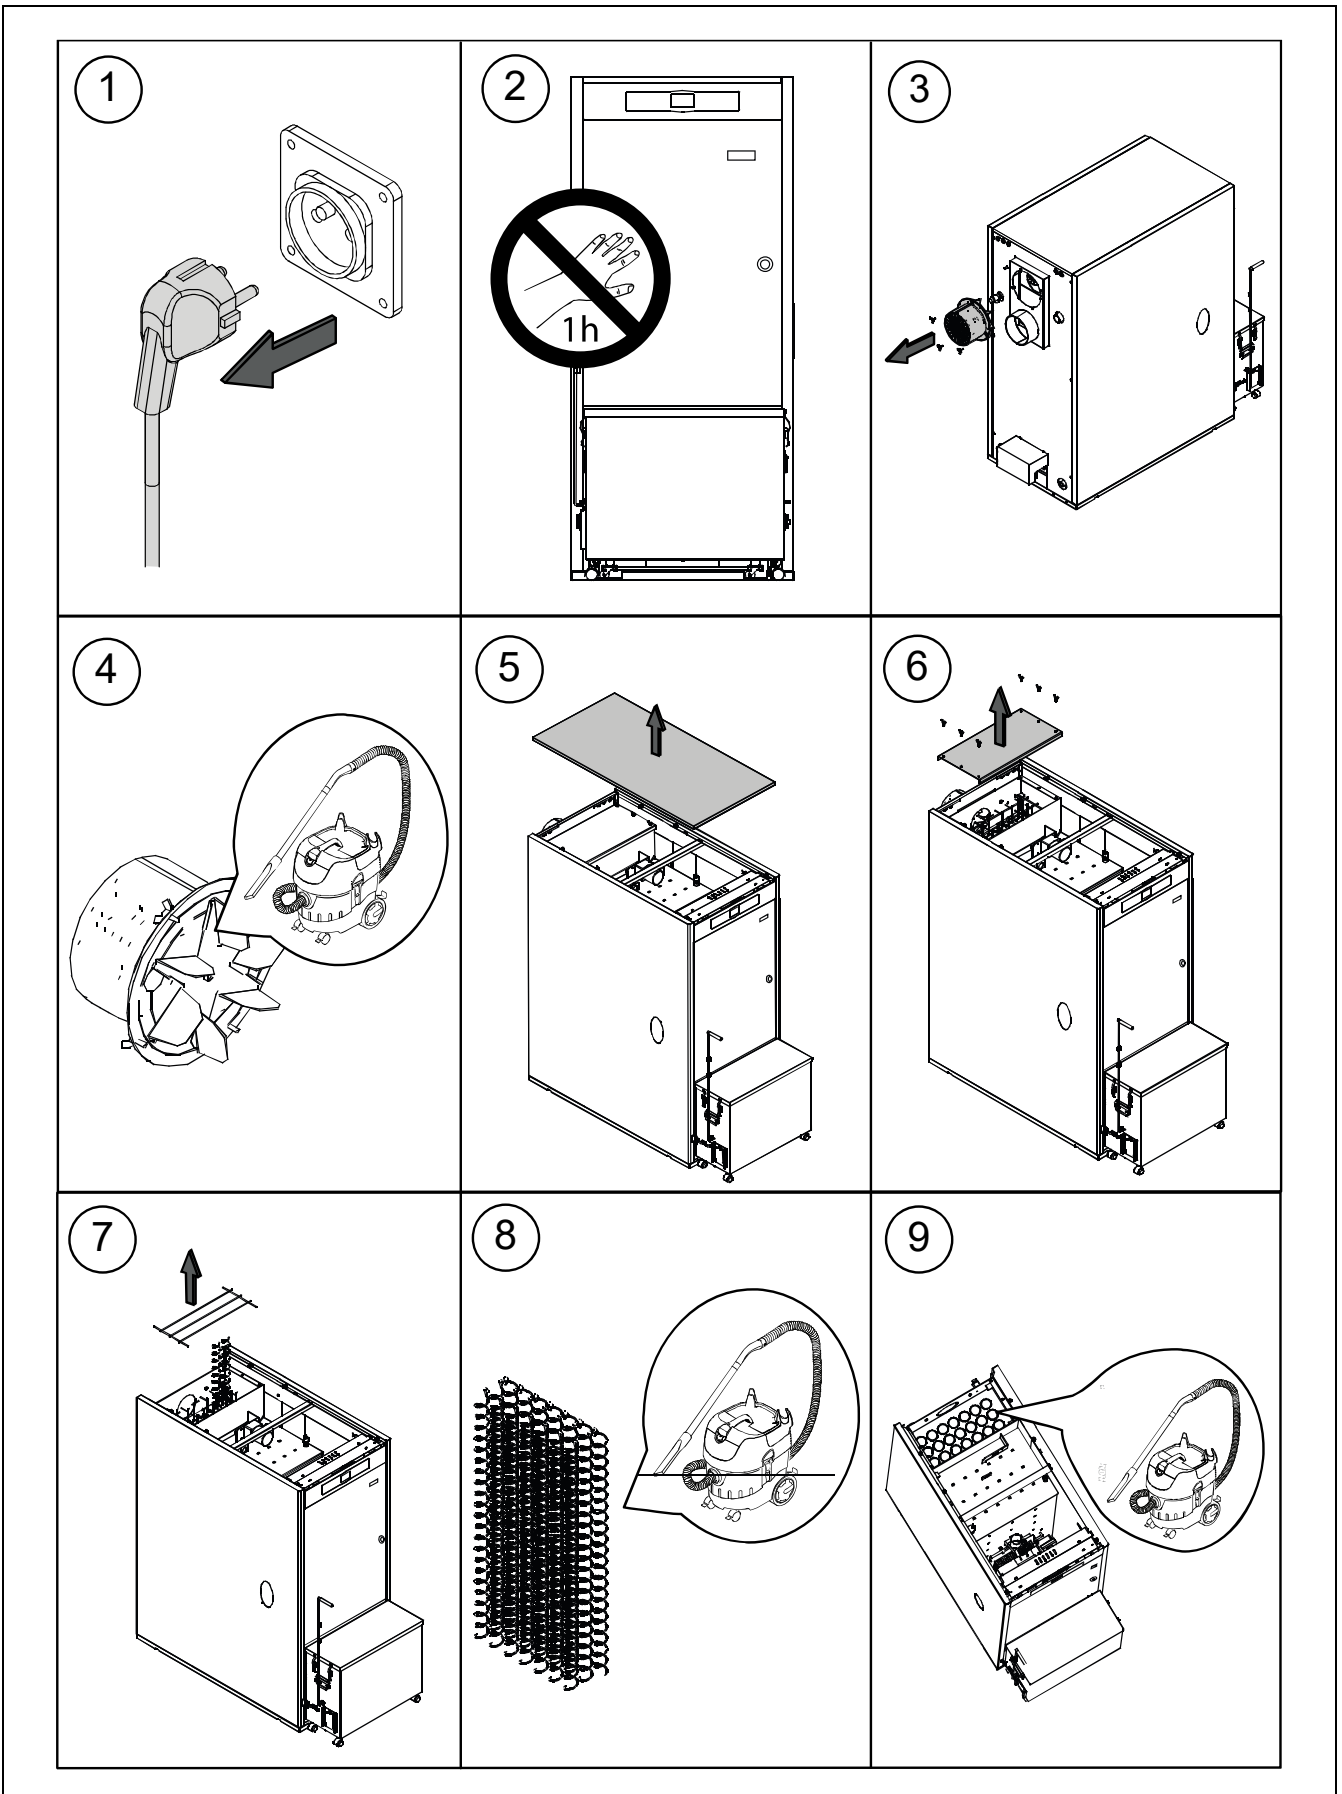

23.4 Draining the condensate water

The draining device to take out the condensate water from the chimney should not be altered in any way and it must be kept free of obstructions.

23.5 Boiler water characteristics

In areas with water hardness of over 25-30 °fH, treated water must be used in the heating installation to avoid any scale deposits on the boiler. It should be noted that even a few millimetres of scale will greatly reduce the boiler's heat conductivity, causing a major drop in performance.

Treated water must be used in the heating circuit in the following cases:

- Very large circuits (containing a large amount of water).
- Frequent filling of the installation.

If it is necessary to drain partially or totally the water of the installation very often, we recommend filling it with treated water.

IMPORTANT NOTES

Improper handling of the boiler can lead to serious or even fatal failures for the appliance.

Therefore, it is strictly forbidden for the user of the boiler to enter the TECHNICAL parameters, which are values that can directly affect the correct operation and destruction of the appliance. Only an authorized **DOMUSA TEKNIK** technical service can access it.

The user must ensure that the water pressure in the installation is correct, that is, a pressure of 1.5 bar. If the pressure is less than 0.5 bar, an **E19** error code will appear on the display and an **E28** code will appear if the pressure is greater than 2.5 bar.


The standard vents where the boiler is located (boiler room) must in no case be obstructed or partially obstructed.

The maintenance of the boiler will be carried out in accordance with what is specified in this brochure.

The appliance should be visually inspected regularly for any leaks or malfunctions.

It is **MANDATORY** that maintenance operations be carried out by an approved professional from the **DOMUSA TEKNIK** network, at least once a year on the boiler and twice a year on the flue, according to the standards in force.

24 DIAGRAMS AND MEASUREMENTS

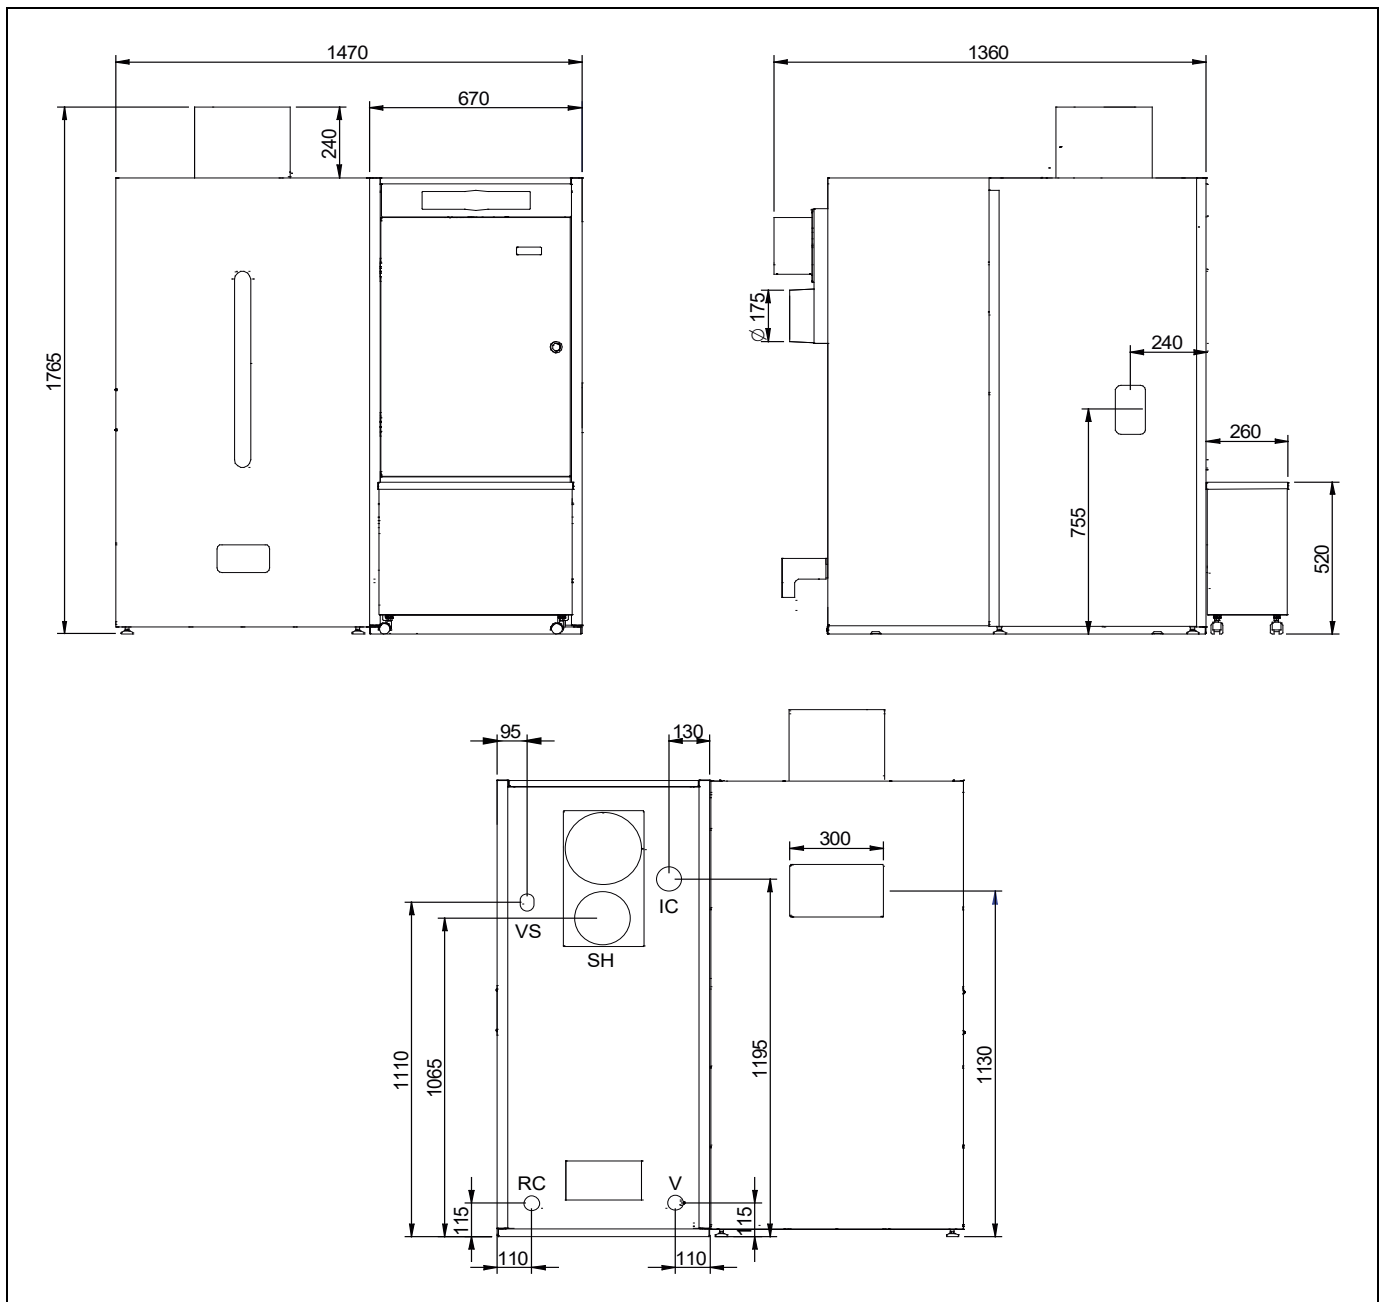


- IC:** Heating flow 1 ¼".
- RC:** Heating return 1 ¼".
- SH:** Fume outlet.
- V:** Drainage cock.
- VS:** Pressure relief valve, 1/2" F.

NOTE: The storage tank has a storage capacity of 560 litres. However, due to the installation of the automatic pellet suction system inside the tank, the capacity of the pellet storage tank is reduced to an estimated actual volume of 260 litres.


25 CONNECTIONS DIAGRAM

25.1 Boiler

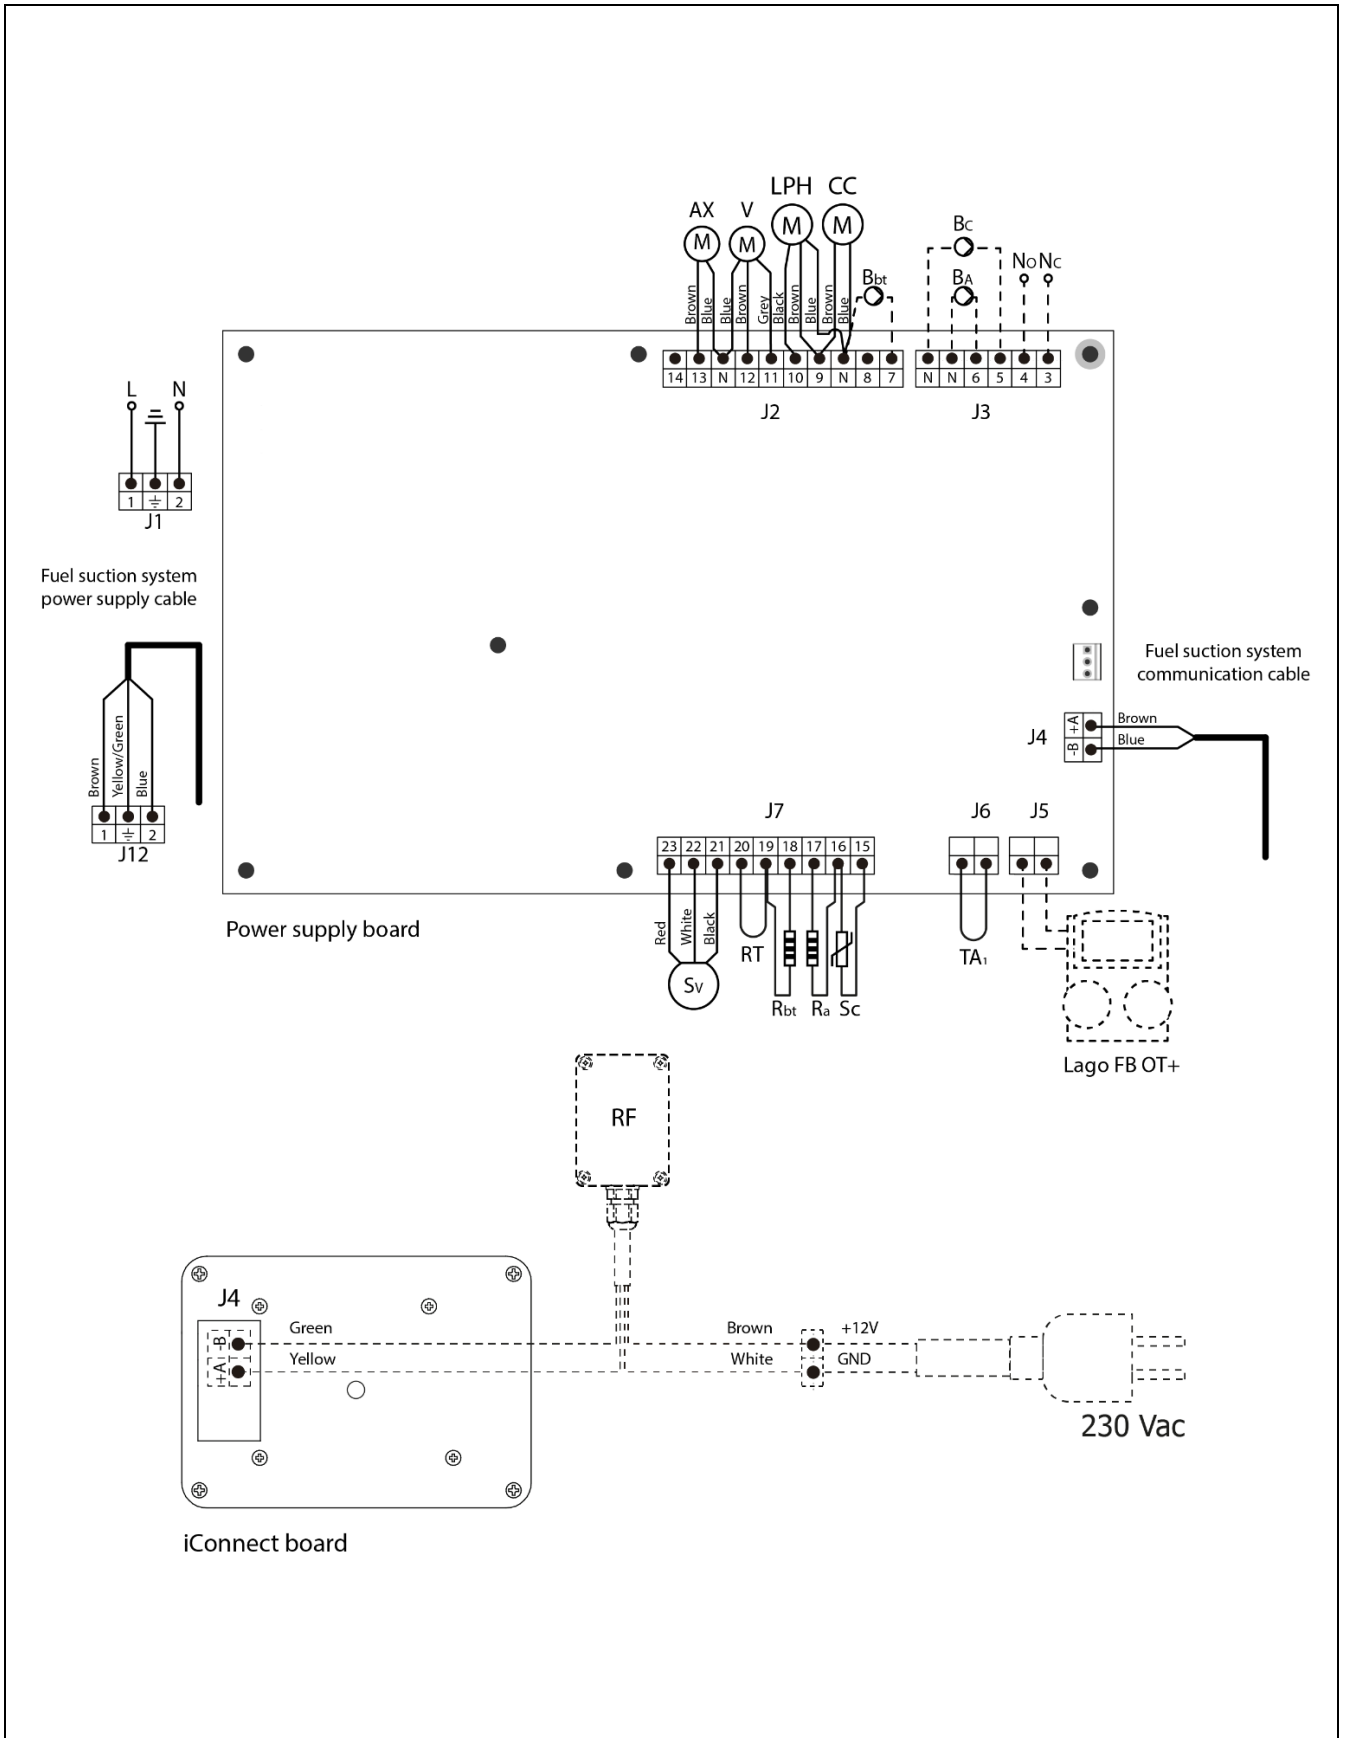

- L:** Phase.
- N:** Neutral.
- AX:** Feed auger.
- V:** Fan.
- LPH:** Heat exchanger cleaning device.
- CC:** Engine of the compressor drawer.
- Bbt:** BT buffer tank charging pump.
- BC:** Boiler pump.
- BA:** DHW tank pump or DHW valve.
- NO:** Multi-functional relay.
- NC:** Multi function relay.
- TA₁:** Room thermostat.
- Sc:** Boiler temperature sensor.
- RF:** Radio module **Receptor RF iC.**
- Ra/Sa:** DHW tank option resistance.
- Rbt/Sbt:** Resistance for BT tank Option.
- RT:** Remote relay.
- Sv:** Fan speed sensor.
- J1:** Power supply connector.
- J2:** Component connector.
- J3:** Component connector.
- J4:** Communication connector power supply board.
- J5:** **LAGO FB OT+** remote control connector.
- J6:** Room thermostat connector.
- J7:** Sensors connector.
- J12:** Fuel suction system power supply connector.
- J4:** **iConnect card** communication connector.

25.3 Electrical diagram

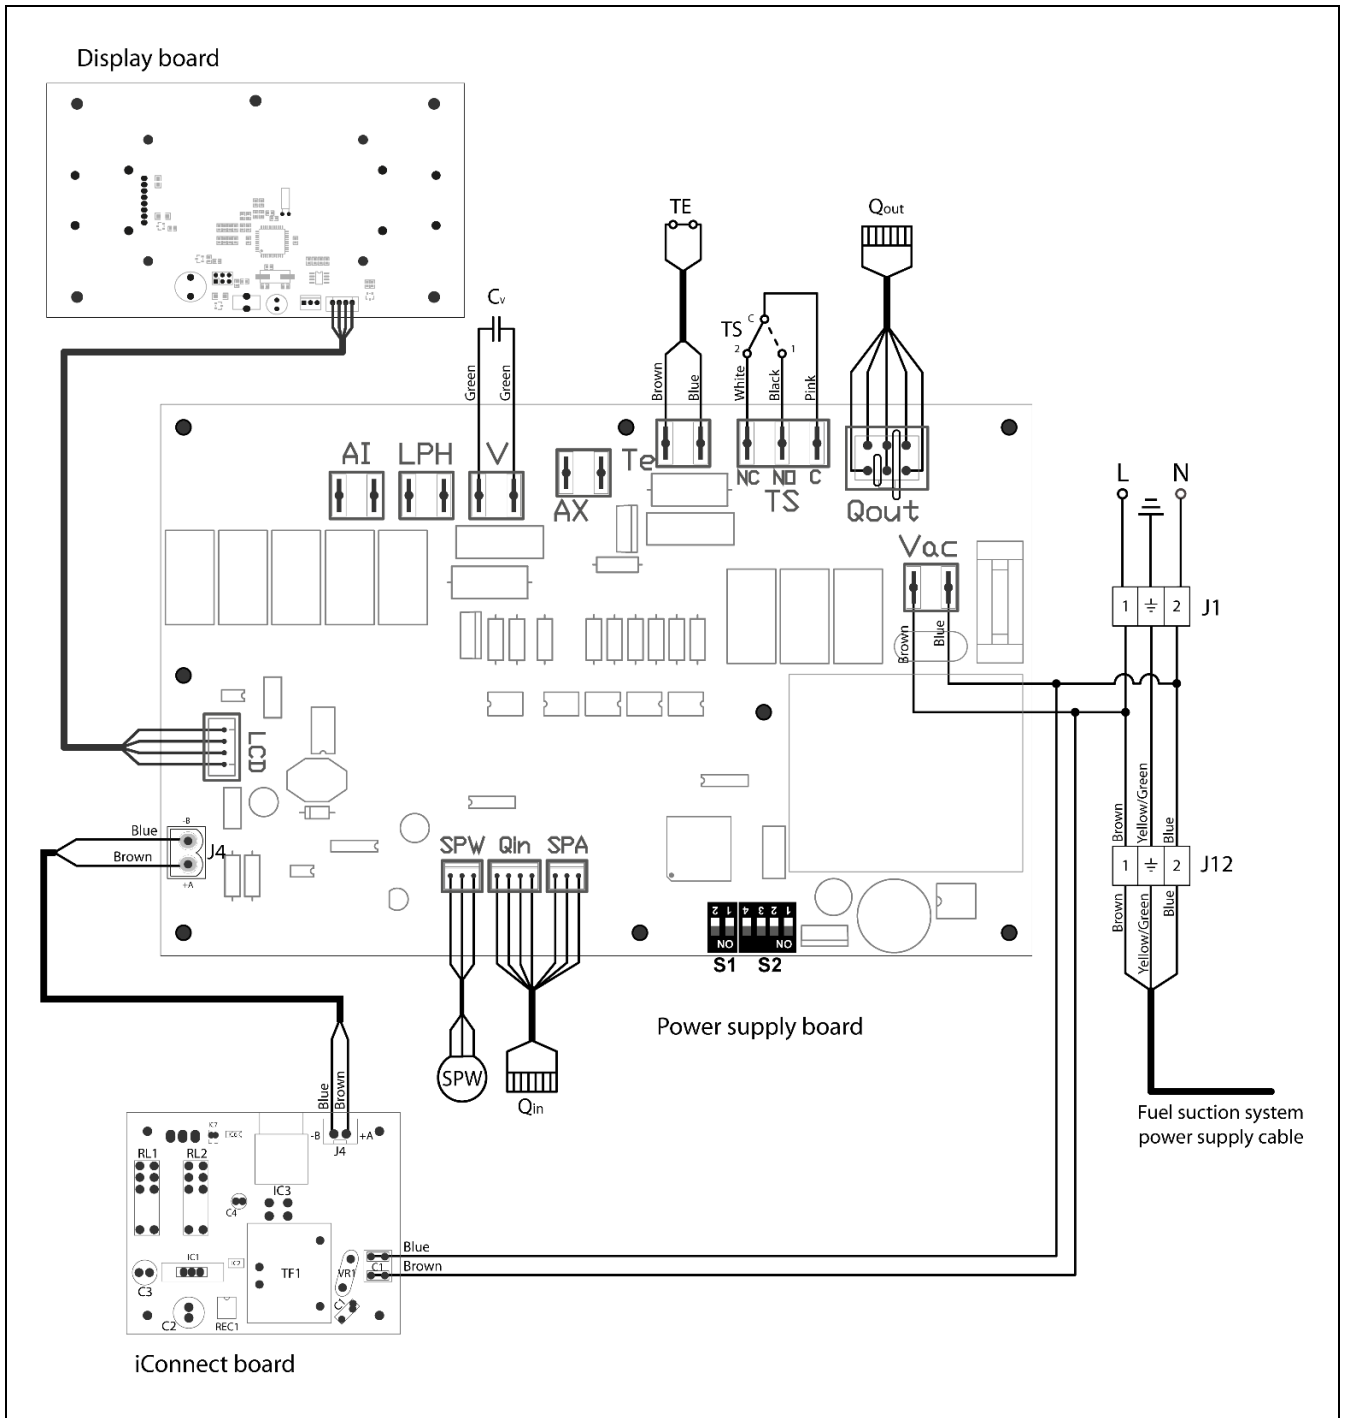

- | | |
|---------------------------------------------|---------------------------------------------------------|
| TS: Safety thermostat. | Qin: Burner inputs connector. |
| TE: Fuel entrance safety thermostat. | LCD: Display communication connector. |
| Cv: Fan capacitor. | J4: Communication connector. |
| SPW: Water pressure sensor. | S1, S2: Boiler model DIP-switch. |
| SPA: Air pressure sensor. | J1: Power supply connector. |
| Qout: Burner outputs connector. | J12: Fuel suction system power supply connector. |

26 TECHNICAL DATA

MODEL		BioClass iC 66
Rated heat output (P_n)	kW	66,6
Efficiency at maximum heat output	% (NCV)	94,9
Minimum heat output (P_p)	kW	20
Efficiency at minimum heat output	% (NCV)	95,2
CO at maximum heat output (10% O ₂)	mg/m ³	88
OGC (organic gaseous substances) at maximum heat output (10% O ₂)	mg/m ³	2
Particles content at maximum heat output (10% O ₂)	mg/m ³	12
CO at minimum heat output (10% O ₂)	mg/m ³	34
OGC (organic gaseous substances) at minimum heat output (10% O ₂)	mg/m ³	1
Boiler class (according to EN 303-5)	-	Clase 5
Maximum operating pressure	bar	3
Maximum operating temperature	°C	80
Maximum safety temperature	°C	110
Water volume	litros	154
Minimum flue draught	mbar	0,10
Maximum flue draught	mbar	0,20
Electrical supply	-	230 V~, 50 Hz, 2,50 A
Boiler chimney diameter	mm	175
Maximum water content of the fuel	%	7
Minimum return temperature	°C	50 °C
Water pressure drop (dT = 20 K)	mbar	22
Weight (net)	Kg	486

MODEL		BioClass iC 66	
Rated heat output (P_n)		kW	66,6
Efficiency at maximum heat output (η_n)		% (GCV)	86,9
Minimum heat output (P_p)		kW	20,0
Efficiency at minimum heat output (η_p)		% (GCV)	87,1
Feeding mode		-	Automatic *
Condensing boiler		-	No
Combined boiler		-	No
Cogeneration boiler		-	No
Combustible		-	Wood pellet Ø6 - 8 mm. Maximum length 35 mm.
Seasonal yield (η_s)		%	84
Seasonal heating emissions	Part.	mg/m ³	19
	COG	mg/m ³	1
	CO	mg/m ³	42
	NO _x	mg/m ³	150
Electricity consumption at nominal power ($e_{l_{max}}$)		kW	0,107
Electricity consumption at 30% nominal power ($e_{l_{min}}$)		kW	0,035
Electricity consumption in standby mode (P_{SB})		kW	0,004
Energy Efficiency Index - EEI		-	123

* It is recommended to use the boiler with a hot water storage tank of a minimum volume of $20 \times P_n$ with P_n indicated in kW.

27 ALARM CODES

BioClass iC 66 boiler is equipped with an electronic controller that performs continuous self-testing to detect any boiler malfunctioning. When it detects a functioning error, this is indicated by an alarm code on the display. The table below shows the list of the alarm codes:

Code	Alarm	Description
E-01	Boiler temperature sensor open circuit, S_c .	The boiler sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-02	Boiler temperature sensor short-circuited, S_c .	
E-03	DHW temperature sensor open circuit, S_a .	The DHW sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-04	DHW temperature sensor short-circuited, S_a .	
E-05	Overheating in fuel entrance tube, Te .	The security thermostat of fuel entrance tube has exceeded the safety temperature of 80 °C. The boiler will lock out. To unlock the boiler wait the temperature drops, press the button on the safety thermostat and restore by pressing RESET button. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-06	Ignition failure.	Check the fuel content in the hopper or calibrate the feed auger. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-07	Burner ash cleaning system start step error.	These alarms occur when a bad running of the burner ash cleaning system is detected. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-08	Burner ash cleaning system final step error.	
E-09	Burner ash cleaning system switch error, FC_p .	
E-10	Boiler water overheating.	The water in the boiler has exceeded the safety temperature of 100 °C. The boiler will lock out. The boiler will be unlocked automatically when the boiler temperature drops below 90 °C. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-11	Safety thermostat, Ts .	The water in the boiler has exceeded the safety temperature of 110 °C. The boiler will cut out.. To unlock it, wait until the boiler drops below 100 °C and press the button on the safety thermostat. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-12	Burner switch, FC_q .	Check if the burner is correctly fitted to the boiler. If this alarm occurs repeatedly contact the nearest official technical assistance service.

Code	Alarm	Description
E-13	Insufficient air depression.	Check the correct running and connection of the air pressure sensor and that the burner and ashtray are correctly fitted to the boiler. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-14	Air depression fall down.	
E-15	Insufficient air depression during ignition pre-purge step.	
E-18	Water pressure sensor fault.	The water pressure sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-19	Low water pressure.	The pressure of water in the installation drops below the minimum pressure set at P.19 parameter of the " <i>Technical Menu</i> " (by default 0,5 bar). The boiler will lock out. To unlock it, fill the installation again up to 1 - 1.5 bar. This alarm occurs when the water is drained from the installation, due to either leakage or maintenance operations. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-20	Safety valve fault.	When the installation pressure exceeds 3.5 bar, this alarm is displayed on the screen. The safety valve is damage or it doesn't work properly. The boiler will lock out. The boiler will be unlocked, when the pressure drops below 2.5 bar again. Drain the installation up to 1 - 1.5 bar. Contact your nearest official technical assistance service to have it replaced.
E-21	Air pressure sensor fault.	The air pressure sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-22	Excessive air depression in the combustion chamber.	The air depression measured in the combustion chamber exceeds the limits of the air pressure sensor. The burner will be locked until the depression is correct again. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-23	Excessive air overpressure in the combustion chamber.	The air overpressure measured in the combustion chamber exceeds the limits of the air pressure sensor. The burner will be locked until the depression is correct again. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-25	Wrong calibration data.	The calibration data is wrong or it is set at OFF value. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-26	Communication error with the Fuel suction system .	Communication failure between boiler and Fuel suction system . The fuel suction system will lock out. When the communication is restored the Fuel suction system will be unlocked. If this alarm occurs repeatedly contact the nearest official technical assistance service.

Code	Alarm	Description
E-27	Fuel suction system blockage.	If the level sensor continues to detect no fuel after 8 consecutive cycles, the Fuel suction system will lock out. To unlock it press RESET button. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-28	Overpressure of water.	When the boiler water pressure exceeds 2.5 bar, this alarm is displayed on the screen to warn of an excess of pressure in the installation. To restore the normal functioning of the boiler it is recommended to drain the installation again up to 1 - 1.5 bar If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-29	Fuel level sensor error.	Fuel level sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-30	Underfloor temperature sensor open circuit, Sr1 .	Underfloor temperature sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-31	Underfloor temperature sensor short-circuited, Sr1 .	
E-32	Underfloor temperature sensor open circuit, Sr2 .	Underfloor temperature sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-33	Underfloor temperature sensor short-circuited, Sr2 .	
E-34	Outdoor temperature sensor open circuit, Sext .	Outdoor temperature sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-35	Outdoor temperature sensor short-circuited, Sext .	
E-36	DIP-switch wrongly changed.	DIP-switch selector of the boiler is changed when the boiler is connected to the main supply. The boiler will be locked out until unplug and plug the boiler again.
E-37	Communication error with BIO Hydraulic Kit (not valid for BIOCLASS iC 66).	Communication failure between boiler and the BIO Hydraulic Kit . If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-38	Lasting insufficient air depression during ignition pre-purge step.	Check the air pressure sensor and that the burner and ashtray are correctly fitted to the boiler. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-39	Insufficient fan speed.	Fan malfunction. If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-40	Fan speed fall down.	
E-41	Lasting fan speed fall down.	

Code	Alarm	Description
E-42	Communication error with BIO Hydraulic Kit (not valid for BIOCLASS iC 66).	Communication failure between boiler and the BIO Hydraulic Kit . If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-43	Ashtray full.	Warning that the ashtray is full. The boiler will continue operate normally. To restore warning, the ashtray must be emptied and it is necessary to set the "Emptying ashes" parameter to 0 of the "User menu" (See "Ashtray status").
E-44	Boiler Maintenance.	Notice for maintenance of the boiler. Contact your nearest official technical assistance service to perform periodic maintenance of the boiler.
E-45	BT tank temperature sensor open circuit, Sbt .	BT tank temperature sensor is damaged or disconnected. Contact your nearest official technical assistance service to have it replaced.
E-46	BT tank temperature sensor short-circuited, Sbt .	
E-47	Communication error with pellets level sensing unit.	Communication failure between boiler and the pellets sensing system board (PCB). If this alarm occurs repeatedly contact the nearest official technical assistance service.
E-48	Low fuel level in the hopper.	Warning that the hopper is going to run out of pellets (fuel reserve). The boiler will continue operate normally. Refill the hopper with pellets up to the sensor to restore the warning alarm.
E-49	Hopper is run out of fuel.	The hopper is completely empty of pellets. The boiler stops running to avoid emptying the auger. To restore boiler functioning refill the hopper with pellets up to the sensor and press RESET button.
E-50	Fuel Suction System and pellets sensing units connected together.	Fuel Suction System and pellets sensing units are connected together to boiler's main board. Contact your nearest official technical assistance service to disconnect one of the units.
E-57	Zone 1 TA₁ room temperature sensor open circuit.	The Zone 1 room temperature device is broken or disconnected. Please contact your nearest official Technical Assistance Service to have it replaced.
E-58	Zone 1 TA₁ room temperature sensor short-circuited.	
E-59	Zone 2 TaM₁ room temperature sensor open circuit. (not available for BIOCLASS iC 66)	The Zone 2 room temperature device is broken or disconnected. Please contact your nearest official Technical Assistance Service to have it replaced.
E-60	Zone 2 TaM₁ room temperature sensor short-circuited. (not available for BIOCLASS iC 66)	
E-61	Zone 3 TaM₂ room temperature sensor open circuit. (not available for BIOCLASS iC 66)	The Zone 3 room temperature device is broken or disconnected. Please contact your nearest official Technical Assistance Service to have it replaced.
E-62	Zone 3 TaM₂ room temperature sensor short-circuited. (not available for BIOCLASS iC 66)	

Code	Alarm	Description
E-63	Insufficient maximum power.	Combustion circuit in poor conditions: chimney clogged or dirty, insufficient draft, clogged or dirty smoke passage, clogged air inlet duct... If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-64	Communication error with iConnect module.	Communication error between the boiler and the iConnect electronic card. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-65	There is no serial number on the iConnect module.	The serial number of the boiler has not been registered on the iConnect electronic card. Please contact your nearest Official Technical Assistance Service to correctly register it.
E-66	There is no BIO Hydraulic Kit in Zone 2. (not available for BIOCLASS iC 66)	You are trying to pair a wireless room device in Zone 2 without there being a BIO Hydraulic Kit connected to that Heating Zone. Select the correct Heating Zone to which you would like to link the wireless device. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-67	There is no BIO Hydraulic Kit in Zone 3. (not available for BIOCLASS iC 66)	You are trying to pair a wireless room device in Zone 3 without there being a BIO Hydraulic Kit connected to that Heating Zone. Select the correct Heating Zone to which you would like to link the wireless device. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-68	Communication error with the Receptor RF iC radio module.	Communication error between the boiler and the Receptor RF iC radio module. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-69	The Zone 1 wireless device has a low battery level.	The wireless device linked to Heating Zone 1 has a low battery level. Replace the batteries with new ones. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-70	The Zone 2 wireless device has a low battery level. (not available for BIOCLASS iC 66)	The wireless device linked to Heating Zone 2 has a low battery level. Replace the batteries with new ones. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-71	The Zone 3 wireless device has a low battery level. (not available for BIOCLASS iC 66)	The wireless device linked to Heating Zone 3 has a low battery level. Replace the batteries with new ones. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E 72	The wireless outdoor sensor has a low battery level.	The wireless outdoor sensor has a low battery level. Replace the batteries with new ones. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.

Code	Alarm	Description
E-73	Insufficient RF signal in the Zone 1 wireless device.	The radio signal between the Zone 1 wireless device and the Receptor RF iC module is insufficient. Place the wireless room device in a location with a better signal. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-74	Insufficient RF signal in the Zone 2 wireless device. (not available for BIOCLASS iC 66)	The radio signal between the Zone 2 wireless device and the Receptor RF iC module is insufficient. Place the wireless room device in a location with a better signal. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-75	Insufficient RF signal in the Zone 3 wireless device. (not available for BIOCLASS iC 66)	The radio signal between the Zone 3 wireless device and the Receptor RF iC module is insufficient. Place the wireless room device in a location with a better signal. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.
E-76	Insufficient RF signal in the outside wireless sensor.	The radio signal between the outside wireless sensor and the Receptor RF iC module is insufficient. Place the wireless sensor in a location with better RF signal cover. If this alarm occurs repeatedly, please contact the nearest official Technical Assistance Service.



DOMUSA

T E K N I K

MAILING ADDRESS

Apartado 95
20730 AZPEITIA
Telf: (+34) 943 813 899

HEADQUARTERS & FACTORY

Bº San Esteban s/n
20737 ERREZIL (Gipuzkoa)
Fax: (+34) 943 815 666



CDOC002101 05/12/2025

www.domusateknik.com

DOMUSA TEKNIK reserves the right to make modifications of any kind to its product characteristics without prior notice.